

CX50, CX60, CX70, CX80, CX90 and CX100 Tractors

Service Manual Don 7-71427

Table of Contents

	Section	Pub. No.
1 GENERAL		
Loctite Product Chart		8-98902
How it Works	1	7-70810
Safety Rules, General Information and Torque Specifications	1001	8-86531
General Specifications and Torques	1002	7-71854
Special Tools	1005	7-71865
2 ENGINE		
How it Works	2	7-70820
Engine Removal and Installation	2001	7-73780
NOTE: For Service and Overhaul procedures refer to your Engine Service Manual 7-71721.		
3 FUEL SYSTEM		
Fuel Tank Removal and Servicing	3005	7-72610
NOTE: For Service and Overhaul procedures refer to your Engine Service Manual 7-71721.		
4 ELECTRICAL		
How it Works and Electrical Schematics	4001	7-70200
Instrument Cluster Programming and Troubleshooting	4002	7-71332
Battery Servicing and Testing	4004	7-73211
5 STEERING		
Steering Column and Hand Pump	5001	7-72042
2WD Steering Cylinder	5002	7-71291
2WD Front Axle	5003	7-72001
6 TRANSMISSION		
How it Works	6	7-70830
Separating the Tractor (be PDF Speed Transmission)	6001	7-71890
Engine Clutch and Master DOWNLOAD		7-71900
Powershift and Forward/Reverse DOWN Transmission Servicing		7-71921
Creep Transmission Servicing	6004	7-73490
8 Speed Transmission Servicing	6005	7-71270
Synchronizer Speed Transmission Servicing	6006	7-71930
Range Transmission Servicing (2WD)	6008	7-73740
Range Transmission Servicing (MFD)	6009	7-71791
Rear Axles	6010	7-71110
MFD Transfer Gearbox, Drive Shaft and Parking Brake	6011	7-71310
Differential	6012	7-71120
Differential - from Transmission Serial Number JKA412637 and Creep Transmissions	6012	7-73760
PTO	6013	7-71130

NOTE: Information contained in this Manual may cover features that are not available in all markets worldwide.

Shiftable PTO	6014	7-71150
Front PTO	6015	7-71170
MFD Axle - up to Axle Serial Number 37835	6021	7-39121
MFD Axle - from Axle Serial Number 37836	6021	7-71190
7 BRAKES		
How it Works	7	7-70840
Service Brakes and Master Cylinder	7001	7-73770
Parking Brake (2WD)	7002	7-70970
Hydraulic Trailer Brake.....	7004	7-73750
8 HYDRAULICS		
How it Works	8	7-70850
How to Read Symbols in a Hydraulic Schematic	8000	8-94372
Hydraulic Troubleshooting and Schematic.....	8001	7-71951
Filter Manifold and Main Hydraulic Pump	8002	7-71960
Steering Hydraulic Pump	8003	7-70980
Regulator Valve.....	8004	7-72030
Differential Lock Cylinder and Solenoid	8005	7-71660
Unloading Valve	8006	7-71670
Remote Valves.....	8007	7-71680
Hitch Valve and EDC Manifold.....	8009	7-71971
Hydraulic Housing and Lift Cylinder	8010	7-71370
Front Hitch.....	8011	7-71690
9 CHASSIS AND MOUNTED EQUIPMENT		
Pedal, Lever and Switch Adjustments.....	9001	7-72054
Air Conditioner System Component Servicing	9005	7-70740
Cab Removal and Tilting the Cab Roof.....	9006	7-71990
Cab Mountings	9008	7-73470
9 CONTROLLER SYSTEMS		
Calibration, Error Codes, Troubleshooting and Schematics (Tractors not equipped with Ride Control)	10002	7-74440
Calibration, Error Codes, Troubleshooting and Schematics (Tractors equipped with Ride Control)	10002	7-74450
Programming the Hitch/MFD/Differential Lock Controller	10010	7-74350

Section

1

GENERAL

How it Works

Agro.Buch@poczta.fm

CONTENTS

GENERAL OVERVIEW	5
Engine	5
Transmission.....	5
PTO	5
Hydraulics	6
Brakes	6
Safety Cabs	6
LUBRICANTS AND CAPACITIES	7
LUBRICATION AND MAINTENANCE CHART	8

Agro.Buch@poczta.fm



Thank you very much
for your reading.
Please click here
to get more information.