

**5075M (FT4/Stage V),  
5090M, 5100M, 5100MH,  
5100ML, 5115M and  
5115ML (IT4/Stage IIIB  
and FT4/Stage IV)  
Tractors Repair  
(MY2018-)**



JOHN HARE



COLLECTION

**REPAIR TECHNICAL MANUAL**

**5075M (FT4/Stage V), 5090M, 5100M, 5100MH,  
5100ML, 5115M and 5115ML (IT4/Stage IIIB and FT4/  
Stage IV) Tractors (MY2018-)**

TM143719 01DEC18 (ENGLISH)



## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



### CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components.

Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC-19-20140415

## **Section 10 - General Information**

- [Group 05 - Safety](#)
- [Group 10 - General Specifications](#)
- [Group 15 - Fuel and Lubricants](#)
- [Group 20 - Serial Number Locations](#)

## **Section 20 - Engine**

- [Group 05 - Engine](#)

## **Section 30 - Fuel, Air Intake, Exhaust, and Cooling**

- [Group 05 - Fuel System](#)
- [Group 10 - Air Intake System](#)
- [Group 15 - Exhaust System](#)
- [Group 20 - Cooling System](#)
- [Group 25 - Aftertreatment System](#)

## **Section 40 - Electrical**

- [Group 05A - Fuses and Relays](#)
- [Group 05B - Ground Points](#)
- [Group 05C - Connectors](#)
- [Group 05D - Wiring Harnesses](#)
- [Group 05E - Electrical Components](#)

## **Section 50 - Drive Systems and Transmissions**

- [Group 00 - Transmission Component Identification](#)
- [Group 05 - Separation](#)
- [Group 10 - SS Transmission](#)
- [Group 15 - PR Transmission](#)
- [Group 20 - PR Plus Transmission](#)
- [Group 25 - Clutch Assembly - SS Transmission](#)
- [Group 30 - Clutch Assembly - PR Transmission](#)
- [Group 35 - Clutch Assembly - PR Plus Transmission](#)
- [Group 40 - Differential](#)
- [Group 45 - Control Valve](#)
- [Group 50 - Final Drives](#)
- [Group 55 - Hi - Crop Final Drives](#)
- [Group 60 - Rear PTO](#)
- [Group 65 - Mechanical Front - Wheel Drive](#)

- [Group 70 - Creeper Assembly](#)
- [Group 75 - Front PTO](#)

## **Section 60 - Steering and Brakes**

- [Group 05 - Steering](#)
- [Group 10 - Service Brake Repair](#)
- [Group 15 - Secondary Brake Repair](#)
- [Group 20 - Air Brakes Repair](#)
- [Group 25 - Hydraulic Trailer Brake Repair](#)

## **Section 70 - Hydraulics**

- [Group 05 - Hydraulic Pump and Filter](#)
- [Group 10 - Hydraulic Oil Cooler](#)
- [Group 15 - Hitch Valve](#)
- [Group 20 - Hydraulic Rear Selective Control Valve](#)
- [Group 25 - Hydraulic Mid - Mount Selective Control Valve \(SCV\)](#)
- [Group 30 - Hydraulic Lines](#)
- [Group 35 - Front Hitch](#)

## **Section 80 - Miscellaneous**

- [Group 05 - Front Axle - 2WD](#)
- [Group 10 - Hitches and Drawbars](#)
- [Group 15 - Fenders](#)
- [Group 20 - Hood](#)
- [Group 25 - Step Assembly](#)
- [Group 30 - Wheels](#)
- [Group 35 - SCR Covers and Shields](#)

## **Section 90 - Operator's Station**

- [Group 05 - Seat and Support](#)
- [Group 10 - Control Console](#)
- [Group 15 - Roll - Guard](#)
- [Group 20 - Cab Components](#)
- [Group 25 - Open Operator Station Components](#)
- [Group 30 - Air Conditioning System](#)
- [Group 35 - Heating System](#)

## **Section 99 - Special Tools**

- [Group 05 - Dealer Fabricated Tools](#)

# Section 10

## General Information

### Contents

	Page		Page
<b>Group 05 - Safety</b>		<a href="#">Wait Before Opening High - Pressure Fuel System .....</a>	<a href="#">10-05-18</a>
<a href="#">Work In Ventilated Area .....</a>	<a href="#">10-05-1</a>	<a href="#">Service Front - Wheel Drive Tractor Safely .....</a>	<a href="#">10-05-19</a>
<a href="#">Recognize Safety Information .....</a>	<a href="#">10-05-1</a>	<a href="#">Use Steps and Handholds Correctly .....</a>	<a href="#">10-05-19</a>
<a href="#">Avoid Backover Accidents .....</a>	<a href="#">10-05-1</a>	<a href="#">Handle Electronic Components and Brackets Safely .....</a>	<a href="#">10-05-19</a>
<a href="#">Prevent Machine Runaway .....</a>	<a href="#">10-05-2</a>	<a href="#">Transport Tractor Safely .....</a>	<a href="#">10-05-19</a>
<a href="#">Avoid Contact with Agricultural Chemicals .....</a>	<a href="#">10-05-2</a>	<a href="#">Deliver Safely .....</a>	<a href="#">10-05-20</a>
<a href="#">Clean Vehicle of Hazardous Pesticides .....</a>	<a href="#">10-05-2</a>	<a href="#">Servicing Electronic Control Units .....</a>	<a href="#">10-05-20</a>
<a href="#">Use a Safety Chain .....</a>	<a href="#">10-05-3</a>	<a href="#">Welding Near Electronic Control Units .....</a>	<a href="#">10-05-21</a>
<a href="#">Work in Clean Area .....</a>	<a href="#">10-05-3</a>	<a href="#">Keep Electronic Control Unit Connectors Clean ...</a>	<a href="#">10-05-21</a>
<a href="#">Decommissioning - Proper Recycling and Disposal of Fluids and Components .....</a>	<a href="#">10-05-3</a>		
<a href="#">Avoid Harmful Asbestos Dust .....</a>	<a href="#">10-05-4</a>	<b>Group 10 - General Specifications</b>	
<a href="#">Use Electronic Display Properly .....</a>	<a href="#">10-05-4</a>	<a href="#">Regions and Country Versions .....</a>	<a href="#">10-10-1</a>
<a href="#">Avoid Hot Exhaust .....</a>	<a href="#">10-05-4</a>	<a href="#">Features and Accessories .....</a>	<a href="#">10-10-2</a>
<a href="#">Clean Exhaust Filter Safely .....</a>	<a href="#">10-05-5</a>	<a href="#">Machine General Specifications .....</a>	<a href="#">10-10-4</a>
<a href="#">Exhaust Filter Cleaning .....</a>	<a href="#">10-05-6</a>	<a href="#">Drain and Refill Capacities .....</a>	<a href="#">10-10-5</a>
<a href="#">Handle Fuel Safely - Avoid Fires .....</a>	<a href="#">10-05-6</a>	<a href="#">Service Recommendations for O - Ring Boss Fittings .....</a>	<a href="#">10-10-6</a>
<a href="#">Prepare for Emergencies .....</a>	<a href="#">10-05-6</a>	<a href="#">Service Recommendations for Flat Face O - Ring Seal Fittings .....</a>	<a href="#">10-10-7</a>
<a href="#">In Case of Fire .....</a>	<a href="#">10-05-6</a>	<a href="#">Metric Bolt and Screw Torque Values .....</a>	<a href="#">10-10-8</a>
<a href="#">Handle Fluids Safely - Avoid Fires .....</a>	<a href="#">10-05-7</a>	<a href="#">Unified Inch Bolt and Screw Torque Values .....</a>	<a href="#">10-10-9</a>
<a href="#">Avoid High - Pressure Fluids .....</a>	<a href="#">10-05-7</a>	<a href="#">Glossary of Terms .....</a>	<a href="#">10-10-10</a>
<a href="#">Use Foldable ROPS and Seat Belt Properly .....</a>	<a href="#">10-05-7</a>	<a href="#">Trademarks .....</a>	<a href="#">10-10-11</a>
<a href="#">Avoid Static Electricity Risk When Refueling .....</a>	<a href="#">10-05-8</a>		
<a href="#">Install All Guards .....</a>	<a href="#">10-05-8</a>	<b>Group 15 - Fuel and Lubricants</b>	
<a href="#">Use Proper Lifting Equipment .....</a>	<a href="#">10-05-9</a>	<a href="#">Alternative and Synthetic Lubricants .....</a>	<a href="#">10-15-1</a>
<a href="#">Illuminate Work Area Safely .....</a>	<a href="#">10-05-9</a>	<a href="#">Transmission and Hydraulic Oil .....</a>	<a href="#">10-15-1</a>
<a href="#">Live With Safety .....</a>	<a href="#">10-05-9</a>	<a href="#">Diesel Engine Coolant (engine with wet sleeve cylinder liners) .....</a>	<a href="#">10-15-2</a>
<a href="#">Service Machines Safely .....</a>	<a href="#">10-05-9</a>	<a href="#">Operating in Warm Temperature Climates .....</a>	<a href="#">10-15-2</a>
<a href="#">Support Machine Properly .....</a>	<a href="#">10-05-10</a>	<a href="#">John Deere COOL - GARD™ II Coolant Extender .....</a>	<a href="#">10-15-3</a>
<a href="#">Protect Against Noise .....</a>	<a href="#">10-05-10</a>	<a href="#">Water Quality for Mixing with Coolant Concentrate .....</a>	<a href="#">10-15-4</a>
<a href="#">Remove Paint Before Welding or Heating .....</a>	<a href="#">10-05-10</a>	<a href="#">Testing Coolant Freeze Point .....</a>	<a href="#">10-15-4</a>
<a href="#">Park Machine Safely .....</a>	<a href="#">10-05-11</a>	<a href="#">Diesel Exhaust Fluid (DEF) - Use in Selective Catalytic Reduction (SCR) Equipped Engines .....</a>	<a href="#">10-15-5</a>
<a href="#">Stay Clear of Rotating Drivelines .....</a>	<a href="#">10-05-12</a>	<a href="#">Disposal of Diesel Exhaust Fluid (DEF) .....</a>	<a href="#">10-15-5</a>
<a href="#">Follow Safety Instructions .....</a>	<a href="#">10-05-12</a>	<a href="#">Refilling Diesel Exhaust Fluid (DEF) Tank .....</a>	<a href="#">10-15-5</a>
<a href="#">Use Proper Tools .....</a>	<a href="#">10-05-13</a>	<a href="#">Storing Diesel Exhaust Fluid (DEF) .....</a>	<a href="#">10-15-6</a>
<a href="#">Service Tires Safely .....</a>	<a href="#">10-05-13</a>	<a href="#">Testing Diesel Exhaust Fluid (DEF) .....</a>	<a href="#">10-15-6</a>
<a href="#">Keep ROPS Installed Properly .....</a>	<a href="#">10-05-13</a>	<a href="#">Diesel Engine Oil Service Interval for Operation at High Altitude .....</a>	<a href="#">10-15-6</a>
<a href="#">Construct Dealer - Made Tools Safely .....</a>	<a href="#">10-05-14</a>	<a href="#">Diesel Engine Oil - Interim Tier 4, Final Tier 4, Stage IIIB, and Stage IV .....</a>	<a href="#">10-15-7</a>
<a href="#">Practice Safe Maintenance .....</a>	<a href="#">10-05-14</a>	<a href="#">Engine Oil and Filter Service Intervals - Interim Tier 4, Final Tier 4, Stage IIIB, and Stage IV Engines .....</a>	<a href="#">10-15-7</a>
<a href="#">Understand Signal Words .....</a>	<a href="#">10-05-14</a>	<a href="#">John Deere Break - In Plus™ Engine Oil - Interim Tier 4, Final Tier 4, Stage IIIB, and Stage IV ..</a>	<a href="#">10-15-8</a>
<a href="#">Replace Safety Signs .....</a>	<a href="#">10-05-15</a>	<a href="#">Oil Filters .....</a>	<a href="#">10-15-8</a>
<a href="#">Protect Against High Pressure Spray .....</a>	<a href="#">10-05-15</a>	<a href="#">Fuel Filters .....</a>	<a href="#">10-15-8</a>
<a href="#">Store Attachments Safely .....</a>	<a href="#">10-05-15</a>		
<a href="#">Avoid Heating Near Pressurized Fluid Lines .....</a>	<a href="#">10-05-15</a>		
<a href="#">Wear Protective Clothing .....</a>	<a href="#">10-05-16</a>		
<a href="#">Precautions for Welding .....</a>	<a href="#">10-05-16</a>		
<a href="#">Service Accumulator Systems Safely .....</a>	<a href="#">10-05-16</a>		
<a href="#">Handling Batteries Safely .....</a>	<a href="#">10-05-17</a>		
<a href="#">Handle Agricultural Chemicals Safely .....</a>	<a href="#">10-05-17</a>		
<a href="#">Service Cooling System Safely .....</a>	<a href="#">10-05-18</a>		



Thank you very much  
for your reading.  
Please click here  
to get more information.