

Shop Manual

BULLDOZER

D39EX -22

D39PX -22

SERIAL NUMBERS

D39EX-3001

D39PX-3001

and up

ecot3

KOMATSU

BULLDOZER

D39EX-22

D39PX-22

Machine model	Serial number
D39EX-22	3001 and up
D39PX-22	3001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04041-05
00 Index and foreword	SEN04042-05
100 Index	SEN04050-05 ●
200 Foreword and general information	SEN04051-02
01 General	SEN04043-01
100 Specification and technical data.....	SEN04052-01
10 Structure, function and maintenance standard.....	SEN04044-01
100 Engine and cooling system	SEN04230-00
200 Power train.....	SEN04231-01
300 Undercarriage and frame	SEN04232-01
410 Hydraulic system, Part 1	SEN04233-01
420 Hydraulic system, Part 2.....	SEN04234-01
500 Work equipment.....	SEN04236-01
600 Cab and its attachments	SEN04237-00
700 Electrical system	SEN04238-01
20 Standard value table.....	SEN04045-00
100 Standard service value table	SEN04096-00
30 Testing and adjusting	SEN04046-02
110 Testing and adjusting, Part 1.....	SEN04097-02
120 Testing and adjusting, Part 2.....	SEN04098-00
130 Testing and adjusting, Part 3.....	SEN04099-00
40 Troubleshooting.....	SEN04047-02
100 Failure code table and fuse locations	SEN04100-00
200 General information on troubleshooting.....	SEN04101-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN04102-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN04103-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN04104-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN04105-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN04106-00
400 Troubleshooting of electrical system (E-mode).....	SEN04107-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04108-01

600 Troubleshooting of engine (S-mode).....	SEN04109-01
50 Disassembly and assembly	SEN04048-03
100 General information on disassembly and assembly.....	SEN04662-03 ●
200 Engine and cooling system	SEN04663-02
300 Power train	SEN04664-01
400 Undercarriage and frame	SEN04665-01
500 Hydraulic system	SEN04666-01
600 Work equipment	SEN04667-01
700 Cab and its attachments.....	SEN04668-01
800 Electrical system	SEN04669-01
90 Diagrams and drawings.....	SEN04049-01
100 Hydraulic diagrams and drawings	SEN04053-00
200 Electrical diagrams and drawings.....	SEN04054-01

Table of contents

00 Index and foreword	
100 Index	SEN04050-05
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	SEN04051-02
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 General	
100 Specification and technical data.....	SEN04052-01
Specification dimensional drawing	2
Specifications	3
Weight table	7
Table of fuel, coolant and lubricants.....	9
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN04230-00
Engine system parts.....	2
Cooling system.....	3
Cooling fan pump	4
Cooling fan motor	5
Oil cooler bypass valve	10
200 Power train.....	SEN04231-01
Power train.....	2
Power train system.....	3
Damper	4
HST hydraulic equipment arrangement diagram	5
Steering and brake control	6
Solenoid valve	8
Final drive.....	15
HST pump.....	18
HST motor.....	30
Charge pump	40
300 Undercarriage and frame	SEN04232-01
Main frame	2
Track frame and idler cushion.....	4
Idler	6
Track roller	8
Carrier roller	10
Sprocket	12
Track shoe.....	14
410 Hydraulic system, Part 1	SEN04233-01
Arrangement of hydraulic equipment for work equipment.....	2
Work equipment control	4
Hydraulic tank and filter.....	6
Work equipment and fan pump.....	8
Control valve	16

CLSS	28
Functions and operation of each valve	31
420 Hydraulic system, Part 2	SEN04234-01
Blade PPC valve.....	2
Accumulator.....	8
500 Work equipment	SEN04236-01
Work equipment	2
Cutting edge and end bit	6
Ripper	7
Work equipment cylinder	8
Piston valve	11
600 Cab and its attachments.....	SEN04237-00
ROPS cab.....	2
Cab mount.....	3
Canopy mount	4
Air conditioner.....	5
700 Electrical system	SEN04238-01
Monitor system.....	2
Engine control.....	4
Engine control system	5
Cooling control system	6
HST control system	8
Parking brake control system	14
KOMTRAX system	16
Component equipment of system.....	18
PCCS lever (for steering)	26
Sensor	29
20 Standard value table	
100 Standard service value table	SEN04096-00
Standard service value table for engine	2
Standard service value table for chassis	3
30 Testing and adjusting	
110 Testing and adjusting, Part 1	SEN04097-02
Tools for testing, adjusting, and troubleshooting	3
Sketches of special tools	6
Measuring engine speed	7
Measuring intake air pressure (boost pressure)	8
Measuring exhaust gas color (boost pressure)	10
Adjusting valve clearance.....	11
Measuring compression pressure	13
Measuring blow-by pressure	16
Testing engine oil pressure.....	18
Handling fuel system equipment	19
Releasing residual pressure in fuel system	19
Bleeding air from fuel circuit	20
Measuring fuel pressure	21
Measuring fuel discharge, return and leakage	23
Testing leakage in fuel system.....	27
Measurement of fan circuit pressure and fan speed	28
Adjustment of fan speed sensor	29
Handling reduced cylinder mode operation	30
Handling no-injection cranking operation	30
Handling controller voltage circuit.....	31
Check of muffler and muffler stack for looseness and damage.....	32
Check of muffler function.....	32

Check of installed condition of cylinder head and manifolds.....	33
Check of engine piping for damage and looseness	33
Replacing alternator belt	34
120 Testing and adjusting, Part 2.....	SEN04098-00
Adjusting decelerator pedal.....	2
Testing and adjusting HST oil pressure.....	4
Measuring solenoid valve outlet pressure.....	9
Testing travel deviation.....	12
Adjusting parking brake lever.....	13
Simple brake performance test procedure	15
Adjusting brake pedal.....	16
Method of releasing parking brake (Procedure for emergency escape)	18
Testing and adjusting idler clearance	20
Testing and adjusting track shoe tension	21
Testing work equipment pressure	22
Testing work equipment PPC valve.....	24
Adjusting play of work equipment PPC valve.....	26
Adjusting work equipment lock lever.....	27
Testing internal leakage of work equipment cylinder.....	28
Releasing residual pressure in hydraulic circuit.....	30
Bleeding air from hydraulic circuit	31
Adjusting play of blade center ball	32
Procedure for testing diodes	33
Preparation work for troubleshooting for electrical system	34
How to start operation of KOMTRAX terminal	38
Lamp display of KOMTRAX terminal	41
130 Testing and adjusting, Part 3.....	SEN04099-00
Special functions of monitor panel (EMMS)	2
Items to be adjusted when electric/hydraulic devices are adjusted/replaced.....	64
Adjustment procedure after replacement of HST controller	65
Adjustment procedure after replacement of monitor panel	67
Pm-clinic.....	68
40 Troubleshooting	
100 Failure code table and fuse locations	SEN04100-00
Failure code table.....	2
Before carrying out troubleshooting for electrical system (E-mode)	8
200 General information on troubleshooting.....	SEN04101-02
Points to remember when troubleshooting.....	2
Sequence of events in troubleshooting	3
Testing before troubleshooting	4
Classification and procedures of troubleshooting	5
Information contained in troubleshooting table	8
Connection table for connector pin numbers	10
T- branch box and T- branch adapter table.....	46
310 Troubleshooting by failure code (Display of code), Part 1	SEN04102-00
Failure code [6091NX] HST charge filter element: Clogging	3
Failure code [AA10NX] Air cleaner: Clogging	4
Failure code [AB00MA] Alternator: Malfunction	6
Failure code [B@BAZG] Engine oil: Lowering of oil pressure.....	7
Failure code [B@BCNS] Coolant: Overheat	8
Failure code [B@CRNS] HST oil: Overheating.....	9
Failure code [B@CRZG] HST oil: Lowering of oil pressure	10
Failure code [CA111] Engine controller: Abnormality in controller	11
Failure code [CA115] Abnormal engine Ne and Bkup speed sensors: Abnormal speed sensor signal.....	11
Failure code [CA122] Charge pressure sensor too high: Excessively high voltage detected	12
Failure code [CA123] Charge pressure sensor too low: Excessively low voltage detected.....	14

Failure code [CA131] Decelerator pedal sensor too high: Excessively high voltage detected	16
Failure code [CA132] Decelerator pedal sensor too low: Excessively low voltage detected.....	18
Failure code [CA144] Coolant temperature sensor too high: Excessively high voltage detected	20
Failure code [CA145] Coolant temperature sensor too low: Excessively low voltage detected	22
Failure code [CA153] Charge air temperature sensor too high: Excessively high voltage detected	24
Failure code [CA154] Charge temperature sensor too low: Excessively low voltage detected.....	26
Failure code [CA187] Sensor power source 2 too low: Excessively low voltage detected	28
Failure code [CA221] Atmospheric pressure sensor too high: Excessively high voltage detected	30
Failure code [CA222] Atmospheric pressure sensor too low: Excessively low voltage detected	32
Failure code [CA227] Sensor power source 2 too high: Excessively high voltage detected	34
Failure code [CA234] Engine over speed: Excessively high speed	36
Failure code [CA238] Abnormal power source for Ne speed sensor: Excessively low voltage detected	37
Failure code [CA271] IMV/PCV1 short circuit: Short circuit.....	38
Failure code [CA272] IMV/PCV1 disconnection: Disconnection	40
320 Troubleshooting by failure code (Display of code), Part 2.....	SEN04103-01
Failure code [CA322] Injector No. 1 system disconnection or short circuit: disconnection, short circuit	4
Failure code [CA324] Injector No. 3 system disconnection or short circuit: disconnection, short circuit	6
Failure code [CA331] Injector No. 2 system disconnection or short circuit: disconnection, short circuit	8
Failure code [CA332] Injector No. 4 system disconnection or short circuit: disconnection, short circuit	10
Failure code [CA342] Engine controller data matching error: matching error	12
Failure code [CA351] Injector drive circuit abnormality: Abnormal circuit	14
Failure code [CA352] Sensor power source 1 too low: Excessively low voltage detected	16
Failure code [CA386] Sensor power source 1 too high: Excessively high voltage detected	18
Failure code [CA428] Water in fuel sensor too high: Excessively high voltage detected	20
Failure code [CA429] Water in fuel sensor too low: Excessively low voltage detected	22
Failure code [CA435] Abnormal engine oil pressure switch: Abnormal signal circuit.....	24
Failure code [CA441] Power source voltage too low: Excessively low voltage detected	26
Failure code [CA442] Power source voltage too high: Excessively high voltage has occurred in the controller power source circuit	28
Failure code [CA449] Common rail pressure too high (2): Excessively high pressure trouble occurred.....	30
Failure code [CA451] Common rail pressure sensor too high: Excessively high voltage detected.....	32
Failure code [CA452] Common rail pressure sensor too low: Excessively low voltage detected.....	34
Failure code [CA488] Charge temperature too high and torque derated: Exceeded upper control limit of temperature	36
Failure code [CA553] Common rail pressure too high (1): Excessively high pressure detected.....	37
Failure code [CA559] Loss of pressure feed from supply pump (1): Loss of pressure feed detected.....	38
Failure code [CA689] Abnormal engine Ne speed sensor: Abnormal signal.....	40
Failure code [CA731] Abnormal engine Bkup speed sensor phase: Abnormal phase.....	42
Failure code [CA757] Loss of all engine controller data: Loss of all data.....	44
Failure code [CA778] Abnormal engine Bkup speed sensor: Abnormal Bkup signal.....	46
Failure code [CA1633] Abnormal KOMNET: Abnormal communication.....	48
Failure code [CA2185] Decelerator pedal sensor power source too high: Excessively high voltage detected	50
Failure code [CA2186] Decelerator pedal sensor power source too low: Excessively low voltage detected	52
Failure code [CA2249] Loss of pressure feed from supply pump (2): Loss of pressure feed detected.....	54
Failure code [CA2311] Abnormal IMV solenoid: Abnormal resistance	56
Failure code [CA2555] Air intake heater relay disconnection: Disconnection	58
Failure code [CA2556] Air intake heater relay short circuit: Short circuit	60
330 Troubleshooting by failure code (Display of code), Part 3.....	SEN04104-00
Failure code [D130KA] Neutral safety relay: Disconnection.....	4
Failure code [D130KB] Neutral safety relay: Short circuit	6
Failure code [DAFRKR] CAN communication (Monitor panel – HST controller): Defective communication (Abnormality in objective component system)	8
Failure code [DAFRMC] CAN communication (Monitor panel – ENGINE controller): Defective communication (Abnormality in objective component system)	11
Failure code [DAJ000] HST controller: Memory error	14
Failure code [DAJ0KK] HST controller: Lowing of source voltage	16

Failure code [DAJ0KQ] HST controller: Machine code error	18
Failure code [DAJ0KT] HST controller: Memory error	19
Failure code [DAJ5KK] HST controller sensor 5 V power supply No.1: Lowing of source voltage/Input	20
Failure code [DAJ6KK] HST controller sensor 5 V power supply No.2: Lowing of source voltage/Input	22
Failure code [DAJRKR] CAN communication (HST controller – Monitor panel): Defective communication (Abnormality in objective component system)	24
Failure code [DB2RKR] CAN communication (HST controller – Engine controller): Defective communication (Abnormality in objective component system)	27
Failure code [DD12KA] Shift up switch: Disconnection	30
Failure code [DD12KB] Shift up switch: Short circuit	32
Failure code [DD13KA] Shift down switch: Disconnection	34
Failure code [DD13KB] Shift down switch: Short circuit	36
Failure code [DD14KB] Travel lock limit switch 1: Short circuit	38
Failure code [DD1NL4] Fan rotation selector switch: Disagreement of ON, OFF Signals	40
Failure code [DDDCKB] Reverse travel speed switch: Short circuit	42
Failure code [DDP6KA] Brake oil pressure sensor: Disconnection	44
Failure code [DDP6KB] Brake oil pressure sensor: Short circuit	46
Failure code [DDP6MA] Brake oil pressure sensor: Malfunction	48
Failure code [DDQ2KA] Travel lock limit switch 1: Disconnection	50
Failure code [DDT0L4] Shift mode switch: Disagreement of ON/ OFF Signals	52
Failure code [DDU1FS] Travel lock limit switches 1 and 2: Fixing	54
Failure code [DDU1KA] Travel lock limit switch 2: Disconnection	56
Failure code [DDU1KY] Travel lock limit switch 2: Short circuit with power supply line	58
Failure code [DGS1KA] HST oil temperature sensor: Disconnection	60
Failure code [DGS1KX] HST oil temperature sensor: Out of Input signal range	62
340 Troubleshooting by failure code (Display of code), Part 4	SEN04105-00
Failure code [DHH5KA] Left HST pump pressure sensor: Disconnection	4
Failure code [DHH5KB] Left HST pump pressure sensor: Short circuit	6
Failure code [DHH6KA] Right HST pump pressure sensor: Disconnection	8
Failure code [DHH6KB] Right HST pump pressure sensor: Short circuit	10
Failure code [DK10KA] Fuel dial sensor: Disconnection	12
Failure code [DK10KB] Fuel dial sensor: Short circuit	14
Failure code [DK30KA] Steering angle sensor 1: Disconnection	16
Failure code [DK30KB] Steering angle sensor 1: Short circuit	18
Failure code [DK30KX] Steering angle sensor: Out of input signal range	20
Failure code [DK30KX] Steering angle sensor: Out of input signal range	20
Failure code [DK30KZ] Steering angle sensor: Disconnection or short circuit	21
Failure code [DK30L8] Steering angle sensor: Disagreement of analog signals	22
Failure code [DK31KA] Steering angle sensor 2: Disconnection	24
Failure code [DK31KB] Steering angle sensor 2: Short circuit	26
Failure code [DK40KA] Brake pedal sensor: Disconnection	28
Failure code [DK40KB] Brake pedal sensor: Short circuit	30
Failure code [DK55KX] Directional potentiometer: Out of input signal range	32
Failure code [DK55KZ] Directional potentiometer: Disconnection or short circuit	33
Failure code [DK55L8] Directional potentiometer: Disagreement of analog signals	34
Failure code [DK56KA] Directional potentiometer 1: Disconnection	36
Failure code [DK56KB] Directional potentiometer 1: Short circuit	38
Failure code [DK57KA] Directional potentiometer 2: Disconnection	40
Failure code [DK57KB] Directional potentiometer 2: Short circuit	42
Failure code [DLM0KX] HST motor speed sensors: Out of input signal range	44
Failure code [DLM1KA] Left HST motor speed sensor: Disconnection	46
Failure code [DLM1KB] Left HST motor speed sensor: Short circuit	48
Failure code [DLM1MA] Left HST motor speed sensor: Malfunction	50
Failure code [DLM2KA] Right HST motor speed sensor: Disconnection	52
Failure code [DLM2KB] Right HST motor speed sensor: Short circuit	54
Failure code [DLM2MA] Right HST motor speed sensor: Malfunction	56
Failure code [DLM3KA] Fan speed sensor: Disconnection	58
Failure code [DLM3KB] Fan speed sensor: Short circuit	60

350 Troubleshooting by failure code (Display of code), Part 5.....	SEN04106-00
Failure code [DN21FS] Brake pedal and proximity switch: Fixing.....	4
Failure code [DV00KB] Caution buzzer: Short circuit.....	6
Failure code [DV20KB] Back alarm buzzer: Short circuit.....	7
Failure code [DW4BKA] Parking brake solenoid valve: Disconnection.....	8
Failure code [DW4BKB] Parking brake solenoid valve: Short circuit.....	10
Failure code [DW4BKY] Parking brake solenoid valve: Short circuit with power supply line.....	12
Failure code [DW7BKA] Fan reverse solenoid valve: Disconnection.....	14
Failure code [DW7BKB] Fan reverse solenoid valve: Short circuit.....	16
Failure code [DW7BKY] Fan reverse solenoid valve: Short circuit with power supply line.....	17
Failure code [DW7EKA] Slow brake solenoid valve: Disconnection.....	18
Failure code [DW7EKB] Slow brake solenoid valve: Short circuit.....	22
Failure code [DW7EKY] Slow brake solenoid valve: Short circuit with power supply line.....	24
Failure code [DWN5KA] Fan EPC solenoid valve: Disconnection.....	26
Failure code [DWN5KB] Fan EPC solenoid valve: Short circuit.....	28
Failure code [DWN5KY] Fan EPC solenoid valve: Short circuit with power supply line.....	30
Failure code [DXA4KA] LF HST pump EPC solenoid valve: Disconnection.....	32
Failure code [DXA4KB] LF HST pump EPC solenoid valve: Short circuit.....	34
Failure code [DXA4KY] LF HST pump EPC solenoid valve: Short circuit with power supply line.....	36
Failure code [DXA5KA] LR HST pump EPC solenoid valve: Disconnection.....	38
Failure code [DXA5KB] LR HST pump EPC solenoid valve: Short circuit.....	40
Failure code [DXA5KY] LR HST pump EPC solenoid valve: Short circuit with power supply line.....	42
Failure code [DXA6KA] RF HST pump EPC solenoid valve: Disconnection.....	44
Failure code [DXA6KB] RF HST pump EPC solenoid valve: Short circuit.....	46
Failure code [DXA6KY] RF HST pump EPC solenoid valve: Short circuit with power supply line.....	47
Failure code [DXA7KA] RR HST pump EPC solenoid valve: Disconnection.....	48
Failure code [DXA7KB] RR HST pump EPC solenoid valve: Short circuit.....	50
Failure code [DXA7KY] RR HST pump EPC solenoid valve: Short circuit with power supply line.....	52
Failure code [DXK1KA] Left HST motor EPC solenoid valve: Disconnection.....	54
Failure code [DXK1KB] Left HST motor EPC solenoid valve: Short circuit.....	55
Failure code [DXK1KY] Left HST motor EPC solenoid valve: Short circuit with power supply line.....	56
Failure code [DXK2KA] Right HST motor EPC solenoid valve: Disconnection.....	57
Failure code [DXK2KB] Right HST motor EPC solenoid valve: Short circuit.....	58
Failure code [DXK2KY] Right HST motor EPC solenoid valve: Short circuit with power supply line.....	59
400 Troubleshooting of electrical system (E-mode).....	SEN04107-00
E-1 Engine does not start (Starting motor does not rotate).....	4
E-2 Engine is not preheated.....	7
E-3 When starting switch is turned ON, any item does not light up.....	10
E-4 Charge level caution flashes while engine is running.....	12
E-5 Emergency warning items flash while engine is running.....	14
E-6 Preheating pilot lamp does not light up during preheating operation.....	20
E-7 The coolant temperature gauge does not indicate correctly.....	22
E-8 The HST oil temperature gauge does not indicate correctly.....	23
E-9 Fuel level gauge does not indicate properly.....	24
E-10 Gear speed, set travel speed, and shift mode indicator does not display normally.....	26
E-11 Multi-information unit does not display normally.....	26
E-12 Caution lamp does not flash or does not go off.....	27
E-13 Caution buzzer does not sound or does not stop.....	28
E-14 Reverse travel speed setting switch does not function.....	30
E-15 Shift mode switch does not function.....	32
E-16 Buzzer cancel switch does not function.....	34
E-17 Information switch does not function.....	36
E-18 The fan cleaning does not operate or cannot be reset.....	38
E-19 Backup alarm does not sound.....	40
E-20 The horn does not sound or does not stop.....	41
E-21 Work equipment does not move.....	42
E-22 Headlamp or rear lamp does not light up.....	44
E-23 Foot heater does not operate.....	47

E-24 Air conditioner does not operate.....	50
E-25 Windshield wiper and window washer do not operate.....	55
E-26 KOMTRAX system does not operate normally.....	68
500 Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04108-01
Information in troubleshooting table.....	3
H-1 Right and left travel systems do not operate forward and in reverse (No travel systems operate).....	4
H-2 Right or left travel system does not operate forward and in reverse (Only right or left travel system does not operate).....	6
H-3 Right or left travel system does not operate forward or in reverse (Only 1 system does not operate)...	7
H-4 Speed or power of travel is low.....	8
H-5 Gear is not shifted.....	9
H-6 Large shocks are made when machine starts and stops travel.....	10
H-7 Machine deviates largely during travel.....	11
H-8 Hydraulic drift of travel is large.....	12
H-9 Engine stalls or engine speed lowers extremely during travel.....	13
H-10 Abnormal sound comes out from around HST pump and motor.....	14
H-11 Work equipment dose not operate at all.....	15
H-12 Speed or power of whole work equipment is low.....	16
H-13 Speed or power of lifting blade is low.....	17
H-14 Speed or power of tilting blade is low.....	18
H-15 Speed or power of angling blade is low.....	19
H-16 Time lag in lifting blade is large.....	20
H-17 Hydraulic drift of lifting blade is large.....	20
H-18 Hydraulic drift of tilting blade is large.....	20
H-19 Abnormal sound comes out from around work equipment pump and control valve.....	21
H-20 HST oil temperature (Hydraulic oil temperature) rises too high.....	22
H-21 Fan speed is abnormal (High, low, or 0 rpm).....	24
H-22 Abnormal sound is heard from around fan.....	25
600 Troubleshooting of engine (S-mode).....	SEN04109-01
Method of using troubleshooting charts.....	3
S-1 Starting performance is poor.....	6
S-2 Engine does not start.....	7
S-3 Engine does not pick up smoothly.....	10
S-4 Engine stops during operations.....	11
S-5 Engine does not rotate smoothly.....	12
S-6 Engine lacks output (or lacks power).....	13
S-7 Exhaust smoke is black (imcomplete combustion).....	14
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	15
S-9 Oil becomes contaminated quickly.....	16
S-10 Fuel consumption is excessive.....	17
S-11 Oil is in coolant (or coolant spurts back, or coolant level goes down).....	18
S-12 Oil pressure drops.....	19
S-13 Oil level rises (water, fuel in oil).....	20
S-14 Coolant temperature becomes too high (overheating).....	21
S-15 Abnormal noise is made.....	22
S-16 Vibration is excessive.....	23
50 Disassembly and assembly	
100 General information on disassembly and assembly.....	SEN04662-03
How to read this manual.....	2
Coating materials list.....	4
Special tools list.....	7
Sketches of special tools.....	10
200 Engine and cooling system.....	SEN04663-02
Removal and installation of fuel supply pump assembly.....	2
Removal and installation of fuel injector assembly.....	6
Removal and installation of cylinder head assembly.....	14

Removal and installation of engine and HST pump assembly	27
Removal and installation of engine front seal assembly	30
Removal and installation of engine rear seal assembly	32
Removal and installation of front guard assembly	36
Removal and installation of radiator assembly	38
Removal and installation of hydraulic oil cooler assembly	40
Removal and installation of aftercooler assembly	42
Removal and installation of cooling fan and motor assembly	44
Removal and installation of cooling fan drive motor assembly	46
Removal and installation of fuel tank assembly	48
300 Power train	SEN04664-01
Removal and installation of HST pump assembly	2
Removal and installation of HST motor and final drive assembly	4
Disassembly and assembly of final drive assembly	6
400 Undercarriage and frame	SEN04665-01
Spreading and installation of track shoe assembly	2
Removal and installation of idler and recoil spring assembly	4
Disassembly and assembly of idler assembly	5
Disassembly and assembly of recoil spring assembly	8
Disassembly and assembly of track roller assembly	12
Disassembly and assembly of carrier roller assembly	16
500 Hydraulic system	SEN04666-01
Removal and installation of hydraulic tank assembly	2
Removal and installation of control valve assembly	4
Disassembly and assembly of control valve assembly	5
Disassembly and assembly of hydraulic cylinder assembly	7
600 Work equipment	SEN04667-01
Removal and installation of work equipment assembly	2
700 Cab and its attachments	SEN04668-01
Removal and installation of ROPS canopy and operator seat frame assembly	2
Removal and installation of ROPS cab and operator seat frame assembly	5
Removal and installation of operator's cab glass (Stuck glass)	10
800 Electrical system	SEN04669-01
Removal and installation of HST controller assembly	2
Removal and installation of KOMTRAX terminal assembly	3
90 Diagrams and drawings	
100 Hydraulic diagrams and drawings	SEN04053-00
Work equipment hydraulic circuit diagram	3
200 Electrical diagrams and drawings	SEN04054-01
Electrical circuit diagram	3
Cab electrical circuit diagram	13
Air conditioner circuit diagram	17
Connector list and stereogram	19

D39EX-22, D39PX-22 Bulldozer

Form No. SEN04050-05

©2011 KOMATSU
All Rights Reserved
Printed in Japan 02-11

BULLDOZER

D39EX-22

D39PX-22

Machine model	Serial number
D39EX-22	3001 and up
D39PX-22	3001 and up

00 Index and foreword

200 Foreword and general information

Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

Safety notice

(Rev. 2008/08)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.

- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slings with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

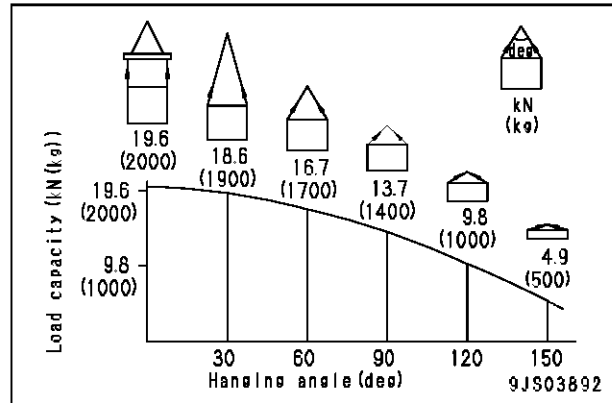

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slings near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

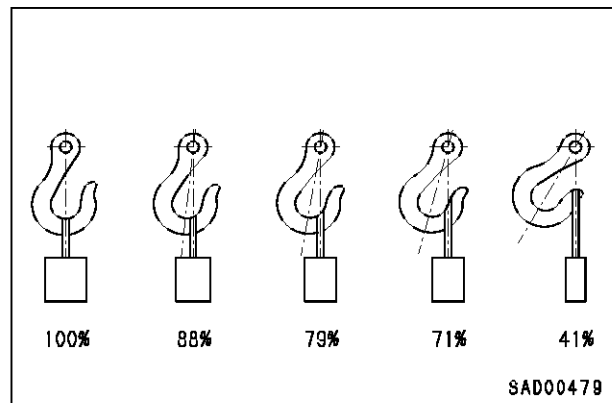


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

1) Disconnection

⚠ For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.

★ Ask professional traders for collecting and filling operation of refrigerant (R134a).

★ Never release the refrigerant (R134a) to the atmosphere.

⚠ If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.

2) Connection


1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.

2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.

3] Check that each O-ring is not damaged or deteriorated.

4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)**) to its O-rings.

★ Example of O-ring (Fitted to every joint of hoses and tubes)

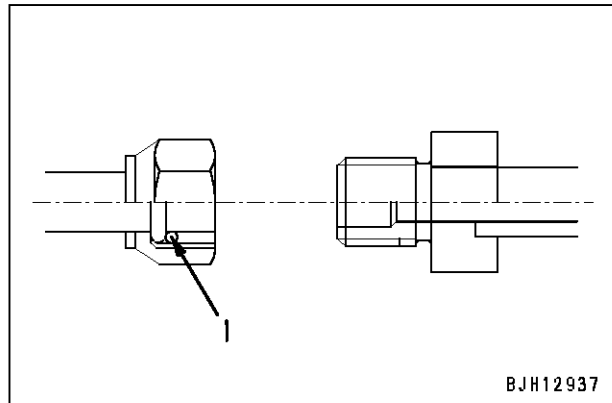

★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume
This section explains the method of reproducing, repairing, and replacing parts.

2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

