

Shop Manual

HYDRAULIC
EXCAVATOR

GALEO

PC340LC-7
PC340NLC-7

SERIAL NUMBERS PC340LC-7E0 K45001
PC340NLC-7E0 K45001 and up

PDF



DOWNLOAD



HYDRAULIC EXCAVATOR

PC340LC-7 PC340NLC-7

Machine model Serial number

PC340LC-7E0	K45001 and up
PC340NLC-7E0	K45001 and up

00 Index and foreword

Index

Organization list of the shop manual	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00262-00
00 Index and foreword	
Index	UEN00264-00
Foreword and general information	UEN00265-00
01 Specification	
Specification and technical data	UEN00267-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00269-00
Power train	UEN00270-00
Undercarriage and frame	UEN00271-00
Hydraulic system, Part 1	UEN00272-00
Hydraulic system, Part 2	UEN00273-00
Hydraulic system, Part 3	UEN00274-00
Work equipment	UEN00275-00
Cab and its attachments	UEN00276-00
Electrical system	UEN00277-00
20 Standard value table	
Standard service value table	UEN00366-00
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00536-00
Testing and adjusting, Part 2	UEN00537-00
40 Troubleshooting	
Information related to troubleshooting	UEN00539-00
Troubleshooting by failure code (Display of code), Part 1	UEN00540-00
Troubleshooting by failure code (Display of code), Part 2	UEN00541-00
Troubleshooting by failure code (Display of code), Part 3	UEN00542-00
Troubleshooting of electrical system (E-mode)	UEN00543-00
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00544-00
Troubleshooting of engine (S-mode)	UEN00545-00

50 Disassembly and assembly	
General information on disassembly and assembly	UEN00956-00
Engine and cooling system	UEN00957-00
Power train	UEN00958-00
Undercarriage and frame	UEN00959-00
Hydraulic system	UEN00960-00
Work equipment	UEN00961-00
Cab and its attachments	UEN00962-00
Electrical system	UEN00963-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00279-00
Electrical diagrams and drawings	UEN00280-00



Thank you very much
for your reading.
Please click here
to get more information.