

SERVICE MANUAL

INTERNATIONAL® DT 466, DT 570, HT 570
DIESEL ENGINE
SERVICE MANUAL
FORM EGES-265-2



Table of Contents

Foreword.....	1
Service Diagnosis.....	2
Safety Information.....	3
Engine Systems.....	5
Mounting Engine on Engine Stand.....	59
EVRT® Electronically Controlled Turbocharger.....	67
Intake, Inlet, and Exhaust Manifolds.....	77
EGR Cooler and Tubing.....	91
Cylinder Head and Valve Train.....	115
Front Cover and Related Components.....	157
Oil Pan and Oil Suction Tube.....	203
Power Cylinders.....	213
Crankcase, Crankshaft, and Camshaft.....	249
Oil System Module Assembly and Secondary Filtration.....	279
Engine Electrical.....	301
Fuel System.....	335
Flywheel and Flywheel Housing.....	365
Diamond Logic® Engine Brake.....	389
Air Compressor, Power Steering Pump, and Power Take-off.....	407
Abbreviations and Acronyms.....	417
Terminology.....	421
Appendix A – Specifications.....	431
Appendix B – Torques.....	443

Appendix C – Special Service Tools..... 453

Appendix D – Technical Service Information (TSI) Bulletins..... 463

Appendix E – Instruction Sheets..... 485

Foreword

Navistar, Inc. is committed to continuous research and development to improve products and introduce technological advances. Procedures, specifications, and parts defined in published technical service literature may be altered.

This *Engine Service Manual* provides a general sequence of procedures for out-of-chassis engine overhaul (removal, inspection, and installation). For in-chassis service of parts and assemblies, the sequence may vary.

NOTE: Photo illustrations identify specific parts or assemblies that support text and procedures; other areas in a photo illustration may not be exact.

See vehicle manuals and Technical Service Information (TSI) bulletins for additional information.

Navistar, Inc. is committed to continuous research and development to improve products and introduce technological advances. Procedures, specifications, and parts defined in published technical service literature may be altered.

This *Engine Service Manual* provides a general sequence of procedures for out-of-chassis engine overhaul (removal, inspection, and installation). For in-chassis service of parts and assemblies, the sequence may vary.

NOTE: Photo illustrations identify specific parts or assemblies that support text and procedures; other areas in a photo illustration may not be exact.

See vehicle manuals and Technical Service Information (TSI) bulletins for additional information.

Technical Service Literature

1171809R5	<i>DT 466, DT 570 and HT 570 Engine Operation and Maintenance Manual</i>
EGES-265-2	<i>DT 466, DT 570 and HT 570 Engine Service Manual</i>
EGES-270	<i>DT 466, DT 570 and HT 570 Engine Diagnostic Manual</i>
EGED-285	<i>DT 466, DT 570 and HT 570 Electronic Control Systems Diagnostic Form (Pad of 50)</i>
EGED-290	<i>DT 466, DT 570 and HT 570 Diagnostics Form (Pad of 50)</i>



Thank you very much
for your reading.
Please click here
to get more information.