

1023E, 1025R and 1026R Compact Utility Tractor

TECHNICAL MANUAL 1023E, 1025R, and 1026R Compact Utility Tractors

TM126919 07APR16 (ENGLISH)




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Contents

Section 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuel and Lubricants
- Group 20—Serial Number Locations

Section 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

Section 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake and Exhaust Systems
- Group 15—Speed Control Linkage

Section 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 15—Wiring Harness

Section 50—Power Train Repair

- Group 15—Transmission
- Group 20—Rear PTO Driveshaft
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive

Section 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

Section 70—Hydraulics Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Selective Control Valve

Section 80—Miscellaneous Repair

- Group 10—Wheels
- Group 15—3-Point Hitch
- Group 20—Hood
- Group 25—Mid-Mount Lift

Section 90—Operator's Station Repair

- Group 05—Seat and Support
- Group 10—ROLL-GARD
- Group 15—Operator Platform
- Group 20—Fenders

Section 210—Operational Checkout Procedures

- Group 05—Operational Checkout Procedures

Section 220—Engine Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments

Section 230—Fuel and Air Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjustments

Section 240—Electrical System Operation, Tests, and Adjustments

- Group 05—Theory of Operation
- Group 10—Wiring Schematics
- Group 15—Diagnosis, Test and Adjustments
- Group 20—Connector Information
- Group 25—Component Location

Section 250—Power Train Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjustments

Section 260—Steering and Brake Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjustments

Section 270—Hydraulic System Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis
- Group 20—Hydraulic Tests
- Group 25—Adjustments
- Group 30—Hydraulic Schematics

Section 299—Service Tools

- Group 05—Dealer Fabricated Tools
- Group 10—Service Tools and Kits

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2016
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2012, 2015

Section 10 General Information

Contents

	Page		Page
Group 05—Safety			
Recognize Safety Information	10-05-1	Service Recommendations For	
Handle Fuel Safely—Avoid Fires	10-05-1	Flat Face O-Ring Seal Fittings	10-10-4
Prevent Battery Explosions	10-05-1	Metric Cap Screw Torque	
Prepare for Emergencies	10-05-2	Values—Grade 7	10-10-4
Prevent Acid Burns	10-05-2	Metric Bolt and Screw Torque	
Service and Operate Chemical		Values	10-10-5
Sprayers Safely	10-05-3	Unified Inch Bolt and Screw Torque	
Handle Chemical Products Safely	10-05-3	Values	10-10-6
Avoid High-Pressure Fluids	10-05-4	Group 15—Fuel and Lubricants	
Park Machine Safely	10-05-4	Diesel Fuel	10-15-1
Support Machine Properly	10-05-4	Handling and Storing Diesel Fuel	10-15-2
Wear Protective Clothing	10-05-5	Do Not Use Galvanized	
Work in Clean Area	10-05-5	Containers	10-15-2
Service Machines Safely	10-05-5	Lubricity of Diesel Fuel	10-15-2
Work In Ventilated Area	10-05-6	Testing Diesel Fuel	10-15-2
Illuminate Work Area Safely	10-05-6	BioDiesel Fuel	10-15-3
Replace Safety Signs	10-05-6	Filling Fuel Tank	10-15-4
Use Proper Lifting Equipment	10-05-7	Diesel Engine Break-In Oil	10-15-4
Remove Paint Before Welding or		Diesel Engine Oil —	
Heating	10-05-7	Non-Emissions Certified and	
Avoid Heating Near Pressurized		Certified Tier 1 and Stage I	10-15-5
Fluid Lines	10-05-7	Oil Filters	10-15-5
Keep ROPS Installed Properly	10-05-8	Diesel Engine Coolant (engine with	
Service Tires Safely	10-05-8	wet sleeve cylinder liners)	10-15-6
Avoid Harmful Asbestos Dust	10-05-9	Operating in Warm Temperature	
Practice Safe Maintenance	10-05-9	Climates	10-15-6
Use Proper Tools	10-05-10	Additional Information About	
Decommissioning — Proper		Diesel Engine Coolants and	
Recycling and Disposal of Fluids		John Deere LIQUID COOLANT	
and Components	10-05-10	CONDITIONER	10-15-7
Prevent Machine Runaway	10-05-11	Testing Diesel Engine Coolant	10-15-8
Handle Starting Fluid Safely	10-05-11	Transmission and Hydraulic Oil	10-15-9
Service Cooling System Safely	10-05-11	Use Correct Transmission/Hy-	
Stay Clear of Rotating Drivelines	10-05-12	draulic Filter Element	10-15-9
Protect Against High Pressure		MFWD Axle Housing and Wheel	
Spray	10-05-12	Hub Oil	10-15-10
Construct Dealer-Made Tools		Grease	10-15-11
Safely	10-05-13	Grease (Specific Application)	10-15-11
Clean Vehicle of Hazardous		Mixing of Lubricants	10-15-11
Pesticides	10-05-13	Alternative and Synthetic	
Servicing Electronic Control Units	10-05-13	Lubricants	10-15-11
Welding Near Electronic Control		Lubricant Storage	10-15-12
Units	10-05-14	Group 20—Serial Number Locations	
Keep Electronic Control Unit		Serial Numbers	10-20-1
Connectors Clean	10-05-14	Product Identification Number	
Live With Safety	10-05-14	Location	10-20-1
Group 10—General Specifications			
Machine Specifications 1023E,		Engine Serial Number Location	10-20-1
1025R, and 1026R EEC	10-10-1		
Service Recommendations for			
O-Ring Boss Fittings	10-10-2		



Thank you very much
for your reading.
Please click here
to get more information.