

8

 
7

3



Service Manual

(S/N 514115001 & Above)
(S/N 514213001 & Above)

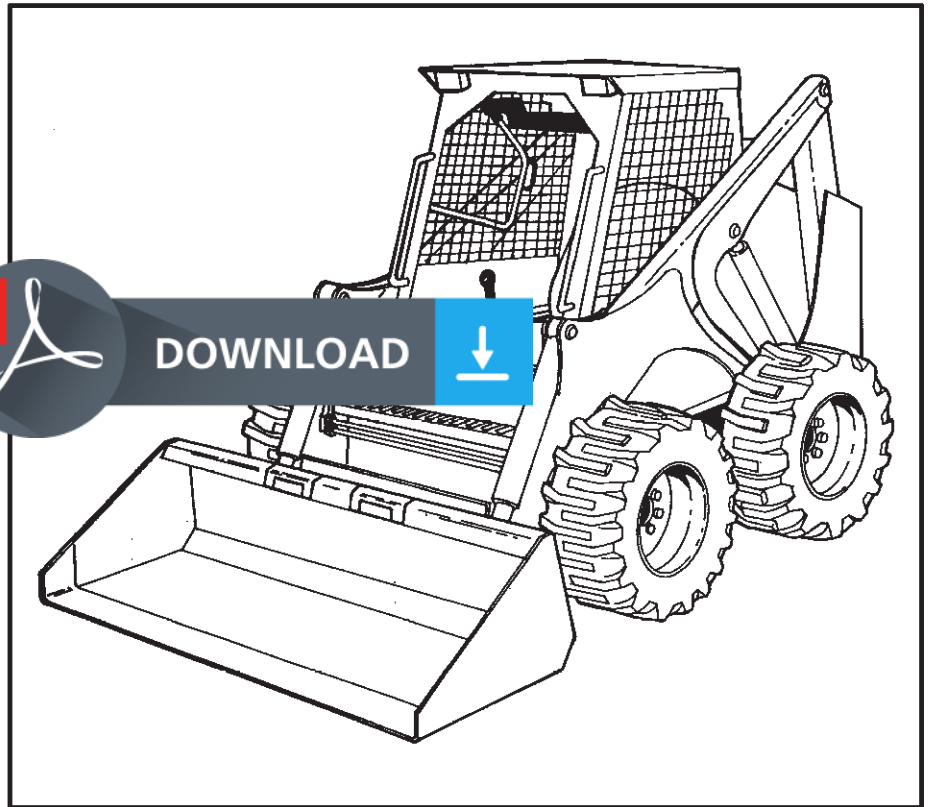

Dealer Copy -- Not for Resale

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6900382 (7-10)

Printed in U.S.A.

© Bobcat Company 2010

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

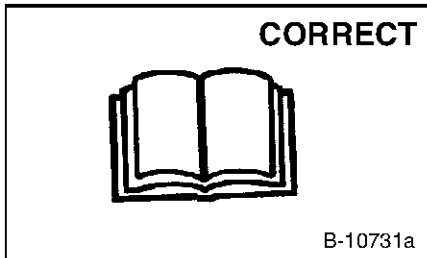

 
Never service the Bobcat Skid-Steer Loader without instructions.

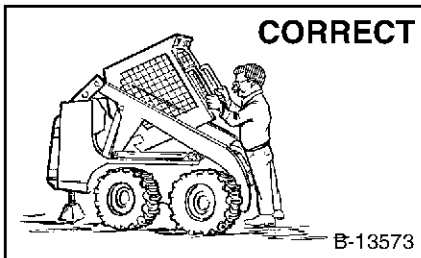

 
Use the correct procedure to lift or lower operator cab.

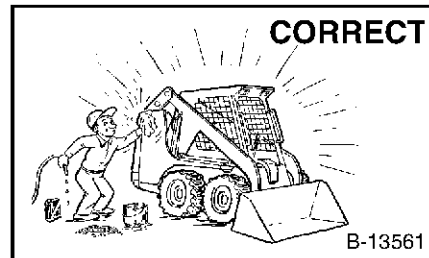

 
Cleaning and maintenance are required daily.

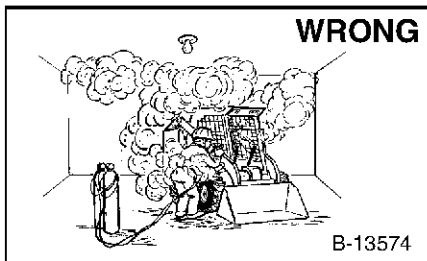

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

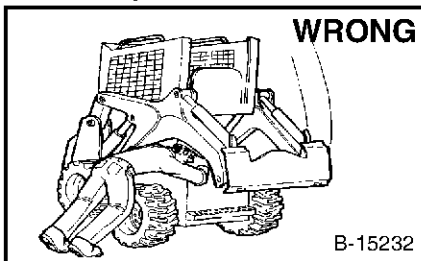

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

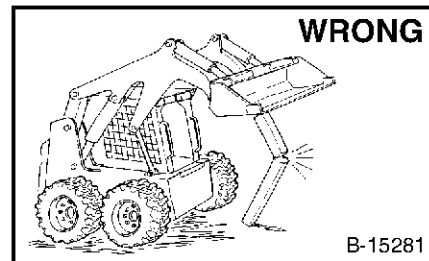

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

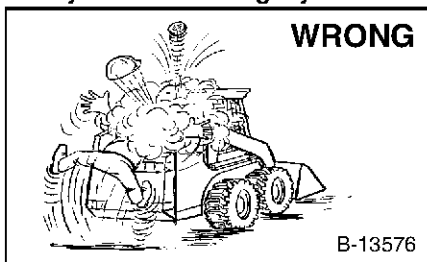

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

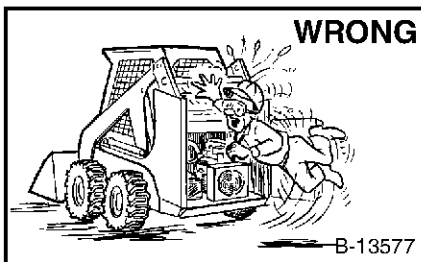

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW03-0805

Dealer Copy -- Not for Resale



Bobcat®

ALPHABETICAL INDEX

ACTUATORS	10-1	LIFT ARM LINK	5-1
ACTUATOR VOLTAGE TEST	10-1	LIFT ARMS	5-1
A.H.C. COMPONENTS	10-1	LIFT ARM BY-PASS CONTROL VALVE	2-1
A.H.C./PWM CONTROLLER	10-1	LIFT ARM STABILIZER BAR	5-1
A.H.C. HANDLE	10-1	LIFT ARM SUPPORT DEVICE	1-1
A.H.C. STEERING LEVER	10-1	LIFT CYLINDER(S)	2-1
AIR CLEANER HOUSING	7-1	LIFT LOCK BY-PASS VALVE	2-1
AIR CLEANER SERVICE	1-1	LIFTING AND BLOCKING THE LOADER	1-1
ALTERNATOR	6-1	LOADER SPECIFICATIONS	9-1
ALTERNATOR BELT	1-1	LUBRICATION OF THE BOBCAT LOADER	1-1
AXLE, SPROCKET AND BEARINGS	4-1		
AXLE SEAL	4-1		
		MAIN RELIEF VALVE	2-1
BATTERY	6-1	MONITOR SERVICE CODES	8-1
BICS™ SYSTEM CONTROLLER	8-1	MOTOR CARRIER	3-1
BICS™ VALVE	2-1, 10-1		
BLOWER FAN	7-1	OIL COOLER	3-1, 7-1
BLOWER HOUSING/FAN GEARBOX	7-1	OIL PUMP	7-1
BOBCAT INTERLOCK		OPERATOR CAB	1-1, 5-1
CONTROL SYSTEM (BICS™)	8-1, 10-1	OPERATOR CAB GAS CYLINDER	5-1
BOB-TACH	5-1	OPERATOR SEAT	5-1
BOSS® DIAGNOSTIC TOOL	8-1	OPERATION SENSING SYSTEM UNIT	8-1
BOSS® INSTRUMENT PANEL	8-1		
BRAKE DISC	4-1		
		PWM CONTROL HANDLE	8-1
CAMSHAFT BEARING	7-1	PWM ELECTRIC SOLENOID	8-1
CHAINCASE FLUID	4-1	PWM MODULE	8-1
CONNECTING ROD	7-1	PWM TROUBLESHOOTING	8-1
CONNECTING ROD GUIDE BUSHING	7-1	PARKING BRAKE PEDAL	4-1
CONTROL VALVE	2-1	PEDAL INTERLOCK LINKAGE	2-1
CRANKSHAFT	7-1	PISTON AND CONNECTING ROD	7-1
CRANKSHAFT GEAR MOUNTING BOLT	7-1	POSITIVE CRANKCASE VENTILATION SYSTEM	7-1
CYLINDER LINERS	7-1		
CYLINDER HEAD	7-1		
		REAR AUXILIARY CONVERTER	2-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	REAR CHAINCASE COVER	4-1
DRIVE BELT	3-1	REAR COVER SEAL	7-1
DRIVE BELT SHIELD	3-1	REAR DOOR	5-1
DRIVE BELT TENSIONER PULLEY	3-1	REAR GRILL	5-1
DRIVE CHAIN	4-1	RECONDITIONING THE ENGINE	7-1
DUETZ ENGINE TOOLS	7-1	RELAY SWITCHES	6-1
		REMOTE START SWITCH	1-1
ELECTRICAL/HYDRAULIC		ROCKER ARM AND SHAFT	7-1
CONTROLS REFERENCE	8-1	RPM SENSOR	8-1
ELECTRICAL SYSTEM INFORMATION	6-1		
ENGINE	7-1	SEAT BAR	5-1
ENGINE MOUNTS	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
ENGINE COOLING SYSTEM	1-1	SEAT BAR SENSOR	8-1
ENGINE LUBRICATION SYSTEM	1-1	SEAT SENSOR	8-1
ENGINE MUFFLER	7-1	SENDER AND SENSOR	8-1
ENGINE SPECIFICATIONS	9-1	SERVICE SCHEDULE	1-1
ENGINE SPEED CONTROL	7-1	SPRING LOADED DRIVE BELT	
ENGINE TORQUE	9-1	TENSIONER PULLEY	3-1
		STANDARD INSTRUMENT PANEL	6-1
FAN DRIVE TENSION PULLEY	7-1	STARTER	6-1
FAN GEARBOX	1-1, 7-1	STOPPING THE BOBCAT LOADER	1-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	STEERING LEVERS	3-1
FLYWHEEL	7-1	STEERING LINKAGE	3-1
FLYWHEEL HOUSING	7-1	SWITCH HANDLE	10-1
FRONT CHAINCASE COVER	4-1		
FRONT COVER	7-1	TILT CYLINDER	2-1
FRONT LIGHTS	6-1	TILT LOCK VALVE	2-1
FRONT SIDE PANEL	2-1	TIMING BELT	7-1
FUEL INJECTOR	7-1	TIRE MAINTENANCE	1-1
FUEL INJECTION PUMP	7-1	TORQUE SPECIFICATIONS FOR BOLTS	9-1
FUEL SYSTEM	1-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
FUEL TANK	5-1	TOWING THE LOADER	1-1
		TRACTION LOCK	8-1
GLOW PLUGS	7-1	TRACTION LOCK CONTROL SYSTEM	8-1
		TRANSPORTING THE LOADER	1-1
HYDRAULIC CONNECTION SPECIFICATIONS	9-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1, 10-1
HYDRAULIC CONTROL VALVE (AHC)	2-1, 10-1	TROUBLESHOOTING	
HYDRAULIC CYLINDER	2-1	THE BOSS® & L.C.D. DISPLAY	8-1
HYDRAULIC FILTER HOUSING	2-1		
HYDRAULIC FLUID RESERVOIR	2-1	U.S. TO METRIC CONVERSION	9-1
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	9-1	VALVE CLEARANCE	7-1
HYDRAULIC/HYDROSTATIC SYSTEM	1-1	VALVE TIMING	7-1
HYDRAULIC/HYDROSTATIC BRACKET	2-1		
HYDRAULIC/HYDROSTATIC HOUSING	2-1	WATER PUMP	7-1
HYDRAULIC PUMP	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDROSTATIC MOTOR	3-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		



Thank you very much
for your reading.
Please click here
to get more information.