
L175, C175 REPAIR MANUAL

COMPLETE CONTENTS

| | |
|--|----|
| SECTION 00 - GENERAL INFORMATION..... | 3 |
| SECTION 10 - ENGINE..... | 4 |
| SECTION 27 - TRACKS AND MOTORS..... | 6 |
| SECTION 29 - HYDROSTATIC TRANSMISSION..... | 7 |
| SECTION 33 - BRAKES AND CONTROLS..... | 9 |
| SECTION 35 - HYDRAULIC SYSTEM..... | 10 |
| SECTION 37 - TOWING HOOKS AND BALLASTING..... | 12 |
| SECTION 39 - FRAMES..... | 12 |
| SECTION 44 - AXLES AND WHEELS..... | 13 |
| SECTION 50 - CAB CLIMATE CONTROL..... | 14 |
| SECTION 55 - ELECTRICAL SYSTEM..... | 15 |
| SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)..... | 17 |
| SECTION 88 - ACCESSORIES..... | 18 |
| SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS..... | 19 |

The following pages are the collation of the contents pages from each section and chapter of the L175/C175 Repair Manual. Complete Repair Manual part # 87630289.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the L175 Skid Steer and C175 Track Loader.

NOTES

SECTION 00 – GENERAL INFORMATION

BOOK 1 - 87634727

CONTENTS

| Section | Description | Page |
|---------|--|-------|
| | Introduction | 00-2 |
| | About Improvements | 00-2 |
| | Company Policy | 00-3 |
| | Parts and Accessories | 00-3 |
| | Model Codes | 00-3 |
| | Precautionary Statements | 00-4 |
| | Safety Precaution Information | 00-5 |
| | General Safety Information | 00-7 |
| | Machine Model and Serial Number Location | 00-9 |
| | Engine Model and Serial Number Location | 00-9 |
| | Hardware Torque Specifications | 00-10 |
| | Installation of Adjustable Fittings in Straight Thread O Ring Bosses | 00-12 |
| | Standard Torque Data for Hydraulic Tubes and Fittings | 00-12 |
| | Pipe Thread Fitting Torque | 00-13 |
| | Lubricants and Coolants | 00-13 |
| | Sealants | 00-13 |
| | Properly Support a Raised Machine | 00-14 |
| | Properly Support Boom on Boom Lock Pins | 00-14 |
| | Raising Boom Without Hydraulic Oil Flow | 00-14 |
| | Raising Boom Without Battery Voltage (12V) | 00-16 |
| | Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins | 00-17 |
| | Major Unit Overhaul | 00-18 |
| | Cab and Boom Tilt Procedure | 00-19 |
| | Craning the Skid Steer | 00-25 |
| | Special Tools | 00-28 |
| | Specifications | 00-29 |
| | Dimensions | 00-35 |
| | Cab and Boom Tilt Procedure (Cab Upgrade Machines Only)..... | 00-37 |

SECTION 10 – ENGINE

Book 1 - 87634727

Chapter 1 – L175 - N844LT, C175 - N844LT

CONTENTS

| Section | Description | Page |
|-----------|--|-------|
| 10 000 | General Engine Information | 10-3 |
| | General Description | 10-3 |
| | Engine Component Descriptions | 10-3 |
| | Engine Model and Serial Number Location | 10-5 |
| | Turbocharger Lubrication | 10-5 |
| | Safety Precautions | 10-6 |
| | General Engine Specifications | 10-7 |
| | Troubleshooting | 10-11 |
| | L175 - Excessive Oil Consumption | 10-15 |
| | Specifications - Service Standards | 10-17 |
| | Torque Specifications | 10-21 |
| | Engine Components Electrical Diagram | 10-22 |
| 10 001 10 | Engine Removal | 10-23 |
| 10 001 53 | Engine Disassembly Sequence | 10-28 |
| | Engine Component Maintenance | 10-36 |
| 10 101 55 | Valve Seat | 10-39 |
| 10 101 56 | Cylinder Block | 10-41 |
| 10 105 22 | Piston and Piston Rings | 10-42 |
| | Connecting Rod | 10-45 |
| 10 103 10 | Bearing Holder | 10-47 |
| | Front Crankshaft Bearing (Bushing) | 10-48 |
| 10 103 30 | Crankshaft | 10-50 |
| 10 103 76 | Flywheel and Ring Gear | 10-52 |
| 10 106 40 | Camshaft Assembly | 10-52 |
| 10 106 66 | Camshaft Gear and Bearing Assembly | 10-53 |
| | Timing Gear | 10-54 |
| 10 304 41 | Oil Pump | 10-54 |
| 10 304 10 | Oil Filter | 10-55 |
| 10 402 28 | Water Pump Assembly and Thermostat Housing | 10-55 |
| 10 402 30 | Thermostat | 10-55 |
| 10 230 24 | Governor | 10-57 |
| | Governor Operation | 10-59 |

SECTION 10 - ENGINE

| | | |
|-----------|--|--------|
| 10 304 38 | Engine Reassembly Sequence | 10-61 |
| | Crankshaft and Bearing Holder Assembly | 10-62 |
| | Rear Oil Seal | 10-63 |
| | Backplate/Flywheel Housing | 10-63 |
| | Flywheel | 10-63 |
| | Piston and Connecting Rod | 10-64 |
| | Oil Intake and Oil Strainer | 10-64 |
| | Oil Sump | 10-64 |
| | Dipstick and Tube | 10-64 |
| | Front Plate | 10-64 |
| | Idler Gear and Oil Pump Assembly | 10-66 |
| | Timing Gear Case Installation | 10-66 |
| | Crankshaft Pulley | 10-66 |
| | Injection Pump Installation | 10-66 |
| | Adjusting the Fuel Injection Timing | 10-67 |
| | Spill Timing Procedure | 10-68 |
| 29 100 50 | Reinstallation of Engine into Skid Steer Frame | 10-75 |
| | How to Operate the Engine After Overhaul | 10-77 |
| | Cooling System | 10-78 |
| | Cooling System Operation | 10-78 |
| | Water Pump Assembly and Thermostat Housing | 10-79 |
| | Radiator | 10-80 |
| | Fuel System | 10-82 |
| | Fuel Specifications | 10-82 |
| | Diesel Fuel | 10-82 |
| | Diesel Fuel Storage | 10-82 |
| | Fuel System Components | 10-83 |
| | Fuel Gauge | 10-84 |
| | Cold Start Aid | 10-85 |
| | Fuel Filter System | 10-85 |
| | Priming the Fuel System | 10-86 |
| | Fuel System Testing | 10-87 |
| | Fuel System Components | 10-90 |
| 10 236 08 | Fuel Injection Timing | 10-96 |
| | Turbocharger - L175 N844LT Engine | 10-101 |
| 10 250 30 | Turbocharger Removal | 10-103 |
| | Miscellaneous Engine Electrical | 10-116 |
| 10 223 10 | Shut-off Solenoid | 10-117 |
| | Special Tools | 10-119 |
| | Labor Guide | 10-120 |

SECTION 27 - TRACKS
CHAPTER 1 - TRACKS, MOTORS

Book 2 - 87634730

CONTENTS

| Section | Description | Page |
|---------|--|-------|
| 27 000 | Specifications..... | 27-3 |
| | Special Torques..... | 27-3 |
| | Wheel Hub Housing - Remove..... | 27-4 |
| | Wheel Hub Housing - Install..... | 27-5 |
| | Drive Sprocket - Remove..... | 27-6 |
| | Drive Sprocket - Install..... | 27-8 |
| | Rubber Track - Remove..... | 27-10 |
| | Rubber Track - Install..... | 27-13 |
| | Rubber Track - Tension Adjust..... | 27-14 |
| | Track Tension Mechanism - Remove..... | 27-16 |
| | Track Tension Mechanism - Install..... | 27-17 |
| | Track Rdler - Remove..... | 27-18 |
| | Track Roller - Install..... | 27-19 |
| | Idler Wheel - Remove..... | 27-20 |
| | Idler Wheel - Install..... | 27-22 |
| | Track Drive Motor - Remove..... | 27-23 |
| | Track Drive Motor - Install..... | 27-24 |
| | Track Drive Motor - Disassembly..... | 27-26 |
| | Track Drive Motor - Assembly..... | 27-44 |

SECTION 29 - HYDROSTATIC TRANSMISSION

Chapter 1 - Neutralizer, Pumps, Motors

Book 2 - 87634730

CONTENTS

| Section | Description | Page |
|-----------|--|-------|
| 29 100 | General Information | 29-3 |
| | Operation | 29-3 |
| | Specifications | 29-5 |
| 29 100 01 | Troubleshooting | 29-6 |
| | Hydrostatic Drive System Test | 29-8 |
| | Hydrostatic System Oil Flow | 29-11 |
| | Hydrostatic Charge System Pressure Test | 29-14 |
| | Hydrostatic Pump Case Drain Test | 29-15 |
| | Hydrostatic Pump High Pressure Test | 29-18 |
| | Hydrostatic Pump Efficiency Test | 29-20 |
| | Hydrostatic Motor Case Drain Test | 29-22 |
| | Hydrostatic Motor Efficiency Test | 29-23 |
| | Hydraulic, Hydrostatic System Air Ingress Test | 29-25 |
| | Hydrostatic Pumps | 29-27 |
| 29 100 40 | Hydrostatic Pump Removal | 29-27 |
| 29 100 46 | Hydrostatic Pump Disassembly | 29-31 |
| | Hydrostatic Pump Parts Inspection | 29-36 |
| | Hydrostatic Pump Reassembly | 29-41 |
| | Hydraulic System Pump Installation (Without High Flow) | 29-47 |
| | Hydraulic System Pump/High Flow Pump Installation | 29-49 |
| | Hydrostatic Pump Reinstallation | 29-54 |
| | Hydrostatic Motor | 29-58 |
| 29 100 60 | Hydrostatic Motor Removal | 29-58 |
| 29 100 66 | Hydrostatic Motor Disassembly | 29-62 |
| | Hydrostatic Motor Parts Inspection | 29-67 |
| | Hydrostatic Motor Reassembly | 29-70 |
| | Hydrostatic Motor Reinstallation | 29-79 |
| | Hydraulic System Cleaning Procedure | 29-85 |
| | Start-up Procedure After Rebuild (After Pump or Motor Replacement) | 29-88 |
| | Charge Check Valve | 29-90 |
| 29 100 36 | Charge Check Valve Removal and Replacement | 29-90 |

SECTION 29- HYDROSTATIC TRANSMISSION

| | | |
|-----------|--|--------|
| 29 100 | Steering System | 29-91 |
| | Hydrostatic System Controls | 29-91 |
| 29 130 30 | Neutralizer Assembly | 29-93 |
| | Left Control Handle With No Boom Hand Control | 29-97 |
| 29 100 10 | Left Control Handle With No Boom Hand Control Removal | 29-97 |
| 29 100 10 | Left Control Handle With No Boom Hand Control Disassembly | 29-97 |
| | Left Control Handle With No Boom Hand Control Inspection | 29-98 |
| | Left Control Handle With No Boom Hand Control Reassembly | 29-98 |
| | Left Control Handle With No Boom Hand Control Reinstallation | 29-98 |
| 29 100 11 | Left Control Handle With Boom Hand Control | 29-100 |
| | Left Control Handle With Boom Hand Control Removal | 29-100 |
| 29 100 10 | Left Control Handle With Boom Hand Control Disassembly | 29-101 |
| | Left Control Handle With Boom Hand Control Inspection | 29-102 |
| | Left Control Handle With Boom Hand Control Reassembly | 29-103 |
| | Left Control Handle With Boom Hand Control Reinstallation | 29-104 |
| | Right Control Handle With Auxiliary or Bucket Control | 29-106 |
| 29 100 15 | Right Control Handle With Auxiliary or Bucket Control Removal | 29-106 |
| 29 100 15 | Right Control Handle With Auxiliary or Bucket Control Disassembly | 29-107 |
| | Right Control Handle With Auxiliary or Bucket Control Inspection | 29-109 |
| | Right Control Handle With Auxiliary or Bucket Control Reassembly | 29-110 |
| | Right Control Handle With Auxiliary or Bucket Control Reinstallation | 29-113 |
| 29 130 06 | Drive Control Adjustment Procedure | 29-115 |
| 29 130 06 | Neutral Adjustment | 29-116 |
| | Labor Guide | 29-118 |
| | Machines Equipped With ISO Pattern Pilot Control..... | 29-121 |
| | Pilot Control Travel System Overview..... | 29-121 |
| | Specifications..... | 29-142 |
| | Troubleshooting..... | 29-143 |
| | Check 1 - Checking the DA Pressure..... | 29-144 |
| | Check 2- Checking Charge Pressure/Flow..... | 29-146 |
| | Check 3- Checking Circuit Relief Valve Pressure..... | 29-147 |
| | Pump Adjustments..... | 29-148 |
| | Pump Removal..... | 29-149 |
| | Pump Installation..... | 29-153 |
| | Pump Disassembly..... | 29-156 |
| | Pump Assembly..... | 29-173 |
| | Pilot Control Travel Lever Removal..... | 29-189 |
| | Pilot Control Travel Lever Installation..... | 29-193 |
| | Illustration - Hydrostatic System (Machines Equipped With Pilot Controls)..... | 29-195 |
| | Procedure to Bleed Air From the Pilot Control Hydraulic System..... | 29-196 |

SECTION 33 - BRAKES AND CONTROLS

CHAPTER 1 - PARKING BRAKE

Book 2 - 87634730

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 33 110 | Parking Brake Removal..... | 33-3 |
| | Parking Brake Reinstallation..... | 33-4 |
| | Parking Brake Disassembly..... | 33-5 |
| | Parking Brake Reassembly..... | 33-6 |
| | Troubleshooting - Parking Brake Button - Testing..... | 33-7 |
| | Troubleshooting - Electrical Solenoid - Testing..... | 33-7 |
| | Brake Valve - Illustration..... | 33-8 |
| | Brake / Two- Speed Valve - Illustration..... | 33-9 |

SECTION 35 - HYDRAULIC SYSTEM

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

Book 3 - 87634731

| Section | Description | Contents | Page |
|-----------|---|----------|-------|
| 35 000 - | | | |
| | General Information..... | | 35-3 |
| | Hydraulic System Compatibility..... | | 35-4 |
| | Boom Cylinder Pivot Pins..... | | 35-6 |
| | Boom Cylinder Pivot Pin Location and Machine Usage..... | | 35-6 |
| | Control Valve Power Beyond..... | | 35-7 |
| | Specifications..... | | 35-8 |
| | Troubleshooting..... | | 35-12 |
| | Auxiliary Boom Hydraulics Troubleshooting..... | | 35-16 |
| | Hydraulic System Testing..... | | 35-18 |
| | Hydraulic System Oil Flow..... | | 35-24 |
| | Control Valve - Bucket Spool Shifted..... | | 35-25 |
| | Control Valve - Boom Spool Shifted..... | | 35-26 |
| | Control Valve - Auxiliary Spool Shifted..... | | 35-27 |
| 35 710 02 | | | |
| | Main System Pressure Tests..... | | 35-28 |
| | Checking Main System Pressure at Boom Cylinders..... | | 35-30 |
| | Checking Main System Pressure at Bucket Cylinders..... | | 35-31 |
| | Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers..... | | 35-32 |
| | Boom Circuit Relief Valve Test..... | | 35-33 |
| | Gear Pump Flow Efficiency Test..... | | 35-35 |
| | Boom and Bucket Spool Lock Solenoid Test..... | | 35-39 |
| | Hydraulic, Hydrostatic System Air Ingress Test..... | | 35-41 |
| | Control Valve Specifications..... | | 35-43 |
| 35 724 50 | | | |
| | Control Valve Removal..... | | 35-44 |
| | Control Valve Disassembly and Inspection..... | | 35-45 |
| | Control Valve Parts Inspection..... | | 35-49 |
| | Control Valve Reassembly..... | | 35-50 |
| | Control Valve Reinstallation..... | | 35-53 |
| | Hydraulic Pump Specifications..... | | 35-54 |
| 35 710 10 | | | |
| | Hydraulic Pump Removal..... | | 35-55 |
| 35 710 20 | | | |
| | Hydraulic Pump Removal/Disassembly (Without High Flow)..... | | 35-56 |
| | High Flow Pump Parts Inspection..... | | 35-58 |
| | Hydraulic Pump Parts Inspection..... | | 35-59 |
| | Hydraulic Pump Reassembly/Installation (Without High Flow)..... | | 35-61 |
| | Hydraulic Pump and High Flow Pump Reassembly/Installation..... | | 35-64 |
| | New Hydraulic Pump Installation (Without High Flow)..... | | 35-70 |
| | New Hydraulic Pump/High Flow Pump Installation..... | | 35-72 |
| | Gear Pump Start-up Procedure..... | | 35-78 |
| | Cylinders, Boom and Bucket..... | | 35-79 |
| 35 710 10 | | | |
| | Boom Cylinder Removal..... | | 35-81 |
| 35 730 18 | | | |
| | Boom Cylinder Disassembly..... | | 35-83 |
| | Boom Cylinder Parts Inspection..... | | 35-84 |
| | Boom Cylinder Reassembly..... | | 35-85 |
| | Boom Cylinder Reinstallation..... | | 35-87 |

SECTION 35- HYDRAULIC SYSTEM

| | | |
|--|---|--------|
| 35 730 10 | Bucket Cylinder Removal..... | 35-87 |
| 35 730 13 | Bucket Cylinder Disassembly..... | 35-88 |
| | Bucket Cylinder Parts Inspection..... | 35-89 |
| | Bucket Cylinder Reassembly..... | 35-90 |
| | Bucket Cylinder Reinstallation..... | 35-92 |
| | Pedal Controls..... | 35-93 |
| 35 724 16 | Pedal Removal (With Boom and Bucket Pedal Controls)..... | 35-93 |
| | Pedal Inspection (With Boom and Bucket Pedal Controls)..... | 35-93 |
| | Pedal Reinstallation (With Boom and Bucket Pedal Controls)..... | 35-95 |
| 35 724 16 | Pedal Removal (With Boom and Bucket Hand Controls)..... | 35-98 |
| | Pedal Inspection (With Boom and Bucket Hand Controls)..... | 35-99 |
| | Pedal Reinstallation (With Boom and Bucket Hand Controls)..... | 35-100 |
| 35 300 | Hydraulic Cooling, Filter, Reservoir System..... | 35-103 |
| | Filter System..... | 35-104 |
| | Filter Removal..... | 35-104 |
| 35 705 05 | Base Removal..... | 35-104 |
| | Reassembly..... | 35-105 |
| | Oil Cooler..... | 35-105 |
| 35 300 10 | Oil Cooler Removal..... | 35-105 |
| | Oil Cooler Reassembly..... | 35-106 |
| 35 300 | Oil Reservoir..... | 35-106 |
| 35 300 10 | Oil Reservoir Removal..... | 35-107 |
| | Oil Reservoir Reinstallation..... | 35-108 |
| | Adapting Attachments..... | 35-109 |
| | Labor Guide..... | 35-110 |
| Machines Equipped With Pilot Controls | | |
| | Specifications..... | 35-111 |
| | Loader Function Troubleshooting..... | 35-112 |
| | Pilot Pressure Test..... | 35-113 |
| | Illustration - Loader Control..... | 35-114 |
| | Right Control Handle - Removal..... | 35-115 |
| | Right Control Handle - Installation..... | 35-118 |
| | Hydraulic Schematic - Frame 1- (Mechanical Control Machines)..... | 35-120 |
| | Hydraulic Schematic - Frame 2- (Mechanical Control Machines)..... | 35-121 |
| | Hydraulic Schematic - Frame 3- (Mechanical Control Machines)..... | 35-122 |
| | Hydraulic Schematic - Frame 4- (Mechanical Control Machines)..... | 35-123 |
| | Hydraulic Schematic - Frame 5- (Mechanical Control Machines)..... | 35-124 |
| | Hydraulic Schematic - Frame 6- (Mechanical Control Machines)..... | 35-125 |
| | Hydraulic Schematic - Frame 7- (Mechanical Control Machines)..... | 35-126 |
| | Hydraulic Schematic - Frame 8- (Pilot Control Machines)..... | 35-127 |
| | Hydraulic Schematic - Frame 9- (Pilot Control Machines)..... | 35-128 |
| | Hydraulic Schematic - Frame 10- (Pilot Control Machines)..... | 35-129 |
| | Hydraulic Schematic - Frame 11- (Pilot Control Machines)..... | 35-130 |
| | Hydraulic Schematic - Frame 12- (Pilot Control Machines)..... | 35-131 |
| | Hydraulic Schematic - Frame 13- (Pilot Control Machines)..... | 35-132 |
| | Hydraulic Schematic - Frame 14- (Pilot Control Machines)..... | 35-133 |
| | Hydraulic Schematic - Frame 15- (Pilot Control Machines)..... | 35-134 |
| | Hydraulic Schematic - Frame 16- (Pilot Control Machines)..... | 35-135 |

SECTION 37 – TOWING HOOKS AND BALLASTING

BOOK 3 - 87634731

Chapter 1 – Rear Counterweights

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 37 140 10 | Rear Counterweights | 37-2 |
| 37 140 12 | Rear Counterweight Support Removal | 37-2 |

SECTION 39 – FRAMES

BOOK 3 - 87634731

Chapter 1 – Lower Main, ROPS

CONTENTS

| Section | Description | Page |
|-----------|--|-------|
| | General Information | 39-2 |
| | ROPS | 39-2 |
| | ROPS Frame | 39-2 |
| 90 152 46 | ROPS Removal | 39-2 |
| | ROPS Reinstallation | 39-8 |
| | Labor Guide | 39-11 |
| | ROPS Removal (Cab Upgrade Machines Only)..... | 39-12 |
| | ROPS Installation (Cab Upgrade Machines Only)..... | 39-24 |

SECTION 44 - AXLES AND WHEELS

CHAPTER 1 - AXLES

BOOK 3 - 87634731

CONTENTS

| Section | Description | Page |
|----------------|---------------------------------------|-------------|
| 44 100 | General Information..... | 44-2 |
| | Specifications..... | 44-4 |
| | Troubleshooting..... | 44-5 |
| | Testing..... | 44-7 |
| 44 106 | Axles..... | 44-8 |
| 44 106 10 | Axle Housing Assembly Removal..... | 44-8 |
| 44 106 16 | Axle Disassembly..... | 44-9 |
| | Axle Parts Inspection..... | 44-11 |
| | Axle Reassembly..... | 44-12 |
| | Axle Housing Reinstallation..... | 44-14 |
| | Final Drive..... | 44-16 |
| 44 106 48 | Drive Chain and Sprocket Removal..... | 44-16 |
| | Final Drive Parts Inspection..... | 44-17 |
| | Final Drive Reassembly..... | 44-18 |
| | Drive Chain - Tension Adjust..... | 44-20 |
| 44 511 | Tire/Wheels..... | 44-22 |
| | Labor Guide..... | 44-24 |

SECTION 50 - CAB CLIMATE CONTROL
CHAPTER 1 - HEATER/DEF ROSTER/AIR CONDITIONER
 Book 3 - 87634731
CONTENTS

| Section | Description | Page |
|---------|--|-------|
| 50 100 | Heater/Defroster (Cab)..... | 50-2 |
| | Labor Guide..... | 50-8 |
| | Air Conditioning System Special Tools..... | 50-9 |
| | Air Conditioning System General Specifications..... | 50-11 |
| | Air Conditioning System Discharging and Evacuate and Recovery..... | 50-13 |
| | Air Conditioning System Charging..... | 50-19 |
| | Compressor Removal..... | 50-21 |
| | Compressor Installation..... | 50-23 |
| | Compressor Oil Level Check..... | 50-25 |
| | Compressor Belt Measure and Tension Adjust..... | 50-28 |
| | Compressor Magnetic Clutch Disassemble..... | 50-29 |
| | Compressor Magnetic Clutch Assembly..... | 50-37 |
| | Air Conditioning System Removal..... | 50-43 |
| | Air Conditioning System Installation..... | 50-45 |
| | Air Conditioning System Condenser Removal..... | 50-46 |
| | Air Conditioning System Condenser Installation..... | 50-47 |
| | Air Conditioning System Evaporator Removal..... | 50-48 |
| | Air Conditioning System Evaporator Installation..... | 50-49 |
| | Receiver/Drier Removal and Installation..... | 50-51 |
| | Air Conditioning System Visual Inspection and Troubleshooting..... | 50-53 |
| | Air Conditioning System Testing..... | 50-54 |
| | Air Conditioning System Leakage Test..... | 50-55 |
| | Air Conditioning System Problem Solving..... | 50-56 |
| | Air Conditioning System Problem Solving..... | 50-57 |

SECTION 55 - ELECTRICAL SYSTEM

Chapter 1 - Instrument Cluster, Circuits, Alternator, and Starter Book 4 - 87634732

Contents

| Section | Description | Page |
|---------|--|-------|
| 55 000 | General Electrical Information | 55- 4 |
| | Definition of Terms | 55-5 |
| | Adapting Attachments Requiring 12V Electrical Power. | 55-7 |
| | Specifications | 55-8 |
| | Wire Identification and Circuit Diagram Legend | 55-12 |
| | Electrical Diagram - Starting System. | 55-13 |
| | Electrical Diagram - Power Distribution | 55-14 |
| | Electrical Diagram -Safety Interlock and Fuel Supply System | 55-15 |
| | Electrical Diagram - Instrument Cluster Monitoring System | 55-16 |
| | Electrical Diagram - Standard Lamps | 55-17 |
| | Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional). | 55-18 |
| | Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional) | 55-19 |
| | Electrical Diagram - Flasher and Turn Signals North America Electrical | 55-20 |
| | Electrical Diagram - Main Electrical European On-Road Regulations. | 55-21 |
| | Electrical Diagram - Boom/Rear Electrical European On-Road Regulations | 55-22 |
| | Electrical Diagram - Right-Hand Handle (Option) Electrical Multifunction Adaptation. | 55-23 |
| | Electrical Diagram - Left-Hand Handle (Options) | 55-24 |
| | Electrical Diagram - Right-Hand Handle (Options) | 55-25 |
| | Electrical Diagram - Glow Plugs | 55-26 |
| | Electrical Diagram - Rotating Beacon (Optional). | 55-27 |
| | Electrical Diagram - Two Speed (Optional). | 55-28 |
| | Electrical Diagram - Horn (Optional) | 55-29 |
| | Electrical Diagram - Accessory Outlet (Optional) | 55-30 |
| | Electrical Diagram - Back-up Alarm (Optional) | 55-31 |
| | Electrical Diagram - Wiper/Washer (Optional). | 55-32 |
| | Electrical Diagram - Auxiliary Hydraulics (Optional) | 55-33 |
| | Electrical Diagram - High Flow (Optional) | 55-34 |
| | Electrical Diagram - Hydraulic Coupler (Optional). | 55-35 |
| | Electrical Diagram - Heating and Air Conditioning (Optional) | 55-36 |
| | Electrical Diagram - Pilot Hydraulic Controls. | 55-37 |
| | Electrical Diagram - Ground Connections | 55-38 |
| | Electrical Diagram - Ground Connections | 55-39 |
| | Wire Identification and Circuit Diagram Legend (Cab Upgrade Machines) | 55-40 |
| | Electrical Diagram - Starting System (Cab Upgrade Machines) | 55-41 |
| | Electrical Diagram - Power Distribution (Cab Upgrade Machines) | 55-42 |
| | Electrical Diagram -Safety Interlock and Fuel Supply System (Cab Upgrade Machines) | 55-43 |
| | Electrical Diagram - Instrument Cluster Monitoring System (Cab Upgrade Machines). | 55-44 |
| | Electrical Diagram - Standard Lamps (Cab Upgrade Machines). | 55-45 |
| | Electrical Diagram - Loader Arm Auxiliary Electrical Control Box (Optional) (Cab Upgrade Machines) | 55-46 |
| | Electrical Diagram - Loader Arm Auxiliary Electric Power Controls (Optional) (Cab Upgrade Machines) | 55-47 |

SECTION 55 - ELECTRICAL SYSTEM

| | | |
|-----------|--|--------|
| | Electrical Diagram - Flasher and Turn Signals North America Electrical (Cab Upgrade Machines) | 55-48 |
| | Electrical Diagram - Main Electrical European On-Road Regulations (Cab Upgrade Machines) | 55-49 |
| | Electrical Diagram - Boom/Rear Electrical European On-Road Regulations (Cab Upgrade Machines) | 55-50 |
| | Electrical Diagram - Work Lamps(Cab Upgrade Machines) | 55-51 |
| | Electrical Diagram - Control Lever Interface (Cab Upgrade Machines) | 55-52 |
| | Electrical Diagram - Left-Hand Handle (Options) (Cab Upgrade Machines) | 55-53 |
| | Right-Hand Handle (Options) (Cab Upgrade Machines) | 55-54 |
| | Electrical Diagram - Grid Heater System (Cab Upgrade Machines) | 55-55 |
| | Electrical Diagram - Rotating Beacon (Optional) (Cab Upgrade Machines) | 55-56 |
| | Electrical Diagram - Two Speed (Optional) (Cab Upgrade Machines) | 55-57 |
| | Electrical Diagram - Horn (Optional) (Cab Upgrade Machines) | 55-58 |
| | Electrical Diagram - Accessory Outlet (Optional) (Cab Upgrade Machines) | 55-59 |
| | Electrical Diagram - Back-up Alarm (Optional) (Cab Upgrade Machines) | 55-60 |
| | Electrical Diagram - Wiper/Washer/Door Switch (Optional) (Cab Upgrade Machines) | 55-61 |
| | Electrical Diagram - Auxiliary Hydraulics (Optional) (Cab Upgrade Machines) | 55-62 |
| | Electrical Diagram - High Flow (Optional) (Cab Upgrade Machines) | 55-63 |
| | Electrical Diagram - Hydraulic Mount Plate (Optional) (Cab Upgrade Machines) | 55-64 |
| | Electrical Diagram - Heating and Air Conditioning (Optional) (Cab Upgrade Machines) | 55-65 |
| | Electrical Diagram - Pilot Hydraulic Controls | 55-66 |
| | Electrical Diagram - Ground Connections (Cab Upgrade Machines) | 55-67 |
| | Electronic Instrument Cluster (EIC) Panel | 55-68 |
| | Electronic Instrument Cluster (EIC) Panel (Cab Upgrade Machines) | 55-69 |
| | Electronic Instrument Cluster Operating Instructions | 55-70 |
| | Electronic Instrument Cluster Troubleshooting | 55-73 |
| | Advanced Instrument Cluster (AIC) Panel (Optional) | 55-77 |
| | Advanced Instrument Cluster (AIC) Panel (Optional) (Cab Upgrade Machines) | 55-78 |
| | Advanced Instrument Cluster Operating Instructions | 55-79 |
| | Advanced Instrument Cluster Troubleshooting | 55-86 |
| 55 100 | Removal, Installation and Wiring of Electrical Components | 55-90 |
| 55 301 40 | Battery Removal and Installation | 55-91 |
| | Cab Fuse Block and Panel Removal and Installation | 55-92 |
| 55 201 15 | Seat Switch Removal | 55-93 |
| | Seat Switch Installation | 55-94 |
| 55 201 14 | Seat Belt Buckle and Switch Assembly Removal and Installation | 55-94 |
| 55 404 20 | Road Light and Work Light Switch Removal and Installation | 55-95 |
| | Engine Fuse and Relay Panel | 55-96 |
| 55 100 34 | Start Interlock Relay Removal and Installation | 55-97 |
| | Engine Fuse Block Removal and Installation | 55-98 |
| 55 100 34 | Preheat Relay Removal and Installation | 55-99 |
| 55 201 76 | Preheat Glow Plug Removal and Installation | 55-100 |
| | Fuel System Components | 55-101 |
| | Electric Fuel Pump | 55-102 |
| 10 210 21 | Electric Fuel Pump Removal | 55-104 |

SECTION 55 - ELECTRICAL SYSTEM

| | | |
|-----------|--|--------|
| 10 223 | Fuel Shutoff Solenoid | 55-104 |
| | Fuel Shutoff Solenoid Testing | 55-104 |
| 10 223 10 | Replacement of Fuel Shutoff Solenoid | 55-105 |
| 55 414 14 | Air Filter Restriction Indicator Switch Removal and Installation | 55-106 |
| 55 414 10 | Engine Coolant Temperature Sender Removal and Installation | 55-106 |
| 55 414 12 | Engine Oil Pressure Switch Removal and Installation | 55-107 |
| 55 414 28 | Hydrostatic Charge Pressure Switch Removal and Installation | 55-107 |
| 55 414 24 | Hydraulic Oil Filter Restriction Switch Removal and Installation | 55-108 |
| 55 414 20 | Hydraulic Oil Temperature Sender Removal | 55-108 |
| | Hydraulic Oil Temperature Sender Installation | 55-109 |
| 35 724 90 | Boom/Bucket Control Valve Spool Lock Solenoid Removal and Installation | 55-110 |
| 55 404 | Road/Work Lights | 55-111 |
| 55 301 | Alternator (55 Amp Version) | 55-114 |
| | Alternator Service Specifications | 55-116 |
| | Alternator - System Testing and Troubleshooting | 55-117 |
| | Initial Tests | 55-120 |
| 55 301 10 | Alternator Removal | 55-125 |
| 55 301 12 | Alternator Disassembly | 55-126 |
| | Alternator Installation | 55-132 |
| 55 201 | Starter | 55-133 |
| | Starter Motor Troubleshooting | 55-134 |
| 55 201 50 | Starter Motor Removal | 55-135 |
| | Starter Motor Disassembly | 55-140 |
| | Starter Motor Inspection and Repair | 55-144 |
| | Starter Motor Reassembly | 55-150 |
| | Starter Motor Installation | 55-153 |
| | Miscellaneous Engine Components | 55-154 |
| | Glow Plugs and Glow Plug Troubleshooting | 55-154 |
| | Oil Pressure Switch | 55-155 |
| | Fuel Shutoff Solenoid | 55-155 |
| | Labor Guide | 55-156 |

SECTION 82 – FRONT LOADER (BOOM AND MOUNTING PLATE)

Chapter 1 – Buckets

Book 4 - 87634732

CONTENTS

| Section | Description | Page |
|-----------|--|-------|
| 82 100 | General Information | 82-2 |
| | Buckets | 82-2 |
| 82 100 77 | Boom Lock Pins and Linkage | 82-3 |
| | Boom | 82-3 |
| 82 100 70 | Attachment Mounting Plate | 82-4 |
| | Boom and Cylinder Pivot Pins | 82-4 |
| | Boom and Cylinder Pivot Pin Location and Machine Usage | 82-4 |
| | Boom and Cylinder Pivot Pins Size | 82-5 |
| 82 100 30 | Pallet Fork | 82-6 |
| 82 100 20 | Utility Fork | 82-7 |
| 82 100 12 | Bucket Cutting Edge (Replacement) | 82-8 |
| 82 100 | Bucket Latch Plate Installation Procedure | 82-9 |
| 82 100 | Dirt Tooth Kit Installation | 82-11 |
| | Bucket Tooth Spacing | 82-13 |
| | Boom Lock Pin/Linkage | 82-15 |
| 82 100 77 | Boom Lock Pin/Linkage Removal | 82-15 |
| | Boom Lock Pin/Linkage Reinstallation | 82-16 |
| | Boom, Upper and Lower Link | 82-18 |
| | Boom, Upper and Lower Link Removal | 82-18 |
| 82 100 70 | Front Boom Mounting Plate Pivot Hub Replacement | 82-24 |
| | Boom, Upper and Lower Link Reinstallation | 82-25 |
| | Attachment Mounting Plate | 82-29 |
| 82 100 70 | Attachment Mounting Plate Removal | 82-29 |
| | Repair/Rebuild Mounting Plate | 82-30 |
| 82 100 74 | Latch Lever and Pin Removal/Repair | 82-30 |
| | Attachment Mounting Plate Parts Inspection | 82-32 |
| | Checking Procedure for Buckets and Attachments | 82-36 |
| | Checking Procedure | 82-38 |
| | Checking the Loader Faceplate | 82-39 |
| | Labor Guide | 82-41 |

SECTION 88 – ACCESSORIES

Chapter 1 – Dealer Installed Options

Book 4 - 87634732

CONTENTS

| Section | Description | Page |
|---------|---|-------|
| 88 100 | General Information | 88-2 |
| | Adapting Attachments Requiring 12V Electrical Power | 88-2 |
| | Hydraulic System Compatibility | 88-5 |
| 90 000 | Arm Pads For Cab Side Panels | 88-7 |
| 90 000 | Armrests for Deluxe Seat | 88-7 |
| 90 000 | Forearm Rests | 88-8 |
| 55 000 | Back-up Alarm | 88-9 |
| 10 300 | Block Heater (Engine) | 88-10 |
| 55 000 | Electric Power Supply (12 Volt, 15 Amp) | 88-11 |
| 10 254 | Exhaust (Engine) | 88-12 |
| 10 254 | Aspirator Precleaner Muffler | 88-12 |
| 35 000 | High Flow Hydraulics | 88-14 |
| | High Flow Hydraulics Troubleshooting | 88-16 |
| | High Flow Hydraulics Component Replacement | 88-18 |
| 55 000 | Horn | 88-25 |
| 90 000 | Shoulder Belt (Seat) | 88-26 |
| 88 000 | Slow-moving Vehicle (SMV) Sign Kit | 88-27 |
| 55 000 | Warning Light (Rotary Beacon) | 88-28 |
| 55 000 | Warning Lights (Four-way Flashers/Turn Signal/Horn) | 88-31 |
| | Labor Guide | 88-35 |

SECTION 90 – PLATFORM, CAB, BODYWORK, AND DECALS

Chapter 1 – Cab and Seat

Book 4 - 87634732

CONTENTS

| Section | Description | Page |
|-----------|---|-------|
| | General Information | 90-2 |
| | Seat and Seat Pan Support | 90-2 |
| 90 152 | Cab Inner Shell | 90-3 |
| 90 120 10 | Seat Removal | 90-3 |
| 90 120 12 | Seat Pan Support Removal | 90-3 |
| | Seat, Switch and Pan Reinstallation | 90-5 |
| | Cab Inner Shell | 90-7 |
| 90 152 34 | Cab Inner Shell Removal | 90-7 |
| 90 152 | Cab Inner Shell Reinstallation | 90-14 |
| 90 108 | Safety Decals | 90-22 |
| | Labor Guide | 90-26 |

