

Z910A, Z920A, Z925A,
Z925A EFI, Z930A, Z950A,
Z960A AND Z970A
ZTRAK™ MOWER



JOHN HARE



COLLECTION

TECHNICAL MANUAL

Z-Trak Pro models Z925A EFI, Z910A, Z920A, Z930A, Z950A, Z960A, Z970A

TM109119 13 AUG 13 (English)



TABLE OF CONTENTS

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 15 - Fuel and Lubricant
- Group 20 - Machine Specifications

Section 20 - ENGINE REPAIR, KAWASAKI

- Group 05 - General Repair FX651V, FX730V, FX751V, FX801V, and FX850V
- Group 10 - Repair FX651V and FX730V
- Group 15 - Repair FX751V, FX801V, and FX850V
- Group 25 - Repair FX921V and FX1000V

Section 25 - ENGINE REPAIR, KOHLER EFI

- Group 05 - Repair

Section 30 - ELECTRICAL REPAIR

- Group 10 - Component Location
- Group 20 - Wire Harness—Standard (Z910A, Z920A, Z925A, Z930A, Z950A) (SN -020000)
- Group 30 - Wire Harness—Standard (Z910A, Z920A, Z925A, Z930A, Z950A) (SN 020001-)
- Group 40 - Wire Harness—EFI Only (Z925A) (SN 020001-)
- Group 50 - Wire Harness—Convenience Package (Z930A, Z950A, Z960A, Z970A)

Section 40 - POWER TRAIN REPAIR

- Group 10 - Component Location
- Group 20 - Repair

Section 50 - ATTACHMENTS REPAIR

- Group 10 - Component Location
- Group 20 - Repair
- Group 30 - Repair (Optional MCS)

Section 60 - MISCELLANEOUS REPAIR

- Group 10 - Wheels
- Group 20 - Operators Station
- Group 30 - Roll Over Protective Structure (ROPS)
- Group 40 - Miscellaneous

Section 220 - ENGINE DIAGNOSIS, TESTS, AND ADJUSTMENTS, KAWASAKI

- Group 05 - Component Location
- Group 10 - Theory of Operation
- Group 15 - Diagnosis
- Group 20 - Tests and Adjustments

Section 225 - ENGINE DIAGNOSIS, TESTS, AND ADJUSTMENTS, KOHLER

- Group 10 - Theory of Operation
- Group 15 - Diagnosis
- Group 20 - Tests and Adjustments

Section 230 - ELECTRICAL DIAGNOSIS, TESTS, AND ADJUSTMENTS

- Group 10 - Theory of Operation
- Group 15 - Theory of Operation (EFI)
- Group 20 - Diagnosis
- Group 25 - Engine Diagnostic Test Codes (EFI)
- Group 30 - Tests and Adjustments
- Group 35 - Tests and Adjustments (EFI)
- Group 40 - Wiring Schematics
- Group 50 - Connector Information

Section 240 - POWER TRAIN DIAGNOSIS, TESTS, AND ADJUSTMENTS

- Group 10 - Theory of Operation
- Group 20 - Diagnosis

Group 30 - Tests and Adjustments

Section 250 - ATTACHMENTS DIAGNOSIS, TESTS, AND ADJUSTMENTS

Group 10 - Theory of Operation

Group 20 - Diagnosis

Group 30 - Tests and Adjustments

Section 299 - SERVICE TOOLS AND KITS

Group 10 - Service Tools and Kits

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**CAUTION:**

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.