

---

# TZ18DA, TZ22DA, TZ24DA, TZ25DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE SYSTEMS .....	4
SECTION 25 - FWD .....	11
SECTION 27 - DIFFERENTIAL AND REAR AXLES .....	13
SECTION 29 - HYDROSTATIC TRANSMISSION .....	14
SECTION 31 - PTO .....	17
SECTION 33 - BRAKES .....	19
SECTION 35 - HYDRAULIC SYSTEM .....	19
SECTION 41 - POWER STEERING .....	23
SECTION 44 - WHEELS .....	25
SECTION 55 - ELECTRICAL SYSTEM .....	26
SECTION 58 - 54CMS-60CMS MID MOUNT MOWER .....	35
SECTION 90 - PLATFORM .....	36

The following pages     an of the contents pages from each section and chapter of the TZ18DA, TZ22DA, TZ24DA, and TZ25DA Tractor Repair Manual. Complete Repair part # 87350100.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TZ18DA, TZ22DA, TZ24DA, TZ25DA Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87350101

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety .....	3
	Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	10
	Ecology and the Environment .....	16
	Helpful Hints .....	16
	Universal Symbols .....	17
	General Information .....	18
	Please Read Carefully .....	18
	Minimum Hardware Tightening Torques .....	19
	Metric Bolt Torque Specifications .....	20
	Lubrication and Maintenance .....	21
	General Information .....	21
	Grease Fittings .....	21
	Chains .....	21
	Lubrication and Maintenance Chart .....	23
	Lubrication Fittings .....	24
	Diesel Fuel .....	24
	Fuel Usage Safety .....	24

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87350101

## Chapter 1 - General Information (Continued)

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	25
	Engine .....	25
	Capacities .....	25
	Cooling System .....	26
	Electrical System .....	26
	Fuel System .....	26
	Brakes .....	27
	Steering .....	27
	Power Take-Off (PTO) .....	27
	Hydraulic Lift Section .....	27
	Transmission Speeds .....	28
	Cast Iron Weights .....	29
	Drawbars .....	29
	3-Point Hitch .....	29
	Tires .....	29
	Wheel Bolt Torques .....	29
	ROPS Attaching Bolt Torques .....	29
	General Dimensions .....	30
	Wheel Tread Settings .....	30
	Liquid Ballast (optional) .....	32
	Tire Pressure .....	32

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87350101

## Chapter 1 - Engine Systems

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 000	Specifications .....	6
	Torque Specifications .....	15
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	General Information - Description of Operation .....	17
	Identification Chart .....	17
	Cylinder Head and Valve Train Components .....	17
	Cylinder Block Assembly .....	19
	Troubleshooting .....	20
	Overhaul .....	26
	Engine Access .....	26
	Disassembly .....	26
	Fuel Injector and Glow Plug .....	29
	Removal .....	29
	Hydraulic Pump .....	30
	Removal .....	30
	Fan, Water Pump and External Oil Tube .....	30
	Removal .....	30
	Fuel Shutoff Solenoid .....	30
	Removal .....	30
	Oil Pressure Switch .....	31
	Removal .....	31
	Temperature Sending Switch and Alternator .....	31
	Removal .....	31
	Throttle Cable .....	31
	Disconnection .....	31
	Support Frame .....	32
	Removal .....	32
	Engine .....	32
	Removal .....	32
	Valve Cover .....	33
	Removal .....	33

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87350101

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Rocker Shaft and Push Rod .....	34
	Removal .....	34
	Cylinder Head .....	34
	Removal .....	34
	Valve Tappet .....	35
	Removal .....	35
	Engine Timing Gear Cover, Timing Gears and Camshaft .....	35
	Timing Gears and Camshaft .....	36
	Removal .....	36
	Oil Sump .....	36
	Removal .....	36
	Oil Suction Pipe and Strainer .....	37
	Removal .....	37
	Connecting Rods, Bearings and Piston .....	37
	Removal .....	37
	Flywheel .....	38
	Removal .....	38
	Backplate and Oil Seal .....	38
	Removal .....	38
	Crankshaft and Main Bearings .....	38
	Removal .....	38
18 110	Cylinder Head .....	39
	Disassembly .....	39
	Inspection and Repair .....	39
	Valve Seats .....	40
	Inspection and Repair .....	40
	Valves .....	40
	Inspection and Repair .....	40
	Valve Guides .....	42
	Inspection and Repair .....	42
	Valve Springs .....	42
	Inspection and Repair .....	42



Thank you very much  
for your reading.  
Please click here  
to get more information.