John Deere 130G (S.N: 1FF130GX_F040608) Excavator Service Repair Manual (TM13348X19)



Covers: 1FF130GX_F040608):,130G

Type: Service Manual **Language:** English

Pages: 576
Format: PDF

Features: Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of


the John Deere 130G (S.N: 1FF130GX_F040608) Excavator Service Repair Manual (TM13348X19)

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- · Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- · Engine Repair
- · Power Train
- Transmission
- Axles
- · Differential
- PTO
- Hydraulic System
- Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- · Ignition and Charging
- Steering
- Brakes
- · Wheels
- Operator's Platform
- Body Panels
- · Disassembly and Assembly
- · Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

Please note this manual is in downloadable PDF format only. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.	

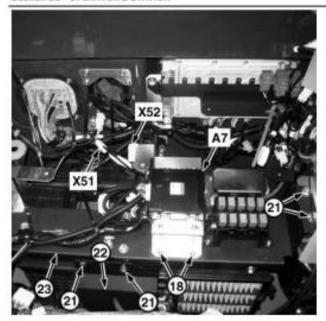

18	Cap Screw (4 used)
21	Cap Screw (7 used)
22	Cover
23	Panel
A7	Air Conditioner Controller (ACF)
X51	Air Conditioner 4-Pin Connector
X52	Air Conditioner 10-Pin Connecto

LEGEND:


Heater and Air Conditioner Panel

Remove cap screws (18) and set air conditioner controller (ACF) (A7) aside. See Cab Harness (W1) Component Location. (Group 9015-10.)

[13] - Install identification tags and disconnect air conditioner 4-pin connector (X51) and air conditioner 10-pin connector (X52). See Heater and Air Conditioner Harness (W41) Component Location. (Group 9015-10.)

[14] - Remove cap screws (21), cover (22), and panel (23).

[15] -

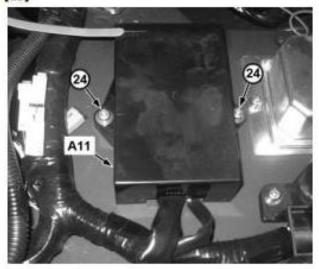

LEGEND:

24 Cap Screw (2 used) A11 Machine Controller

Machine Controller

Remove cap screws (24) and set machine controller (A11) aside.

[16] -



Thank you very much for your reading.

Please click here to get more information.