## John Deere 160GLC (PIN: 1FF160GX\_E055001-) iT4/S3B Excavator Service Repair Manual (TM12345)



**Covers:** 160GLC,1FF160GX\_\_E055001-)

**Type:** Service Manual **Language:** English

Pages: 609 Format: PDF

**Features:** Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of

the John Deere 160GLC (PIN: 1FF160GX\_E055001-) iT4/S3B Excavator Service Repair Manual (TM12345)

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


## **Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- · Engine Tests and Adjustments
- · Engine Repair
- · Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- · Ignition and Charging
- Steering
- Brakes
- · Wheels
- Operator's Platform
- Body Panels
- · Disassembly and Assembly
- · Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

Please note this manual is in <b>downloadable PDF format only.</b> If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.	

## Disassemble and Assemble Propel Gearbox

[1] -

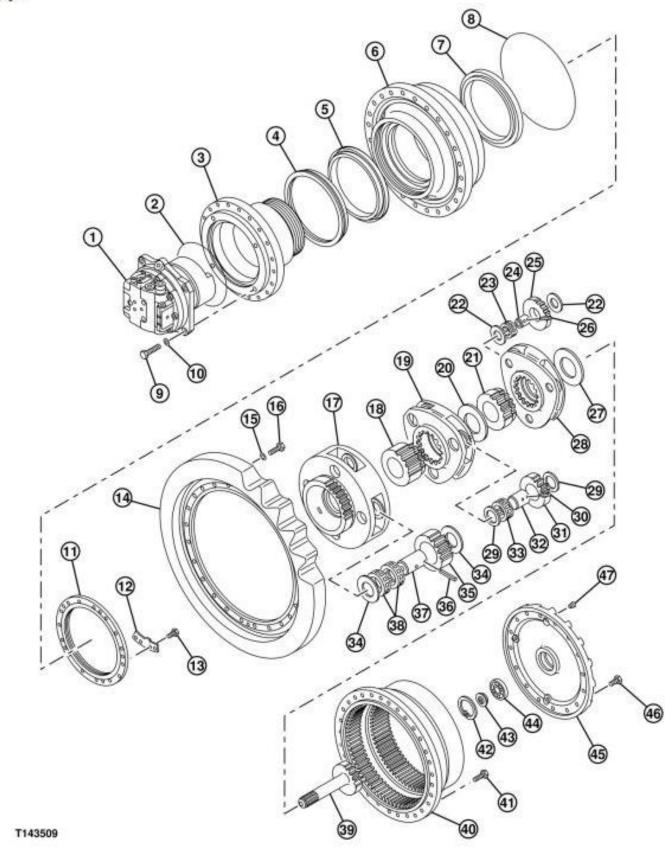

## Propel Motor, Exploded View

LEGEND:

Propel Motor



Thank you very much for your reading.

Please click here to get more information.