

John Deere 160GLC (iT4/S3B) Excavator Diagnostic, Operation and Test Service Manual (TM12342)

450CLC Excavator Diagnostic

OPERATION AND TEST MANUAL

450CLC

TM1924 12APR14 (ENGLISH)

For complete service information also see:

450CLC Excavator Repair TM1925

Alternators and Starting Motors CTM77

Super Caddy Oil Cleanup Procedure CTM310

PowerTech 10.5 L & 12.5 L Diesel
Engines, Level 6 Electronic Fuel Systems with Lucas EUIs CTM188

JDG10274 Ultrasonic Undercarriage Measurement Gauge CTM10001

PowerTech 10.5
Engine

PDF



DOWNLOAD



John Deere Construction and Forestry

Type: Service Manual

Language: English

Pages: 1104

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 160GLC (IT4/S3B) Excavator Diagnostic, Operation and Test Service Manual (TM12342)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Machine Information Center (MIC) Remove and Install


For machine location of machine information center, [See Cab Harness \(W1\) Component Location](#). (Group 9015-10.)

[1] - Disconnect battery ground (-) cable.

[2] - Remove rear cover. [See Rear Cover Remove and Install](#). (Group 9015-20.)

[3] - Disconnect electrical connectors from cover.

[4] -

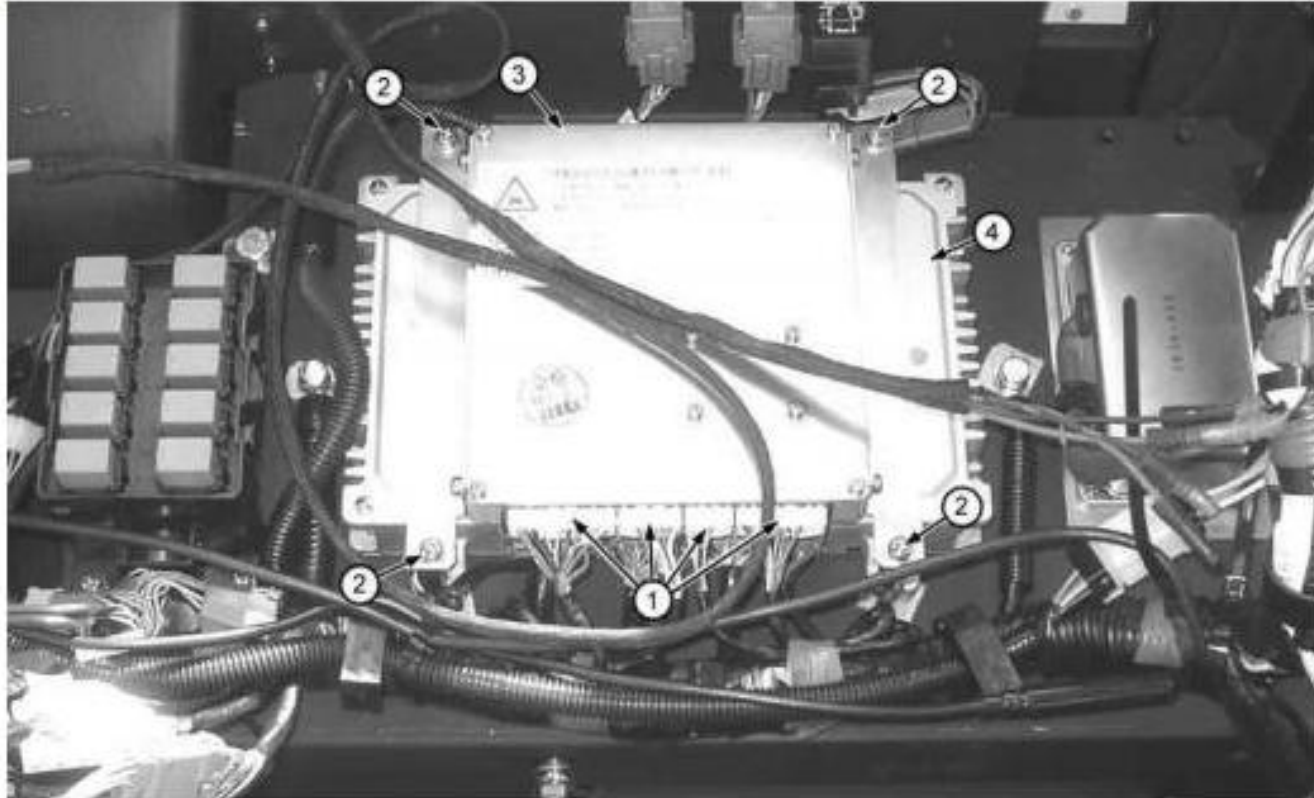

Machine Information Center

LEGEND:

- 1 Electrical Connectors
- 2 Screw (4 used)
- 3 Machine Information Center (MIC)
- 4 Pump and Valve Controller (PVC)

Remove electrical connectors (1).

[5] - Remove screws (2) and machine information center (3).

[6] - Repair or replace parts as necessary.

[7] - Install machine information center (3), screws (2) and connectors (1).

[8] - Install rear cover. [See Rear Cover Remove and Install](#). (Group 9015-20.)

[9] - Connect battery ground (-) cable.



Thank you very much
for your reading.
Please click here
to get more information.