


# John Deere 2140 Tractors All Inclusive Technical Service Manual (tm4373)

**2140 Tractor**

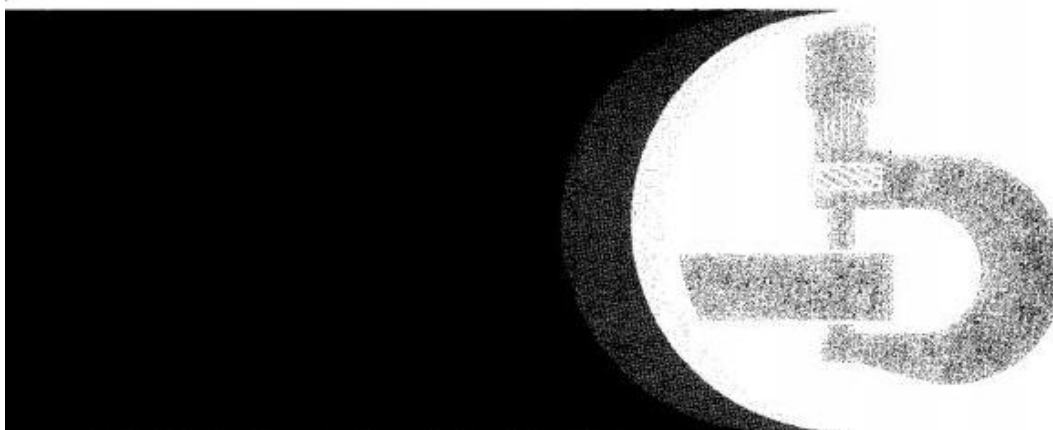

**John Deere Werke Mannheim**  
**John Deere Ibérica S.A. Getafe**  
**TM-4373**

Printed in Germany (English)

**Type:** Service Manual

**Language:** English

**Pages:** 1236

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 2140 Tractors All Inclusive Technical Service Manual (tm4373)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Fan, Fan Guard, and Fan Shroud Remove and Install

[1] - Remove counterweight. [See Counterweight Remove and Install](#). (Group 1749.)

[2] - Remove covers over engine and cooling package.

[3] -




### CAUTION:

*Explosive release of fluids from pressurized cooling system can cause serious burns.*

*Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.*

Drain engine coolant until coolant level is below upper radiator hose. [See Drain Cooling System](#). (Operator's Manual.)

[4] -

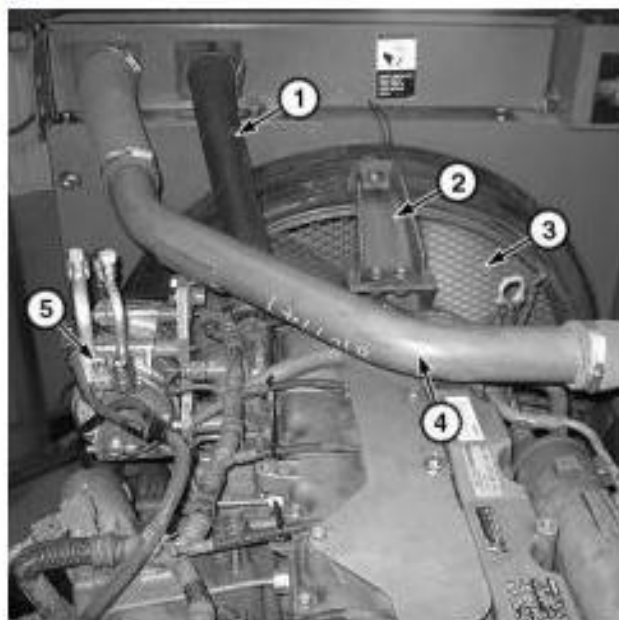

### LEGEND:

- 1 Upper Radiator Hose
- 2 Upper Fan Shroud Bracket
- 3 Fan Guard
- 4 Upper Charged Air Pipe
- 5 Air Conditioner Compressor

### Cooling Package Connections

Disconnect upper radiator hose (1) from radiator.

[5] - Remove upper charged air pipe (4).

[6] - Remove upper fan shroud bracket (2). Record position of isolators and washers for installation.

[7] - Remove fan guard (3).

[8] - Disconnect lower charged air pipe from engine.

[9] - Remove tie bands securing air conditioner compressor hoses to cooling package.



Thank you very much  
for your reading.  
Please click here  
to get more information.