John Deere 2654G,2654GLC (SN.C260001-,D260001) Forestry Excavator Repair Service Manual (TM14036X19)

2654G and 2654GLC Forestry Excavator Repair

(PIN: 1FF2654G_ _C260001—; PIN: 1FF2654G_ _D260001—)



JOHN HARE



REPAIR TECHNICAL MANUAL

2654G and 2654GLC Forestry Excavator (PIN: 1FF2654G__C260001—; PIN: 1FF2654G__D260001—)

TM14036X19 01DEC18 (ENGLISH)

For complette service information also see:



Worldwide Construction and Foresty Division

Covers: 2654G,2654GLC,1FF2654G_,_C260001����;,1FF2654G_,_D26

Type: Service Manual **Language:** English

Pages: 366
Format: PDF

Features: Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of

the John Deere 2654G,2654GLC (SN.C260001-,D260001) Forestry Excavator Repair Service Manual (TM14036X19)

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- · General Information
- Specifications
- · Serial Number Location
- · Engine Specifications
- · Engine Diagnostics
- Engine Tests and Adjustments
- · Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- · Wheels
- Operator's Platform
- Body Panels
- · Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

| Please note this manual is in downloadable PDF format only. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU. | |
|---|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Track Chain Repair to Replace Broken Part

NOTE:


This procedure is to address a broken track pin or broken track link.

Broken Track Pin Replacement

1. Remove three track shoes surrounding damaged area. See Track Shoe Remove and Install. (Group 0130.)

2. NOTE:

All track pins, bushings, and links will be discarded and replaced with new parts.

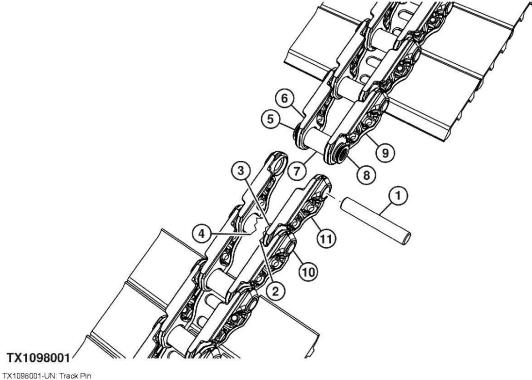

TX1098001-UN: Track Pin LEGEND:

1-Broken Track Pin

2-Bushing

3-Cut Point

4-Cut Point

5-Grind Point

6-Track Link

Remove broken track pin (1).

7-Bushing 8-Grind Point 9-Track Link 10-Track Pin 11-Track Link Assembly

IMPORTANT:

3. Avoid damage to good parts. Use care when operating cutting torch.

Cut bushing (2) and pin at cut points (3 and 4).



Thank you very much for your reading.

Please click here to get more information.