

# John Deere 325SL Backhoe Loader (PIN:1T0325SL\*\*C273920-) Service Repair Technical Manual TM13308X19



**Covers:** 325SL,1T0325SL\*\*C273920-)

**Type:** Service Manual

**Language:** English

**Pages:** 684

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 325SL Backhoe Loader (PIN:1T0325SL\*\*C273920-) Service Repair Technical Manual TM13308X19**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

[13] - Install return springs, washers (3), and snap rings onto pins (4).

[14] - Retract boom lock cylinders and connect hydraulic hoses to boom lock cylinders.


[15] - Connect battery negative (-) ground cable or turn battery disconnect switch (if equipped) to the ON position.

[16] - Start engine and cycle boom locks several times. Raise boom and engage boom locks to check for proper operation.

## Stabilizer Lever Linkage Remove and Install

[1] - Park and prepare machine for service. [See Park and Prepare for Service Safely](#). (Group 0001.)

[2] -

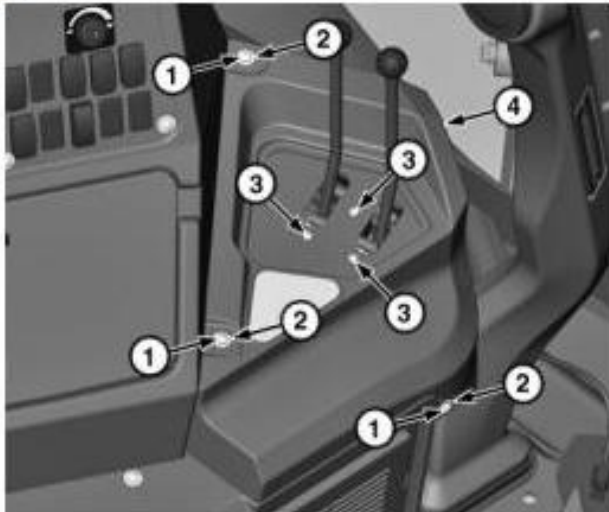

### LEGEND:


- 1 Cap Screw (3 used)
- 2 Washer (3 used)
- 3 Cap Screw (3 used)
- 4 Stabilizer Linkage Access Cover

### Stabilizer Linkage Access Cover

Remove cap screws (1), washers (2), and stabilizer linkage access cover (4).

[3] - Remove cap screws (3) from control plate.

[4] -

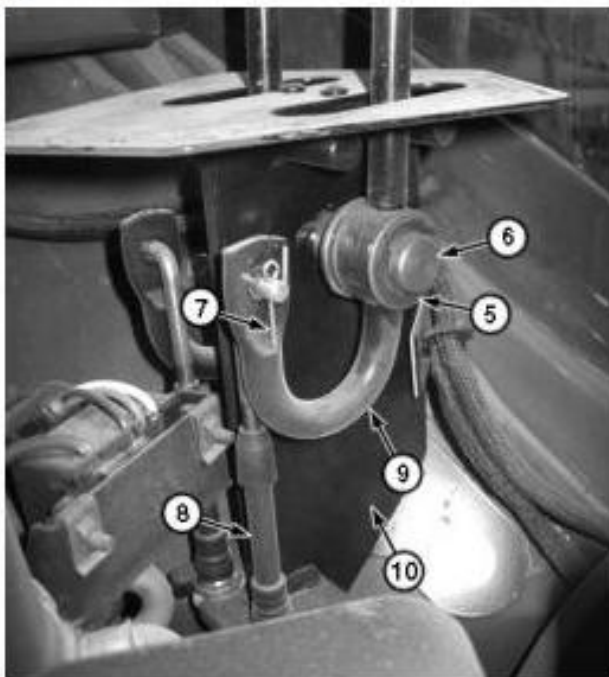

### LEGEND:

- 5 Retaining Ring (2 used)
- 6 Pivot Shaft
- 7 Cotter Pin (2 used)
- 8 Push/Pull Stabilizer Cable (2 used)
- 9 Stabilizer Lever (2 used)
- 10 Stabilizer Lever Mounting Tower

### Stabilizer Levers

Remove retaining rings (5) from the pivot shaft (6).

[5] - Remove cotter pins (7) from the push/pull stabilizer cables (8).



Thank you very much  
for your reading.  
Please click here  
to get more information.