


John Deere 330LC and 370 Excavator Logger (SN.081001-) Service Repair Manual Supplement (TM1911)

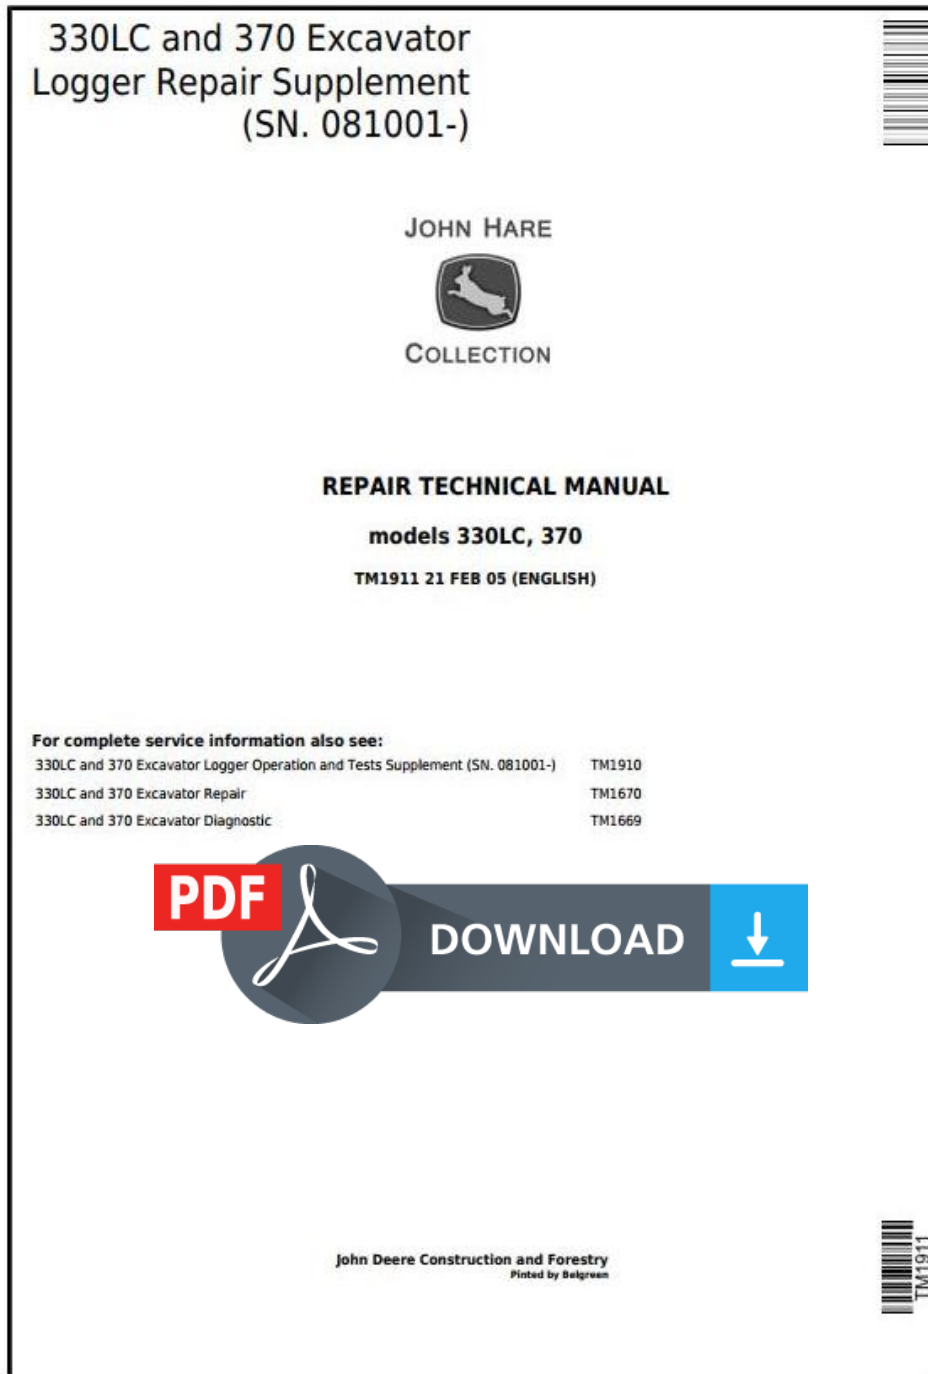

Covers: 081001-);,330LC,370

Type: Service Manual

Language: English

Pages: 384

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 330LC and 370 Excavator Logger (SN.081001-) Service Repair Manual Supplement (TM1911)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Lubrication Lines

Disconnect lubrication lines (1). Cap or plug all open lines and fittings.

[6] -

**LEGEND:**

1 Hydraulic Line (6 used)

Boom Hydraulic Lines (LHG)

Mark and disconnect hydraulic lines (1). Cap or plug all open lines and fittings.

[7] - [Disconnect boom cylinders from boom.](#) (See procedure in Group 3360.)

[8] - Lower boom cylinder onto floor stand.

Floor Stand

To support load of boom and boom cylinder.

[9] - Repeat procedure for second boom cylinder.


[10] -

**Boom Cylinder With Hoist**

Attach boom to hoist. Use protective covering to prevent damage to pin if a chain is used.

Item	Measurement	Specification
Live Heel Grapple		
Boom Assembly	Weight	3900 kg (8600 lb) approximate

[11] -

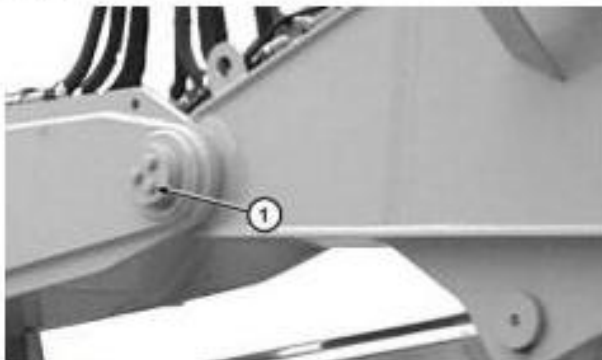**LEGEND:**

1 Cap Screw

Boom Pin



Thank you very much
for your reading.
Please click here
to get more information.