


John Deere 370E, 410E, 460E Articulated Dump Truck (SN.F668588-) Service Repair Manual (TM13379X19)

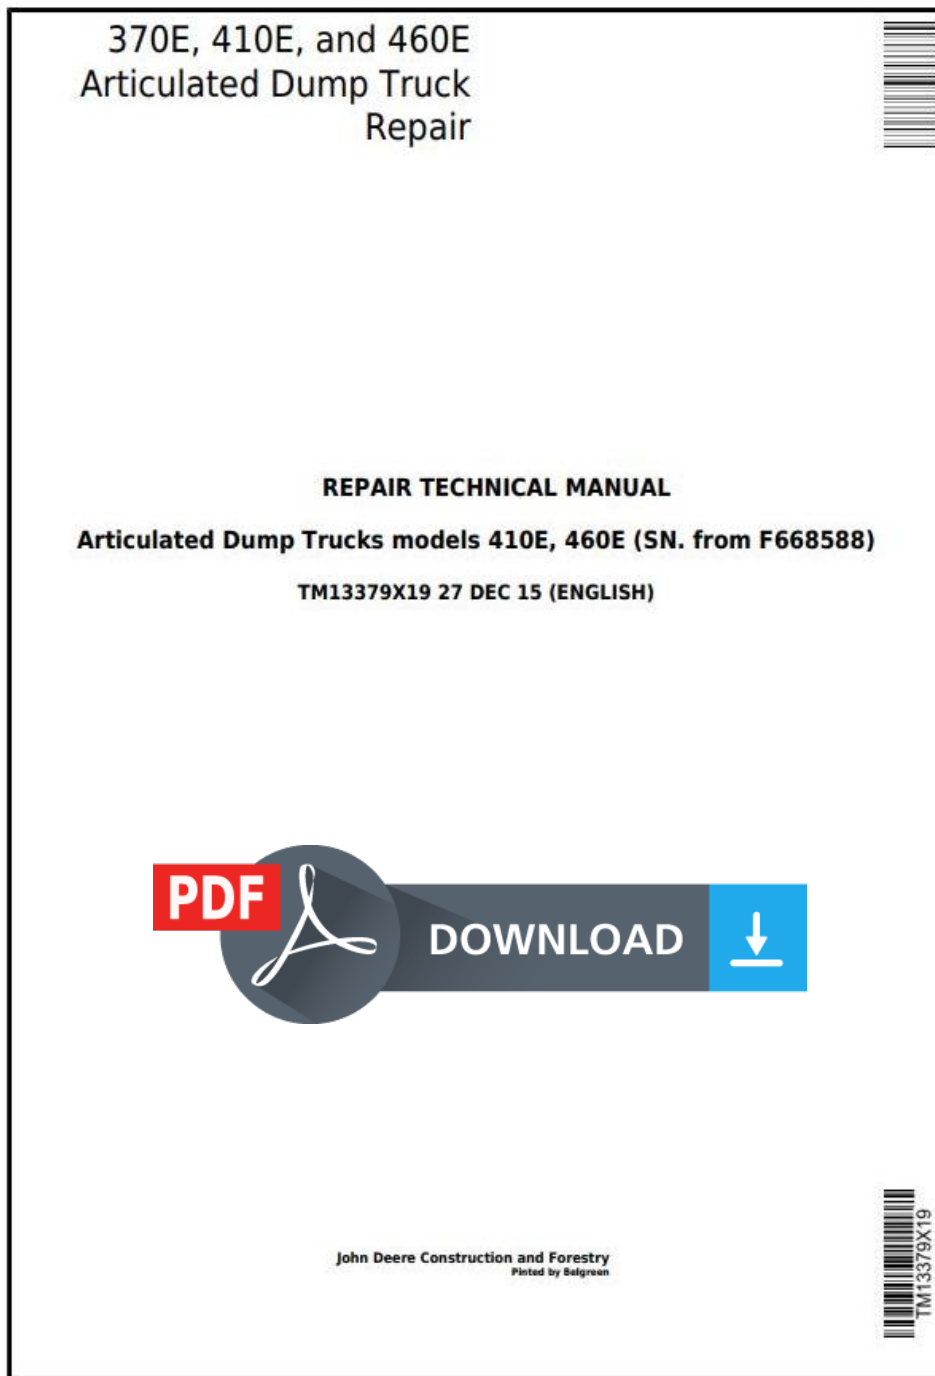

Covers: 370E,1DW370E***F668588-),410E,1DW410E***F668589-),460E

Type: Service Manual

Language: English

Pages: 626

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 370E, 410E, 460E Articulated Dump Truck (SN.F668588-) Service Repair Manual (TM13379X19)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Middle Axle Cooling Manifold Remove and Install

- [1] - Park and prepare machine for service safely. [See Park and Prepare for Service Safely](#). (Group 0001.)
- [2] - Turn battery disconnect switch to the OFF position. [See Battery Disconnect Switch and Battery Circuit Breakers](#). (Operator's Manual.)
- [3] - Install identification tags and disconnect hydraulic lines (1). Close all openings using caps and plugs.

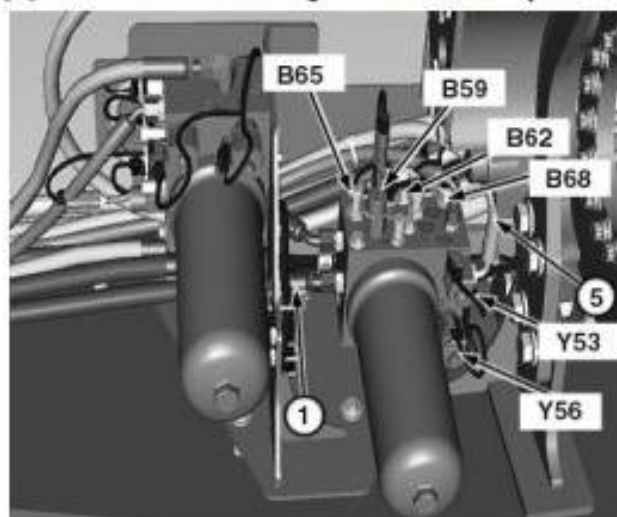


LEGEND:

- 1 Hydraulic Line (5 used)
- 5 Drain Line (S.N. 668587—)
- B59 Middle Axle Differential Lock Pressure Sensor
- B62 Middle Axle Temperature Sensor
- B65 Middle Axle Pressure Sensor
- B68 Middle Axle Filter Restriction Switch
- Y53 Middle Axle Differential Lock Apply Solenoid
- Y56 Middle Axle Differential Lock Pressure Regulating Solenoid

Hydraulic Lines and Connectors

- [4] - For machines with (S.N. 668587—):
Disconnect drain line (5) and close it by cap and plug.
- [5] - Disconnect middle axle differential lock pressure sensor (B59).
- [6] - Disconnect middle axle temperature sensor (B62).
- [7] - Disconnect middle axle pressure sensor (B65).
- [8] - Disconnect middle axle filter restriction switch (B68).
- [9] - Disconnect middle axle differential lock apply solenoid (Y53).
- [10] - Disconnect middle axle differential lock pressure regulating solenoid (Y56).
- [11] -

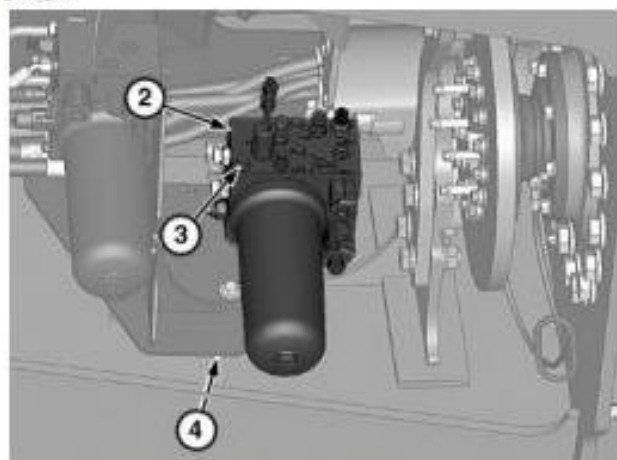

LEGEND:

- 2 Middle Axle Cooling Manifold
- 3 Cap Screw (3 used)
- 4 Nut (3 used)

Middle Axle Cooling Manifold

Secure nuts (4) and remove cap screws (3).

- [12] - Remove middle axle cooling manifold (2).



Thank you very much
for your reading.
Please click here
to get more information.