

# John Deere 4720 Self-Propelled Sprayer Diagnostic and Tests Service Manual (TM2230)

## C441R Wrapping Baler Repair



JOHN HARE



COLLECTION

### REPAIR TECHNICAL MANUAL

### C441R Wrapping Baler

TM301819 01DEC18 (ENGLISH)

For complete service information also see:

C441R Wrapping Baler Diagnostics..... TM301719



John Deere Arc-les-Gray

**Covers:** 4720

**Type:** Service Manual

**Language:** English

**Pages:** 1664

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 4720 Self-Propelled Sprayer Diagnostic and Tests Service Manual (TM2230)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

**Planetary Gear**

Remove planetary gears (4).

[6] -

**LEGEND:**

5  
6

Sun Gear Shaft  
O-Ring

**Sun Gear Shaft**

Remove sun gear shaft (5) and O-ring (6).

[7] -

**LEGEND:**

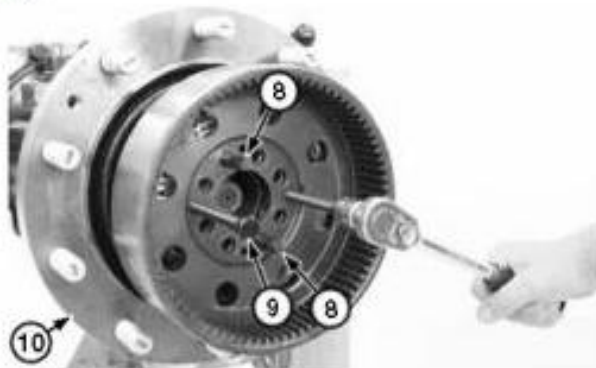
7

Cap Screw (8 used)

**Internal Gear Cap Screws**

Remove cap screws (7).

[8] -

**LEGEND:**

8  
9  
10

M14 Guide Screw (2 used)  
Jack Screw (2 used)  
Hub

**Internal Gear and Jack Screws**

Install M14 guide screws (8).

[9] - Install jack screws (9) into threaded holes of internal gear.

[10] - Pull internal gear away from hub (10) by evenly tightening jack screws until internal gear is loose.

[11] -

**→NOTE:**

Bushings (12) should be removed only if necessary.



Thank you very much  
for your reading.  
Please click here  
to get more information.