


# John Deere 4730 and 4830 Self-Propelled Sprayers Service Repair Technical Manual (TM2368)

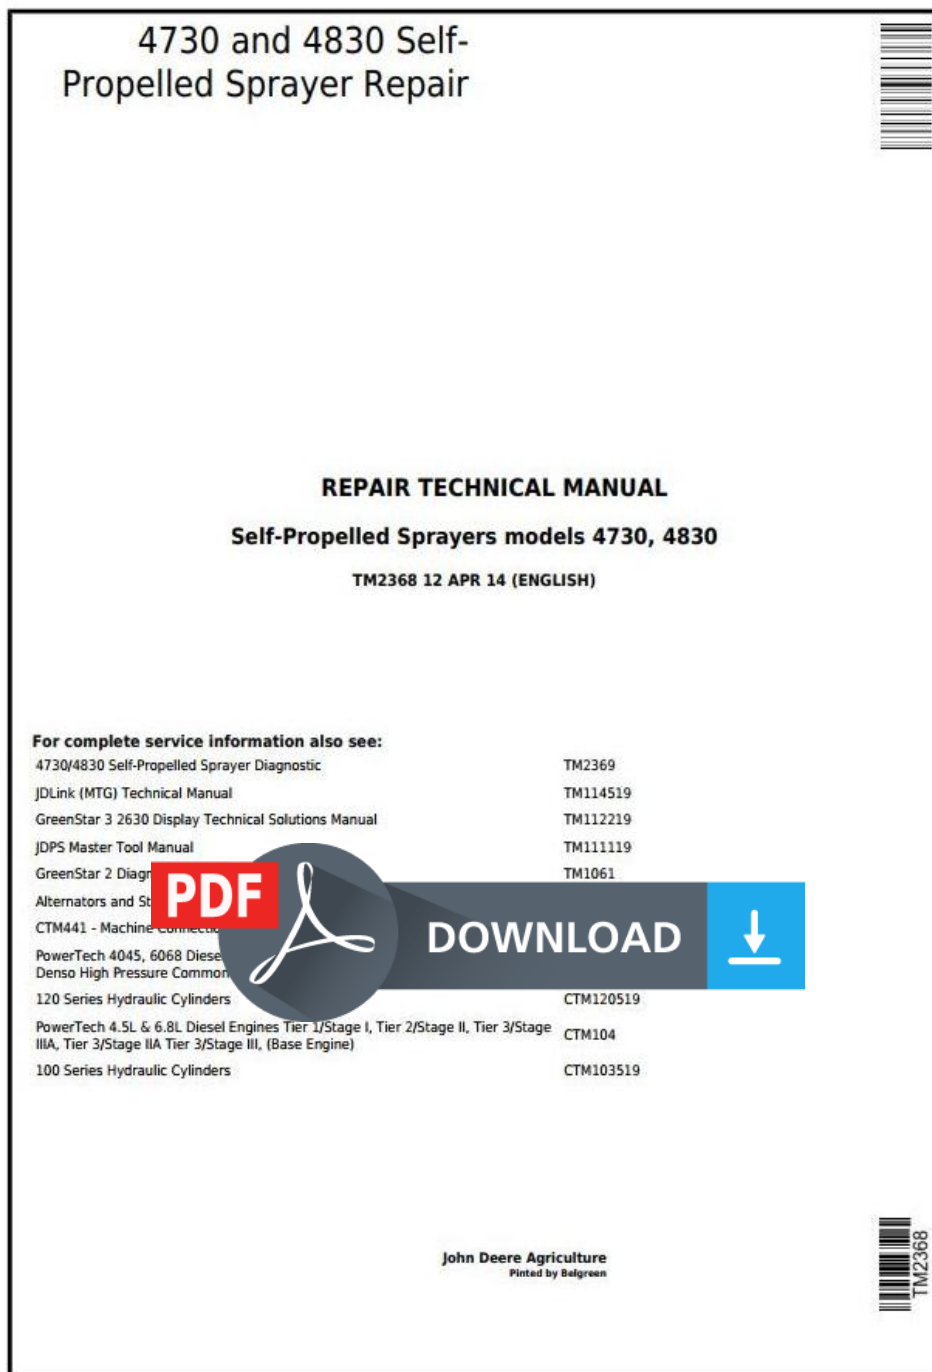

**Covers:** 4830,4730

**Type:** Service Manual

**Language:** English

**Pages:** 866

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 4730 and 4830 Self-Propelled Sprayers Service Repair Technical Manual (TM2368)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Remove Fuel Tank

[1] -

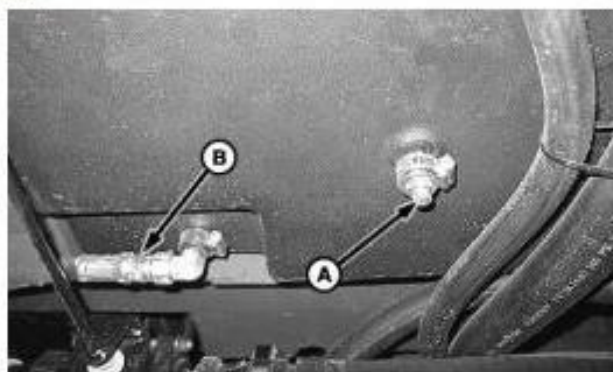

### LEGEND:

A Drain Plug  
B Fuel Line

### Tank Bottom Fittings


Disconnect and remove batteries from machine. ( [See Battery Replacement](#) in Section 40, Group 05.)

[2] - Remove drain plug (A) and drain fuel into a clean and approved container. Reinstall plug.

Item	Measurement	Specification
Fuel Tank	Capacity	500 L (132 gal.)

[3] - Disconnect fuel line (B) and remove fitting with strainer.

[4] -

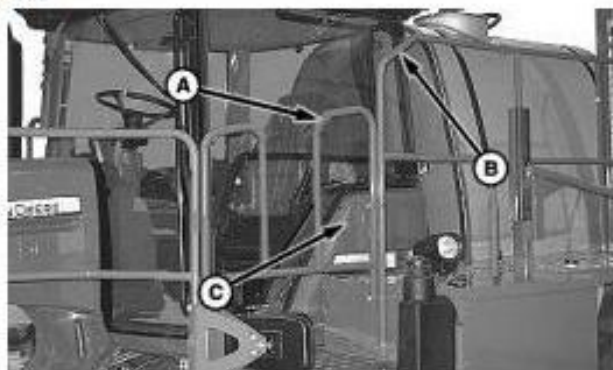


### LEGEND:

A Handrail  
B Handrail  
C Cover

### Hand Rail Removal

Remove handrails (A), (B), and hydraulic reservoir cover (C).

[5] -

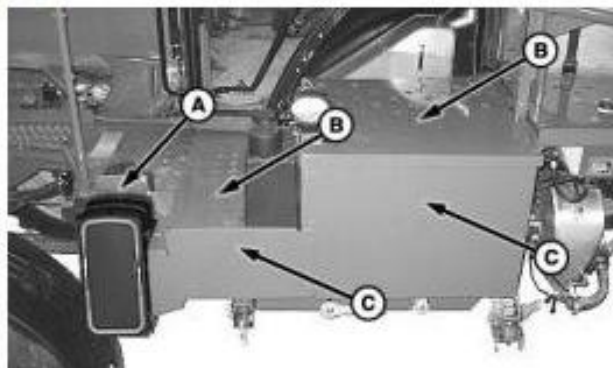

### LEGEND:

A Storage Compartment  
B Platform (2 used)  
C Cover (2 used)

### Fuel Tank Platforms

Remove storage compartment (A).

[6] - Remove platforms (B) and cover panels (C).

[7] -



Thank you very much  
for your reading.  
Please click here  
to get more information.