

John Deere 5050E, 5050E, 5058E, 5067E, 5075E Tractors Diagnostic Technical Service Manual (TM902219)

**5050E (Stage IIIA),
5050E, 5058E, 5067E and
5075E (Stage IIIB and
Stage V) Tractors
Diagnostic
(S.No. 045554 —)**



JOHN HARE




COLLECTION

**DIAGNOSTIC TECHNICAL MANUAL
5050E (Stage IIIA), 5050E, 5058E, 5067E and 5075E
(Stage IIIB and Stage V) Tractors (S.No. 045554 —)**

TM902219 01DEC18 (ENGLISH)

For complete service information also see:

5050E (Stage IIIA), 5050E, 5058E, 5067E, 5075E (Stage IIIB and Stage V) Tractors (S.No. 045554 —) Diagnostic Technical Manual (TM902219)	
Alternators and Starting	
PowerTech 2.9 LFinal T ECU	
00.16, 20.09, 20.09C, 20.11, 20.16 FrontWheel Drive Axles	
725, 730, 733, 735, 740, 745, 750, 755 Drive Axles, 2-Piece DANA	4820
12x12 and 24x12 PowrReverser™ Transmission	
Deere Pune Works	CTM900519
9x3 SyncShuttle™ Transmission - John Deere Pune Works	CTM900419

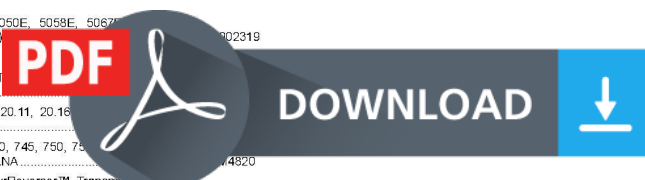

John Deere India Pvt. Ltd

Covers: 045554-);,5050E,5050E,5058E,5067E,5075E

Type: Service Manual

Language: English

Pages: 1063

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 5050E, 5050E, 5058E, 5067E, 5075E Tractors Diagnostic Technical Service Manual (TM902219)**


In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Disassemble Propel Gearbox

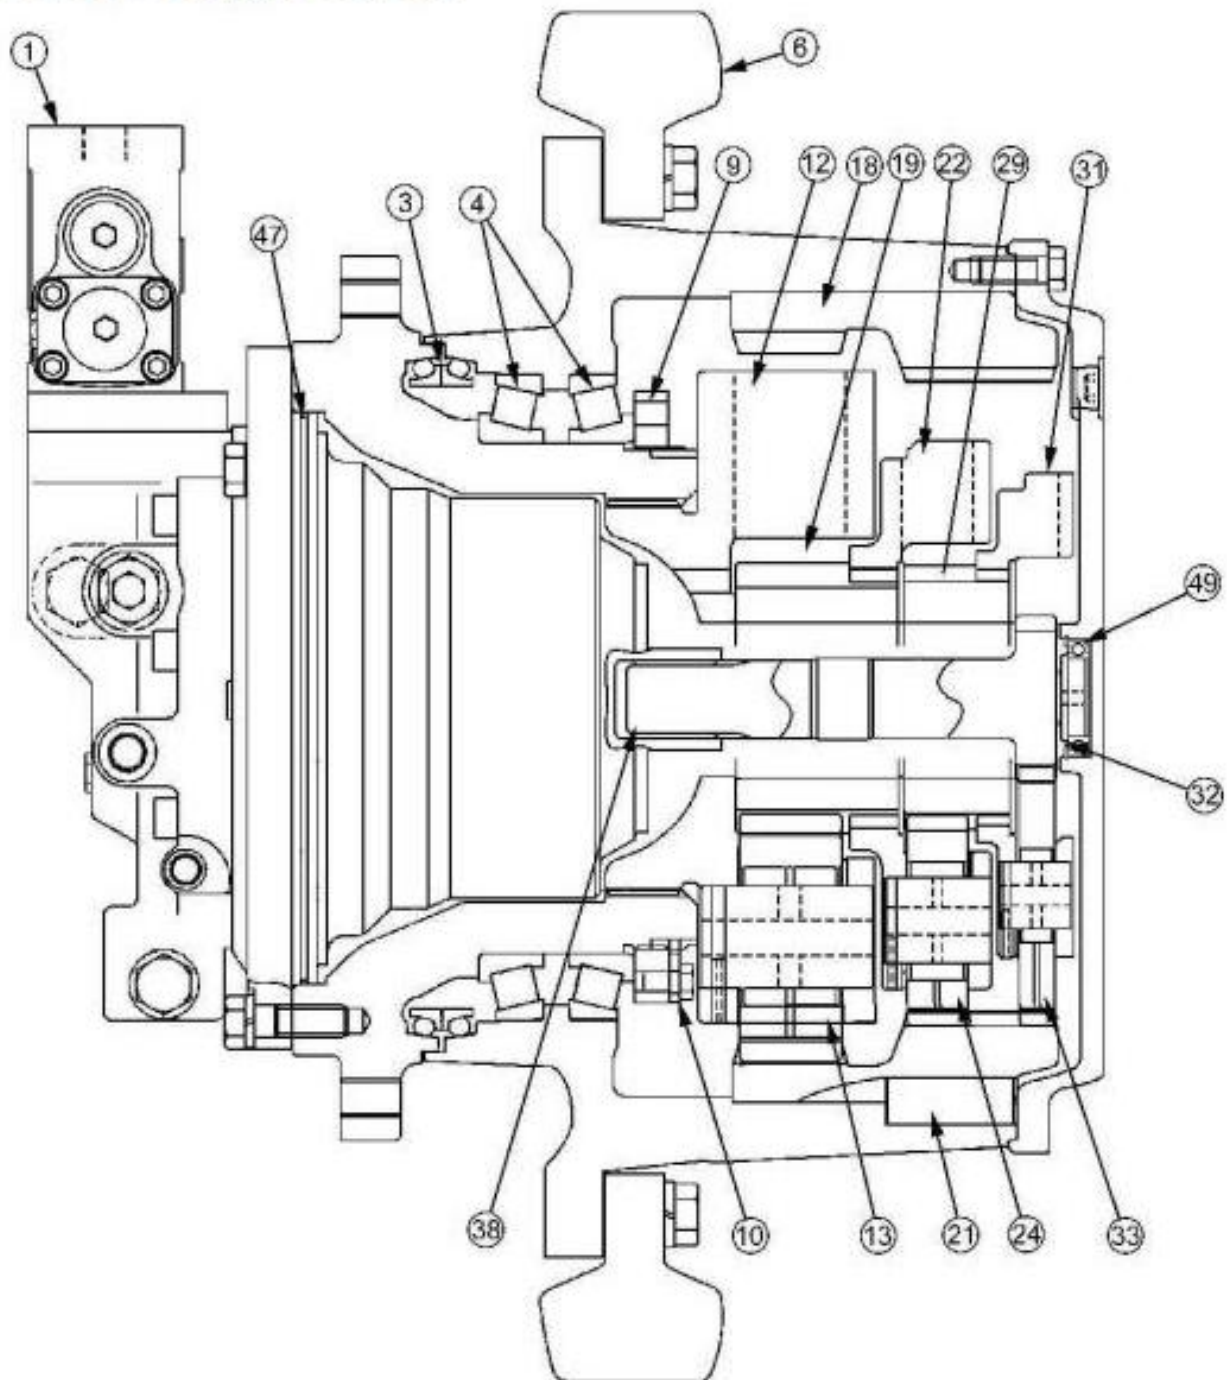

T126524

Propel Gearbox Assembly

LEGEND:

1	Propel Motor
3	Floating Seal
4	Roller Bearing (2 used)
6	Sprocket
9	Bearing Nut
10	Lock Plate
12	Third Stage Planet Carrier
13	Third Stage Planetary Gear (4 used)
18	Third Stage Sun Gear
19	Ring Gear
21	Knock Pin (8 used)
22	Second Stage Planet Carrier
24	Second Stage Planetary Gear (3 used)



Thank you very much
for your reading.
Please click here
to get more information.