

John Deere 670G, 670GP, 672G and 672GP Motor Graders Operation & Test Technical Manual (TM14069X19)

624K-II 4WD Loader Repair

(PIN: 1BZ624KA__C001001—;
PIN: 1BZ624KA__D001001—)



JOHN HARE



COLLECTION

REPAIR TECHNICAL MANUAL

624K-II 4WD Loader (PIN: 1BZ624KA__C001001—;
PIN: 1BZ624KA__D001001—)

TM14202X19 01DEC18 (ENGLISH)

For complete service information also see:

TeamMate V 1400 Series Inboard Planetary Axles.....	ctm143819
TeamMate™ IV 1200 Series Inboard Planetary Axles.....	ctm140119
624K-II 4WD Loader Operation and Test.....	TM14199X19
PowerTech 4.5L & 6.8L Diesel Engines Tier 2/Stage II, Tier 3/Stage IIIA (Base Engine).....	
PowerTech 4045, 6068 Diesel Fuel System with the Densoc High Pressure (HPCR) Level 14 ECU.....	
Hydraulic Cylinders.....	



Worldwide Construction and
Forestry Division

Covers: 670G,1DW670GX__,_F678818(670G,1DW670GX__,_F680877),670GP,1DW670GP__,_F678818(670GP,1DW670GP__,_F680877)

Type: Service Manual

Language: English

Pages: 1184

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 670G, 670GP, 672G and 672GP Motor Graders Operation & Test Technical Manual (TM14069X19)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.



JT01748 Lifting Brackets

Attach JT01748 Lifting Brackets as shown.

[13] -



CAUTION:

Prevent crushing injury from heavy component. Use appropriate lifting device when lifting component.

Remove cab.

Item	Measurement	Specification
Cab	Weight (approximate)	907 kg 2000 lb.

[14] - Repair or replace parts as necessary. [See Cab Mounts Remove and Install](#). (Group 1810.)

[15] -



CAUTION:

Prevent crushing injury from heavy component. Use appropriate lifting device when lifting component.

Install cab.

[16] - Apply PM37418 Thread Lock (medium strength) to nut threads.

Install washers and nuts.



Thank you very much
for your reading.
Please click here
to get more information.