


# John Deere 744K Series II 4WD Loader (SN. from F664578) Service Repair Technical Manual (TM13224X19)

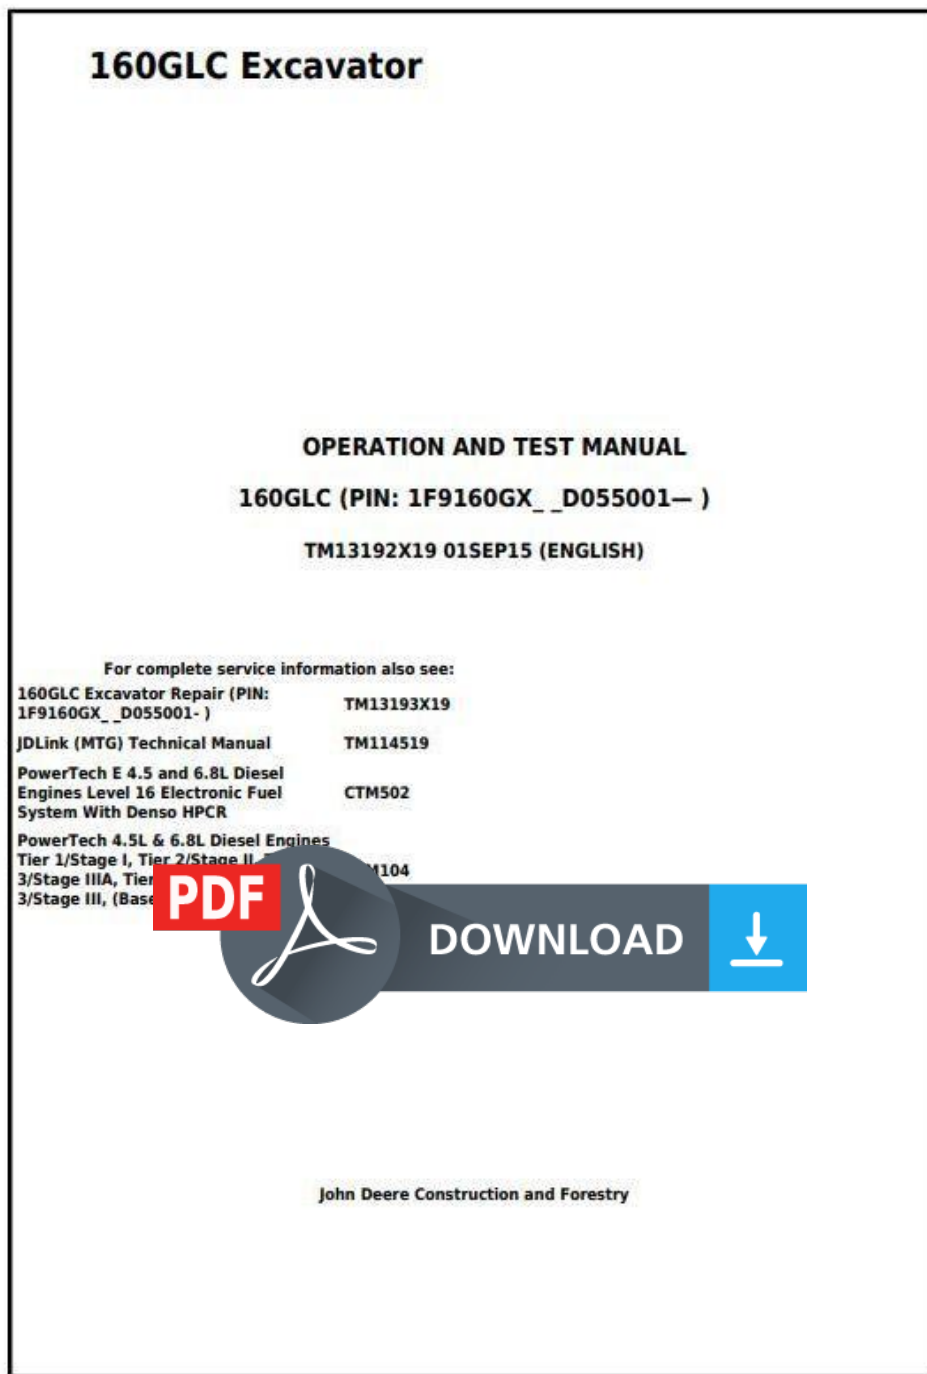

**Covers:** 744K-II,1DW744K\*\*\*F664578(???)

**Type:** Service Manual

**Language:** English

**Pages:** 541

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 744K Series II 4WD Loader (SN. from F664578) Service Repair Technical Manual (TM13224X19)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**


- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

**002762.04- Left Joystick Grip Button 4 Circuit Fault**

306

Clamp arm open switch circuit is short to ground.

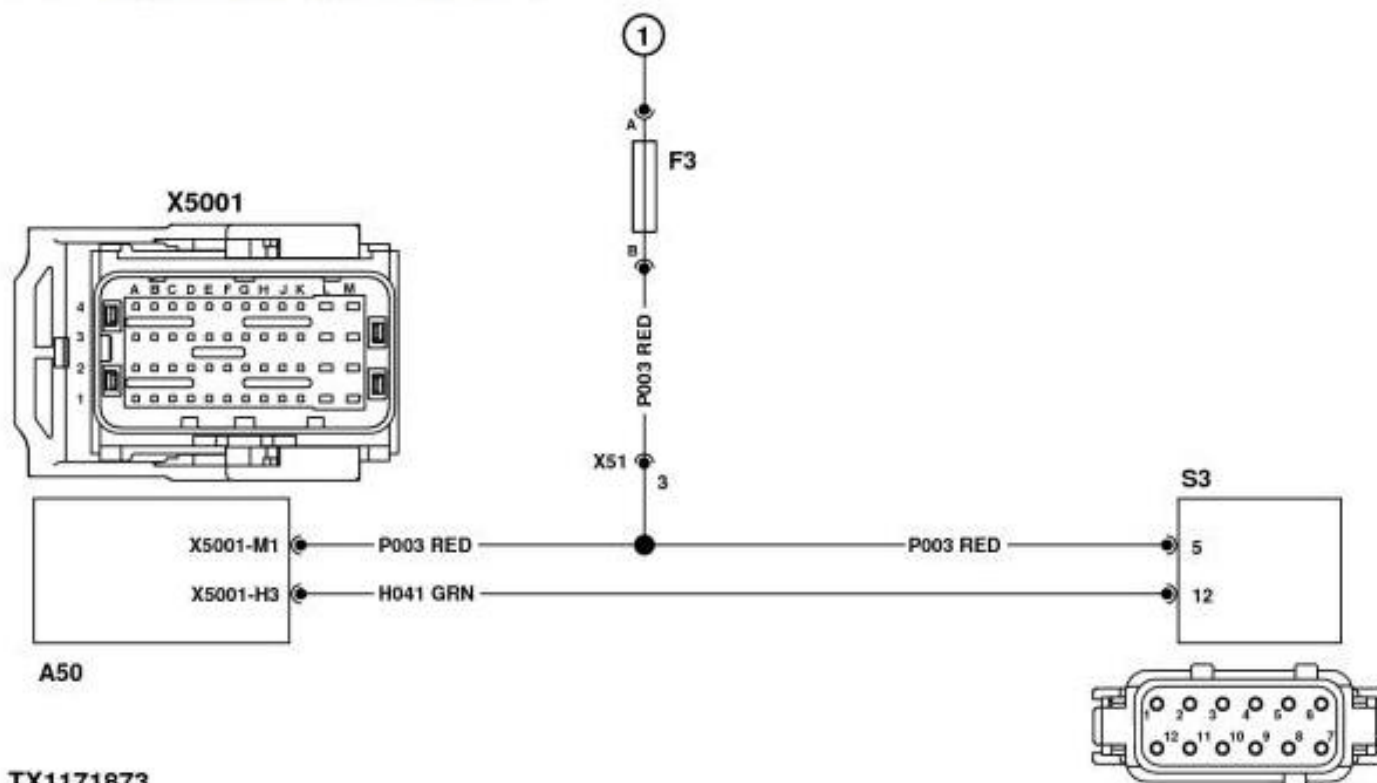

TX1171873

**Left Joystick Grip Switch (clamp arm open) Circuit Schematic****LEGEND:**

1	Switched Power
A50	Seat Control Module (SCM)
F3	Seat Control Module (SCM) Switched Power 10 A Fuse
S3	Left Joystick Switches
X51	Main Cab Harness-to-Seat Harness 12-Pin Connector 2
X5001	Seat Control Module (SCM) Connector
X5001-H3	Return
X5001-M1	Supply

**Alarm Level:**

- Service Required Indicator

**Machine Response:**

- None

**Circuit Information:**

- [See Seat Control Module \(SCM\) Circuit Theory of Operation.](#) (Group 9015-05.)

**Component Location:**

- [See Seat Harness \(W8\) Component Location.](#) (Group 9015-10.)

**Diagnostic Test Box Information:**

- Not Applicable

**Additional References:**

- Intermittent DTCs: [See Intermittent Diagnostic Trouble Code \(DTC\) Diagnostics.](#) (Group 9015-15.)
- Service ADVISOR™ Remote: [See Using Service ADVISOR™ Remote.](#) (Group 9015-15.)

**Possible Causes:**

1. Circuit is short to ground.



Thank you very much  
for your reading.  
Please click here  
to get more information.