
John Deere 85D Excavator Diagnostic, Operation and Test Service Manual (TM10754)

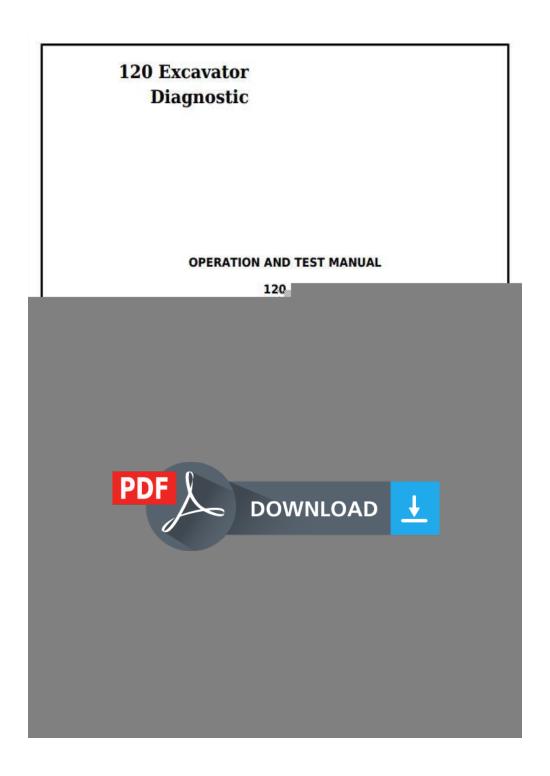

Covers: 85D

Type: Service Manual **Language:** English

Pages: 719 Format: PDF

Features: Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of


the John Deere 85D Excavator Diagnostic, Operation and Test Service Manual (TM10754)

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- · Engine Tests and Adjustments
- · Engine Repair
- · Power Train
- Transmission
- Axles
- · Differential
- PTO
- Hydraulic System
- Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- · Ignition and Charging
- Steering
- Brakes
- · Wheels
- Operator's Platform
- Body Panels
- · Disassembly and Assembly
- · Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

Please note this manual is in downloadable PDF format only. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.	

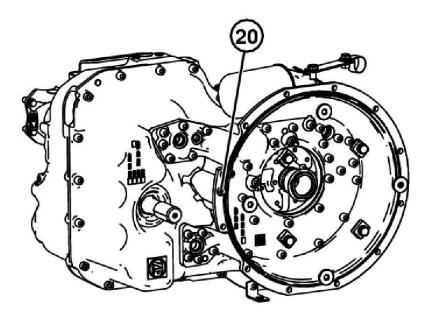

Bell Housing Cap Screw


LEGEND:

20

Cap Screw (1 used)

Remove cap screw (20).

[7] -

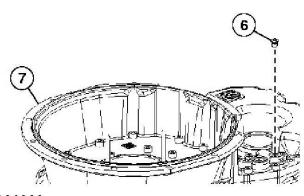

LEGEND:

6 Plug and O-Ring

7 Torque Converter Bell Housing


TX1031832

Plug and O-Ring Removal

Remove torque converter bell housing (7).

[8] - Remove plug and o-ring (6).

[9] -

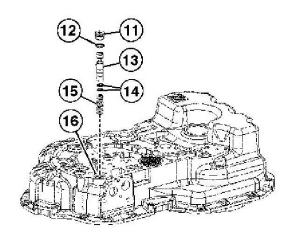

LEGEND:

11 Plug
12 O-Ring
13 Piston
14 O-Ring (2 used)
15 Compression Spring
16 System Relief Port

System Relief Valve



Thank you very much for your reading.

Please click here to get more information.