

John Deere 960, 990 Hay and Forage Round Balers Diagnostics and Tests Service Manual (TM300519)

**3756G and 3756GLC Log
Loader Repair**
(PIN: 1FF3756G__F376001—)



JOHN HARE



COLLECTION

REPAIR TECHNICAL MANUAL

**3756G and 3756GLC Log Loader (PIN: 1FF3756G_
_F376001—)**

TM14024X19 01DEC18 (ENGLISH)

For complete service information also see:

3756G and 3756GLC Log Loader Operators Manual om351448x19
3756G and 3756GLC Log Loader Operation and Test..... TM14023X19
6090 PowerTech™ OEM Diesel Engines (Final Tier 4/
Stage IV platform) tm117719



Worldwide Construction and
Forestry Division

Covers: 960,990

Type: Service Manual

Language: English

Pages: 465

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 960, 990 Hay and Forage Round Balers Diagnostics and Tests Service Manual (TM300519)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Mechanical Front Wheel Drive (MFWD) Axle Disassemble

Essential Tools

ESSENTIAL TOOLS
D05313ST Snap Ring Pliers
JDG10939 Snap Ring Pliers Tip

Service Equipment and Tools

SERVICE EQUIPMENT AND TOOLS
D01003AA Repair Stand
D01048AA 17 1/2 - Ton Capacity Puller Set
JDG10799 Tie Rod End Separating Tool
JDG10693 Clamping Fork
JDG10830 Internal Extractor

Planetary Drive Remove

[1] -



LEGEND:

- 1 Axle Assembly
- 2 D01003AA Repair Stand

Axle Support Stand

Place axle assembly (1) in D01003AA Repair Stand (2).

Repair Stand

D01003AA

For supporting front axle.


[2] -

→NOTE:

Pressure may build up in planetary carrier housing. To relieve pressure, rotate hub until drain plug is in top position and slowly remove plug. Rotate hub until drain plug is in bottom position and drain oil.

Drain planetary housing oil, [see Drain and Refill MFWD Front Axle Housing Oil—If Equipped](#). (Operator's Manual.)

[3] -

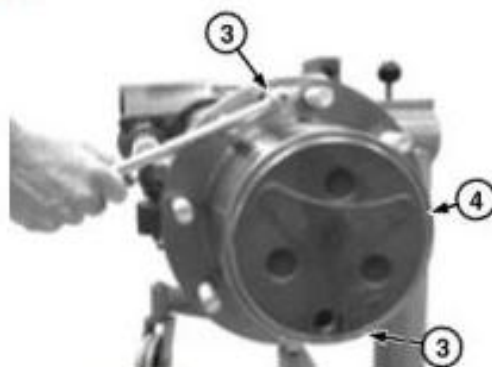

LEGEND:

- 3 Cap Screw (2 used)
- 4 Planetary Carrier



Thank you very much
for your reading.
Please click here
to get more information.