


John Deere Deere / Bauer Planters (SN.750101-755100) SeedStar, Frame & Hydraulics Diagnostics Manual (TM122619)

JD24A Skid-Steer Loader

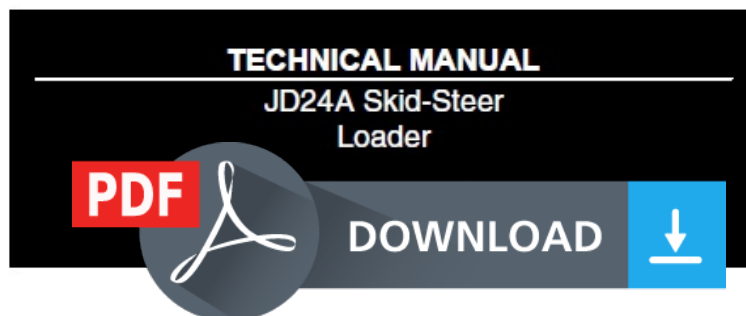

Covers: 750101-755100),DB37,DB44,DB55,DB58,DB60,DB66,DB74,DB80

Type: Service Manual

Language: English

Pages: 1672

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile


This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere Deere / Bauer Planters (SN.750101-755100) SeedStar, Frame & Hydraulics Diagnostics Manual (TM122619)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

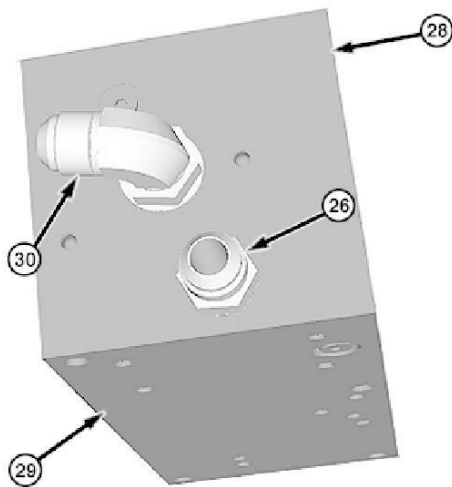

T8120001497-UN: Top and Front View

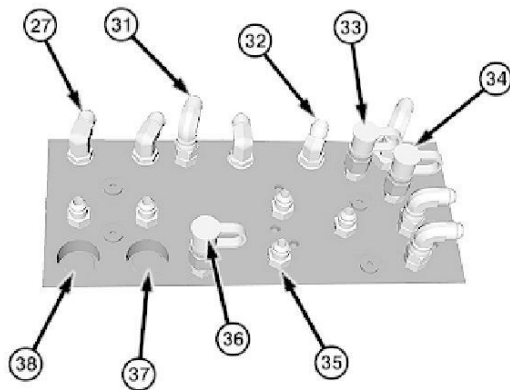

T8120001498-UN: Rear View

LEGEND:

- 1-CB1—Counterbalance Valve
- 2-SV6—Base Cutter Lower Solenoid Valve
- 3-SV7—Base Cutter Lower Solenoid Valve
- 4-SV3—Left Crop Divider Float Solenoid Valve
- 5-SV4—Right Crop Divider Float Solenoid Valve
- 6-SV5—Topper Lower Solenoid Valve
- 7-EC1—Flow Control Valve
- 8-RV2—Relief Valve
- 9-RV3—Relief Valve
- 10-CB2—Counterbalance Valve
- 11-FR1—Flow Regulator Valve
- 12-SV8—Base Cutter Raise Solenoid Valve
- 13-SVCV1—Left Crop Divider Raise Solenoid Valve
- 14-SVCV2—Right Crop Divider Raise Solenoid Valve
- 15-DC1—Check Valve
- 16-SVCV3—Topper Raise Solenoid Valve
- 17-MP1—Cab Pump Control Valve
- 18-RV1—Valve
- 19-SV1—Knockdown Roller Raise and Lower Solenoid Valve
- 20-FR2—Flow Regulator Valve
- 21-FR4—Flow Regulator Valve
- 22-FR3—Flow Regulator Valve
- 23-Diagnostic Receptacle
- 24-HP1—Cab Hand Pump
- 25-Fitting
- 26-Fitting (2 used)
- 27-90° Fitting (4 used)
- 28-Valve Top
- 29-Valve Front
- 30-90° Fitting
- 31-90° Fitting (4 used)
- 32-45° Fitting
- 33-Diagnostic Receptacle
- 34-Diagnostic Receptacle
- 35-Straight Fitting (12 used)
- 36-Diagnostic Receptacle


37-CV2—Check Valve

38-CV1—Check Valve


Remove components from valve block and inspect for wear and contamination.

IMPORTANT:


3. Do not interchange orifices. Observe position and tag orifices to aid in assembly.

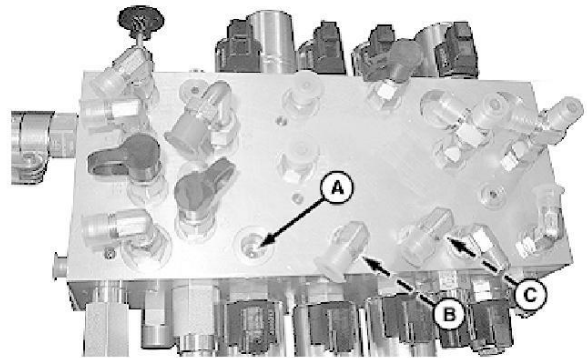

T8130001358-UN: Rear View

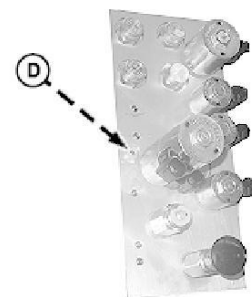

T8130001359-UN: Outer View

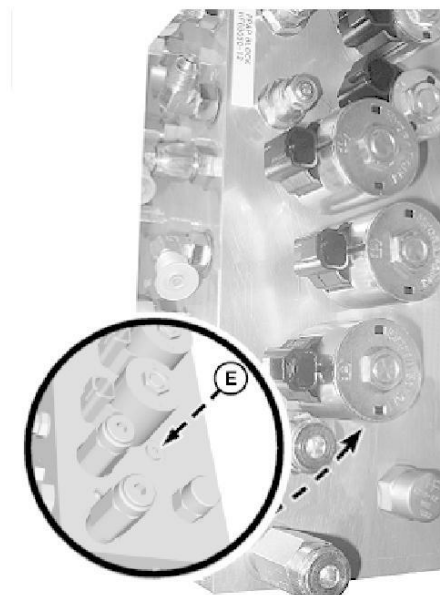

T8130001360-UN: Inner View

LEGEND:

A-Orifice

B-Orifice

C-Orifice

D-Orifice

E-Orifice

Remove plugs or fittings as necessary and remove orifices (A—E).



Thank you very much
for your reading.
Please click here
to get more information.