


# John Deere E240, E240LC, E260LC (T3/S3A) Excavator Diagnostic, Operation and Test Manual (TM12732)

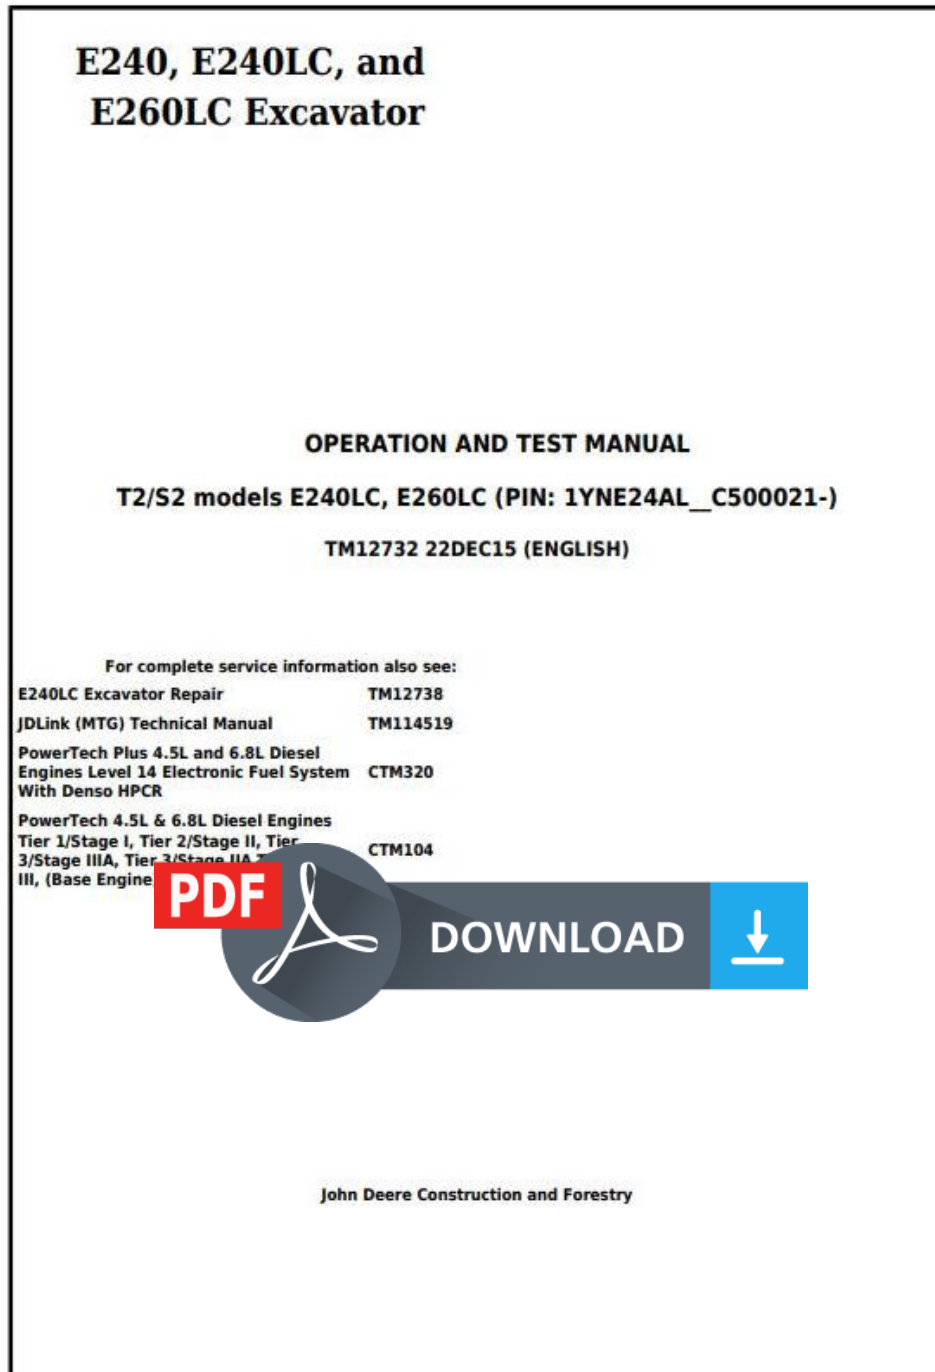

**Covers:** 1YNE24AL\_\_DXXXXXX),E240LC,E260LC

**Type:** Service Manual

**Language:** English

**Pages:** 1261

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere E240, E240LC, E260LC (T3/S3A) Excavator Diagnostic, Operation and Test Manual (TM12732)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**


- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Boom and Arm Reduced Leakage Valve Operation

### →NOTE:

Operation of boom and arm reduced leakage valves are the same. Boom reduced leakage valve is discussed throughout.

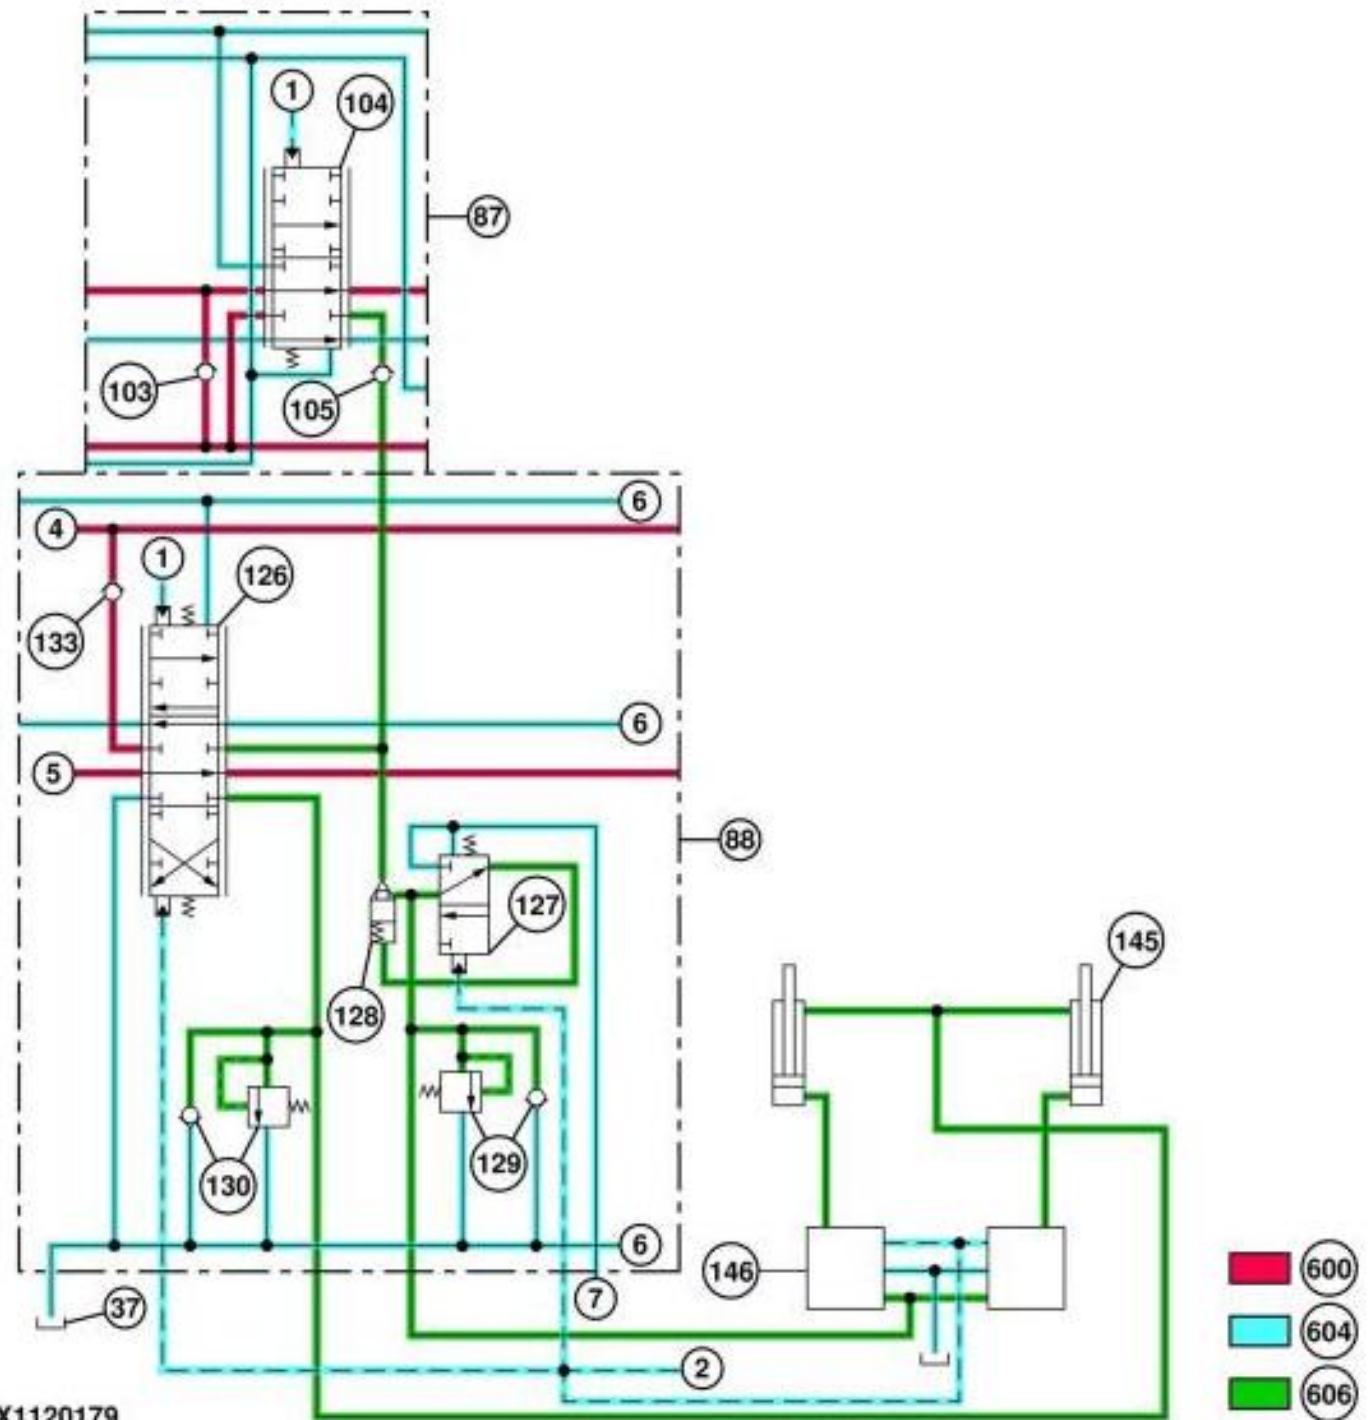

### Boom Reduced Leakage Valve Schematic

#### LEGEND:

- 1 Boom Up (pilot) (2 used)
- 2 Boom Down (pilot)
- 4 Pressure Circuit
- 5 Neutral Circuit



Thank you very much  
for your reading.  
Please click here  
to get more information.