

# John Deere M944 (i) , M952 (i) , M962 (i) , R944i, R952i, R962i Trailed Sprayers Repair Manual (TM403719)

Section 10 - GENERAL INFORMATION


Group 10: General Information

## Group 05 - Description of the Machine

### Identification Views



M962i Left Side View

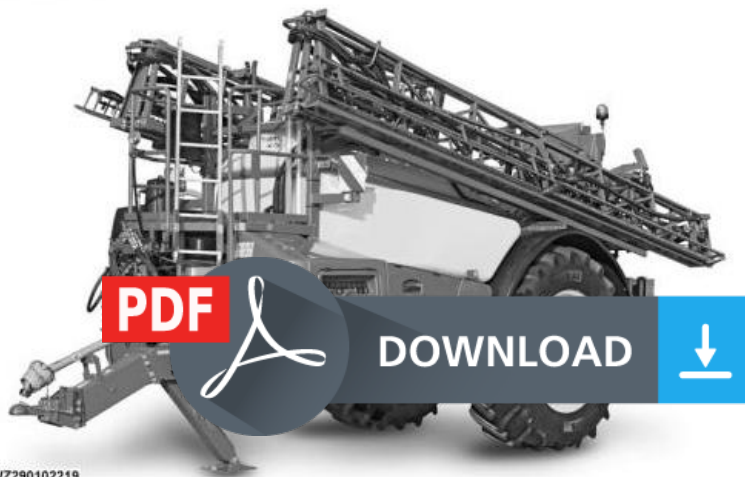

WZ290102219

R962i Left Side View

**Type:** Service Manual

**Language:** English

**Pages:** 439

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere M944 (I) , M952 (I) , M962 (I) , R944i, R952i, R962i Trailed Sprayers Repair Manual (TM403719)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Remove and Install Wheel Speed Sensor

- [1] - Attach tractor to sprayer.  
 [2] - Turn off tractor key and engage parking brake of tractor.  
 [3] -




### LEGEND:

A Connector

### Wheel Speed Sensor

Disconnect connector (A).

- [4] -

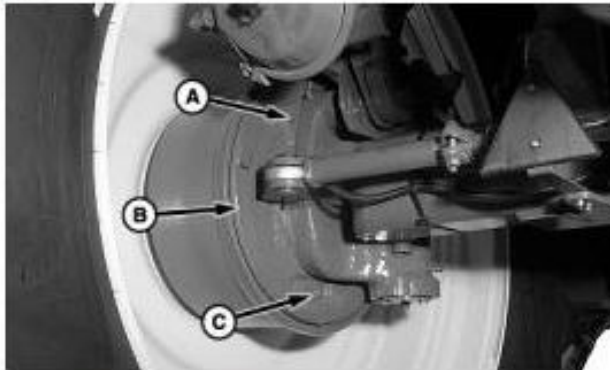

### LEGEND:

A Socket Head Cap Screw

B Brake Cover

C Cap Screw

### Wheel Speed Sensor

Remove socket head cap screw (A), cap screw (C), and brake cover (B).

- [5] - Remove left-hand brake drum and hub. (See [Remove and Install Taper Roller Bearings \(Wheel Hub\)](#) in Section 80, Group 20.)

- [6] -



### LEGEND:

A Nut

B Speed Sensor

### Wheel Speed Sensor

Remove nut (A) and speed sensor (B) from axle.

- [7] - Install in reverse order.

- [8] -



Thank you very much  
for your reading.  
Please click here  
to get more information.