
John Deere Timberjack 360D 460D 560D; 540G3 548G3 640G3 648G3 748G3 Skidder Diagnostic Manual TM2110

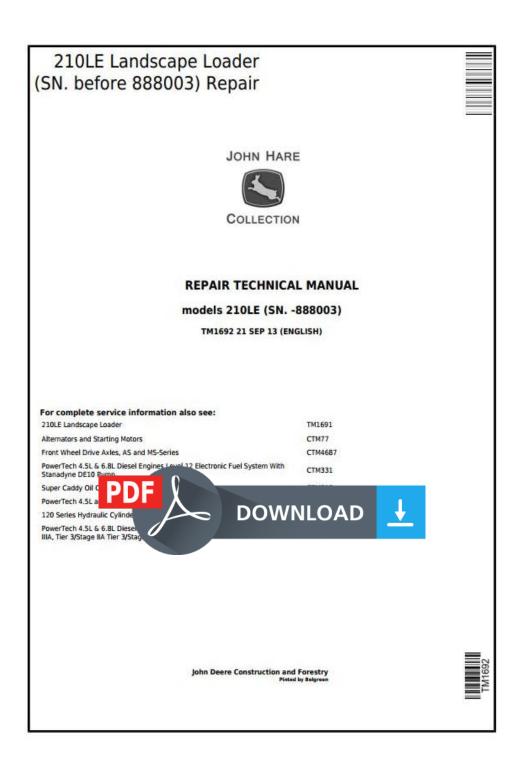

Covers: 540G-III,548G-III,640G-III,648G-III,748G-III,360D,460D

Type: Service Manual **Language:** English

Pages: 1138 Format: PDF

Features: Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere Timberjack 360D 460D 560D; 540G3 548G3 640G3 648G3 748G3 Skidder Diagnostic Manual TM2110**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- · General Information
- Specifications
- · Serial Number Location
- Engine Specifications
- · Engine Diagnostics
- Engine Tests and Adjustments
- · Engine Repair
- · Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- · Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- · Wheels
- · Operator's Platform
- Body Panels
- · Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

Please note this manual is in downloadable PDF format only. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.	

Remove Outer Components to Disassemble Manual Shift Transmission

→NOTE:

Bearing cups in transmission case can either be a loose or tight fit. If not replacing bearing cones or cups, make sure to keep them together as a matched set. Mark or identify these items as needed.

[1] -



Transmission Support Bracket

Attach transmission to D01003AA stand using DFT1143

[Transmission Support Bracket Fabricated tool, dealer made. (See Group 1900 for instructions to make tool.)]
(1).

Stand

D01003AA


Used to support transmission during repair.

Transmission Support Bracket

[DFT1143 Fabricated tool, dealer made. (See Group 9900 for instructions to make tool.)]

Used to attach transmission to D01003AA stand.

[2] -

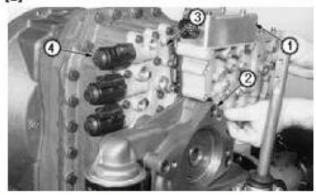

LEGEND:

- Control Valve
- 2 Charge Pump
- 3 Manifold Plate
- 4 Solenoid (3 used with MFWD) (2 used without MFWD)

Control Valve/Charge Pump/Manifold Plate

Remove the following components:

- a. Charge pump (2). See Remove and Install Transmission Charge Pump—Manual Shift in Group 0360.
- b. Control valve (1). See Remove and Install Control Valve—Manual Shift in Group 0360.

→NOTE:

To repair charge pump, see Disassemble and Assemble Transmission Charge Pump—Manual Shift and Power Shift in Group 0360.

To repair control valve, see Disassemble and Assemble Control Valve—Manual Shift in Group 0360.



Thank you very much for your reading.

Please click here to get more information.