

John Deere Tractors 6415 and 6615 (South America) Service Repair Technical Manual (TM8130)



Covers: 6415,6615

Type: Service Manual

Language: English

Pages: 1143

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere Tractors 6415 and 6615 (South America) Service Repair Technical Manual (TM8130)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Group 25 - Operator's Cab

Removing Cab Frame



LX1027449

Remove operator's cab.

See Removing Cab or Operator's Platform, Section 90-00.

⚠ CAUTION:

If frame attaching bolts are unfastened or frame is removed, make sure all parts are reinstalled correctly to maintain necessary protection of operator. Tighten attaching bolts to specification.

A tractor in movement may pose strong tension onto main chassis. Therefore, replace frame if any frame members are bent, twisted or have been forced, to maintain adequate



Thank you very much
for your reading.
Please click here
to get more information.