

John Deere XUV855E XUV855M, XUV855M S4 Gator Utility Vehicles (SN.010001-) Technical Manual TM150119

XUV855E, XUV855M,
XUV855M S4 Gator™
Utility Vehicles
(SN. 010001-)



JOHN HARE



COLLECTION

TECHNICAL MANUAL

XUV855E, XUV855M, XUV855M S4 Gator™ Utility
Vehicles (SN. 010001-)

TM150119 01DEC18 (ENGLISH)



John Deere Horicon Works

Covers: 010001);XUV855E,XUV855M,XUV855M,S4

Type: Service Manual

Language: English

Pages: 675

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere XUV855E XUV855M, XUV855M S4 Gator Utility Vehicles (SN.010001-) Technical Manual TM150119**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Remove and Install Rocker Arm Cover

1. Park machine safely. (See the 'Safety Section'.)
2. Raise and lock cargo box.

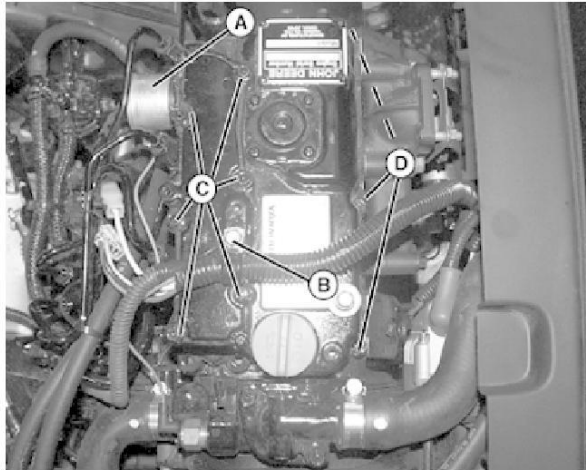

3. LVAL23369-UN: Remove Rocker Cover

LEGEND:

A-Hose Clamp


B-Bolt

C-Long Bolts (6 Used)

D-Short Bolts (3 Used)

Loosen hose clamp (A) from air cleaner hose and disconnect hose from intake side of rocker arm cover.

4. Remove bolt (B) from wiring clamp.
5. Remove six long (C) and three short bolts (D) securing valve cover to cylinder head.
6. Remove rocker cover.

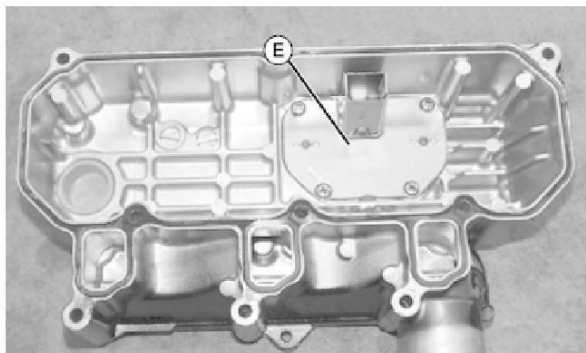


7. LVAL23370-UN: Remove Breather Baffle

LEGEND:

E-Breather Baffle

Remove breather baffle (E).

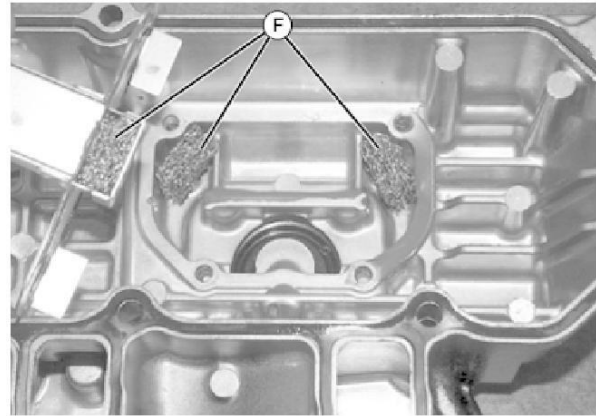

8. LVAL23371-UN: Check Mesh Media

LEGEND:

F-Mesh Media

Check mesh media (F). Clean or replace as necessary.




9. LVAL23372-UN: Remove Diaphragm and Cover

LEGEND:

G-Diaphragm and Cover Assembly

Mark diaphragm and cover for reassembly purposes. Remove diaphragm and cover assembly (G).

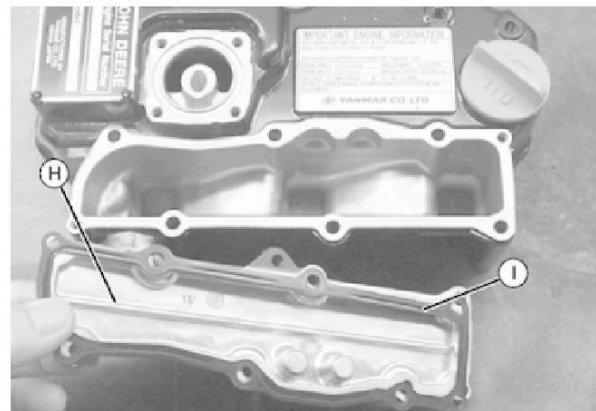

10. LVAL23373-UN: Remove Intake Cover and Gasket

LEGEND:

H-Intake Cover

I-Gasket

Remove intake cover (H) and gasket (I) Clean gasket mating surfaces and replace gasket.



Thank you very much
for your reading.
Please click here
to get more information.