

1955-1960 Ford Tractor Series 600,700,800,900,601,701,801,901,1801 Service Repair Workshop Manual





FORD TRACTOR

1955
—
1960

for

TRACTOR SERIES

600-700-800-900

601-701-801-901-1801

shop manual

TRACTOR AND IMPLEMENT DIVISION

Ford Motor Company

TABLE OF CONTENTS

Part ONE—POWER PLANT

Chapter I—ENGINE

Section	Page	Section	Page
1 Engine Removal and Installation— Series 501 through 901.....	1	6 Main Bearings, Balancer, Flywheel, and Crankshaft	32
2 Engine Removal and Installation—Series 1801.....	8	7 Engine Governor and Timing Gear Cover.....	39
3 Cylinder Head and Valves.....	12	8 Camshaft and Camshaft Gear.....	41
4 Oil Pan, Oil Pump, and Oil Filter.....	20	9 Engine Tune-Up.....	43
5 Connecting Rods, Bearings, Pistons, Rings, and Cylinder Block.....	25	10 Trouble Shooting.....	46
		11 Specifications.....	52
		12 Special Tools.....	57

Chapter II—ELECTRICAL SYSTEM

Section	Page	Section	Page
1 Battery.....	60	5 Manifold Heaters, Relay and Electrical Circuit—DIESEL.....	75
2 Generator and Charging Circuit.....	61	6 Trouble Shooting.....	76
3 Starting Motor, Solenoid and Starting Circuit.....	69	7 Specifications.....	82
4 Lamps and Lighting Circuit.....	73	8 Special Tools.....	82

Chapter III—IGNITION SYSTEM

Section	Page	Section	Page
1 Ignition Switch.....	83	5 Trouble Shooting.....	92
2 Spark Plugs and Ignition Wires.....	84	6 Specifications.....	95
3 Coil.....	84	7 Special Tools.....	96
4 Distributor.....	85		

Chapter IV—FUEL AND EXHAUST SYSTEM—GASOLINE

Section	Page	Section	Page
1 Air Cleaner.....	97	5 Trouble Shooting.....	107
2 Carburetor.....	99	6 Specifications.....	108
3 Fuel Tank, Sediment Bowl and Lines.....	103	7 Special Tools.....	108
4 Manifold, Muffler, and Exhaust Pipe.....	104		

Chapter V—FUEL AND EXHAUST SYSTEM—DIESEL

Section	Page	Section	Page
1 Air Cleaner.....	109	7 Fuel Injection Pump.....	118
2 Fuel Tank.....	110	8 Manifold, Muffler, and Outlet Pipe.....	120
3 Bleeding and Flushing the Fuel System.....	110	9 Trouble Shooting.....	122
4 Idle and High Speed Adjustments.....	111	10 Specifications.....	124
5 Fuel Filter.....	112	11 Special Tools.....	124
6 Fuel Injectors.....	113		

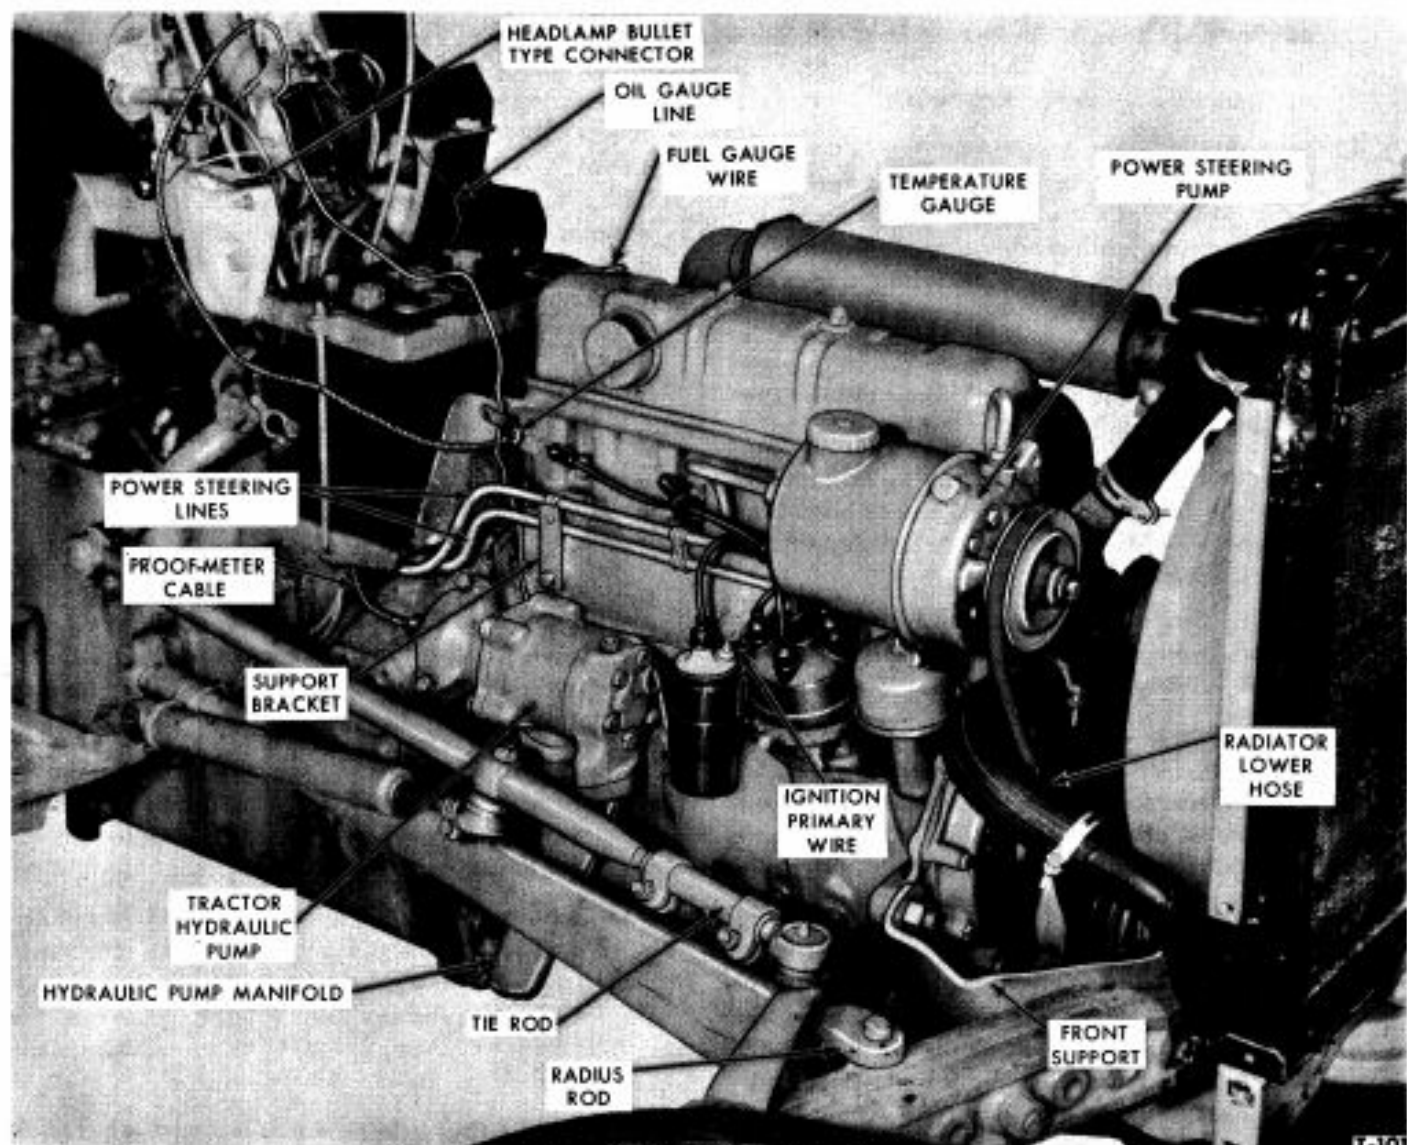


Figure 2—Right Side of Engine

T-101

7. On a tractor equipped with power steering, disconnect the adjusting link from the pump. Remove the two bolts that attach the muffler outlet pipe front support to the fuel tank front support bracket.
8. Turn the fuel tank shut-off valve clockwise as far as possible to close it. Disconnect the fuel line from the tank and from the fuel filter. Disconnect the excess fuel return line from the forward end of the fuel tank and from the "T" connection on the right side of the cylinder block.
9. Place a piece of wood across the top of the battery to prevent the fuel tank from accidentally contacting the battery posts. Remove nut and lock washer that attaches the fuel tank front support to the cylinder block. Remove the four fuel tank support attaching bolts. With an assis-

tant, carefully lift the fuel tank and support brackets from the tractor.

10. Remove the battery from the battery tray.

C. Series 601-801 Gasoline Engine

1. Disconnect the battery ground strap.
2. Drain the radiator, cylinder block, crankcase and the hydraulic system.
3. On tractors equipped with a Select-O-Speed transmission, carefully drive the roll pin out of the P.T.O. control handle as shown in Figure 1. Remove the handle, nut and washer that attaches the control cable housing to the right rear side of the hood.
4. Disconnect the bullet connector adjacent to the



Thank you very much
for your reading.
Please click here
to get more information.