


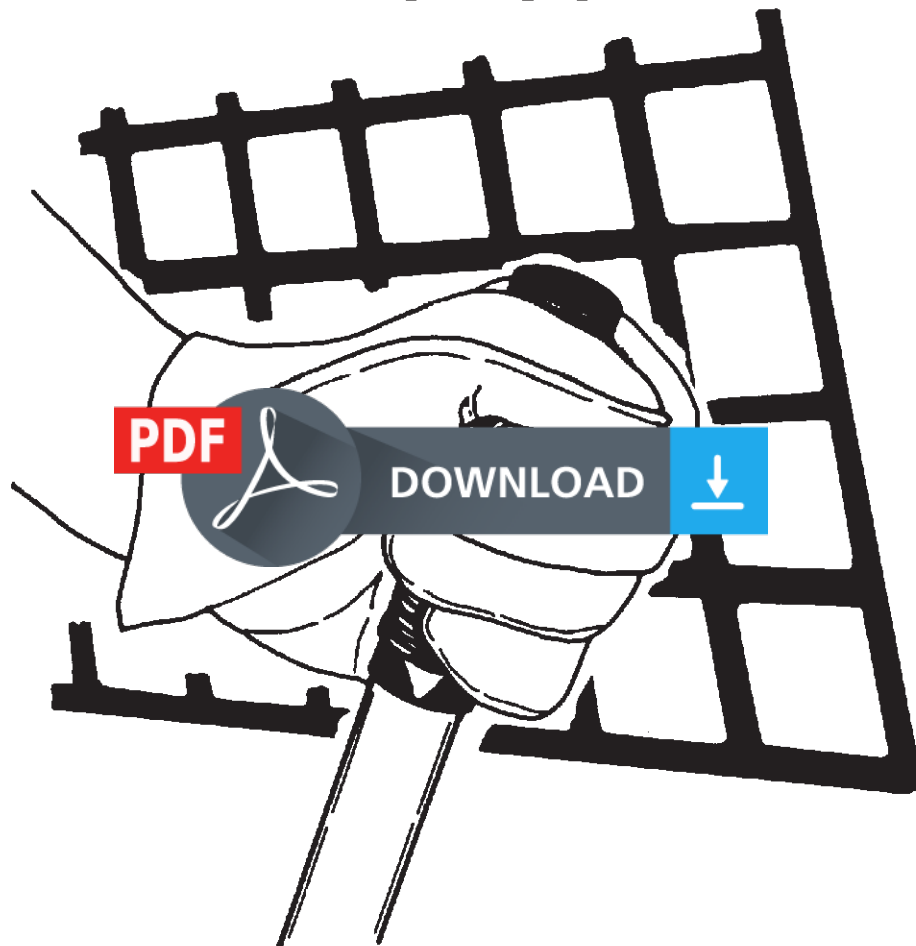

STANDARD FLOW PLANNER

Operation & Maintenance Manual



**MELROE
INGERSOLL-RAND**

6724802 (5-97) Revised (5-12)

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



© Melroe Company 1997
Printed in U.S.A.

CONTENTS

FOREWORD	iii
SAFETY	vii
OPERATING INSTRUCTIONS	1
PLANER MAINTENANCE	11
SPECIFICATIONS	25

FOREWORD

SAFETY

OPERATING
INSTRUCTIONS

PLANER
MAINTENANCE

SPECIFICATIONS

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat Planer in the spaces below .
Always use these numbers when referring to your Bobcat Planer.

Planer Serial Number _____

NOTES: _____

The Attachment Service Manual P/N 6722922 gives complete repair procedures for your attachment components. You can order the Melroe Attachment Service Manual from your Melroe dealer.


YOUR LOADER PLANER DEALER:

ADDRESS:

PHONE:

Melroe Company
P.O. Box 128
Gwinner, ND 58040-0128

Melroe Europe
J. Huysmanslaan 59
B-1651 LOT
Belgium

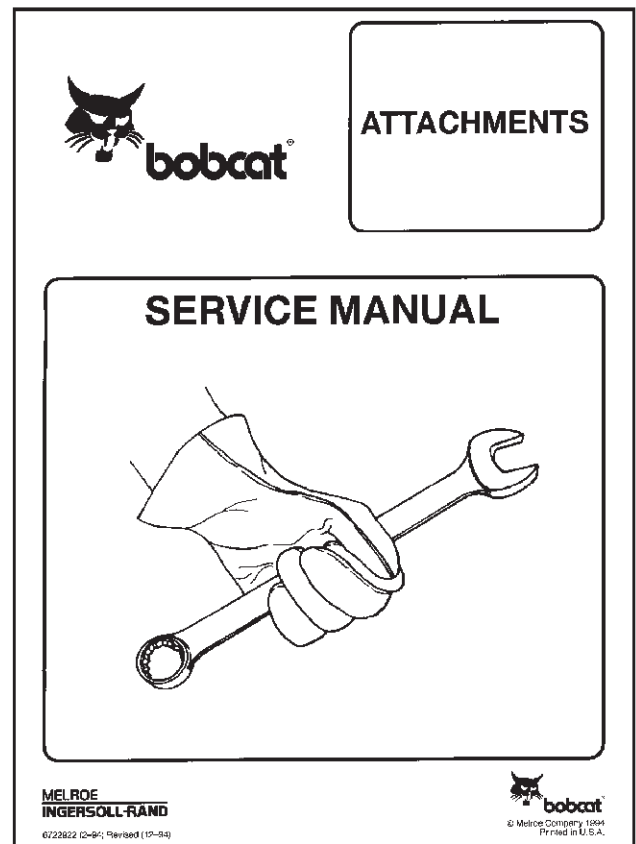



Melroe Company is ISO 9001 certified

ISO 9001 is a set of international standards that control the processes and procedures which we use to design, develop, manufacture, distribute, and service Melroe Company products.

British Standards Institute (**BSI**) is the Certified Registrar Melroe chose to assess the Company's compliance with the ISO 9001 set of standards. The BSI registration certifies that the two Melroe manufacturing plants and the Melroe corporate offices (Gwinner, Bismarck & Fargo) in North Dakota are in compliance with ISO 9001. Only certified assessors, like BSI, can grant registrations. Since registration requires this *third-party auditing*, it is irrefutable evidence of conformance. Continued certification is subject to periodic audits.

ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

What does ISO 9001 mean to Bobcat Customers? It means that Melroe Company produces your Bobcat loader, Excavator or Spra-Coupe, and attachments with strict attention to details, using the latest technology and proven techniques.

FOREWORD

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Planer. **READ AND UNDERSTAND THIS MANUAL BEFORE OPERATING YOUR PLANER.** If you have any questions, see your Bobcat loader dealer.

SERIAL NUMBER LOCATION	v ..
ATTACHMENT DELIVERY REPORT	v ..
PLANER IDENTIFICATION AND MACHINE SIGNS	v



Thank you very much
for your reading.
Please click here
to get more information.