



COLD PLANER

INSTRUCTION




OPERATION

SERVICE

PDF



DOWNLOAD

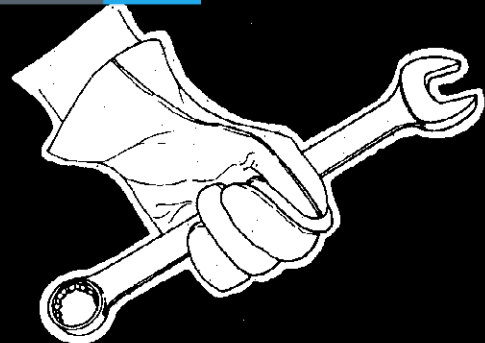



FOREWORD

This manual gives the owner/operator/mechanic necessary safety, operating, preventive maintenance and servicing instructions for the Cold Planer. To find a section, put thumb on the tab and turn the pages until correct section is reached. Read this manual completely and know the Cold Planer before operating or servicing it.

CONTENTS

SAFETY INSTRUCTIONS	i
SERIAL NUMBER LOCATION	ii
COLD PLANER IDENTIFICATION	ii
OPERATING INSTRUCTIONS	1
COLD PLANER SERVICE	5
SPECIFICATIONS	23

OPERATING
INSTRUCTIONS

COLD PLANER
SERVICE

SPECIFICATIONS




I. SAFETY INSTRUCTIONS

SAFETY IS THE OPERATOR'S RESPONSIBILITY

A QUALIFIED OPERATOR* MUST DO THE FOLLOWING

*For an operator to be qualified, he must not use drugs or alcoholic drinks which impair his alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he can safely operate a machine.

A. UNDERSTAND THE WRITTEN INSTRUCTIONS, RULES AND REGULATIONS

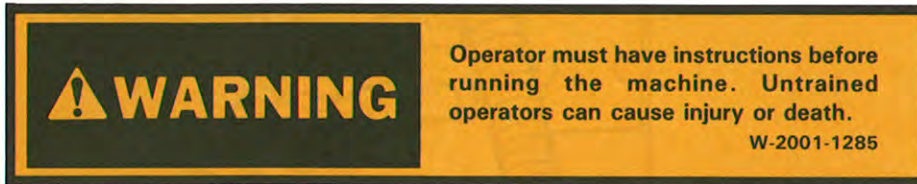

B-10731



1. The written instructions from the Melroe Co., include the Delivery Report, loader Operator's Handbook and Manual, FIEI Safety Manual, Attachment Manual and Machine Signs (Decals).
2. Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may identify a hazard such as buried cable.

B. HAVE TRAINING WITH ACTUAL OPERATION


1. Operator training must consist of a demonstration and verbal instruction. This training is given by Bobcat loader dealer before the Cold Planer is delivered.
2. The new operator must start in an area without bystanders and use all the controls until he can operate the machine safely under all conditions of his work area.

C. KNOW THE WORK CONDITIONS

1. The operator must know any prohibited uses or work area for the machine.

D. USE SAFETY RULES

1. Check that the Bob-Tach levers are in the locked position and the wedges are fully engaged into the holes of the Cold Planer.
2. Make sure all the controls (levers and pedals) are in the NEUTRAL position before starting the Bobcat Loader.
3. Operate the Cold Planer only from the operator's seat.
4. Keep your feet on the pedals, seat belt fastened snugly and seat bar lowered when operating the Cold Planer.
5. When learning to operate the Cold Planer, do it at a slow rate in an area clear of bystanders.
6. DO NOT permit personnel to be in the work area when operating the Cold Planer.
7. Before leaving the operator's seat, always lower the lift arms fully, engage the brake, stop the engine, raise the seat bar and move the pedals until both are locked.
8. DO NOT make any adjustments or repairs on the Cold Planer while the engine is running.
9. Never operate the Cold Planer with the lift arms raised. Work only on the surface that the machine is standing on.

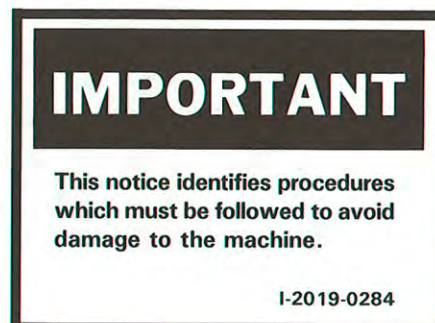



Thank you very much
for your reading.
Please click here
to get more information.