



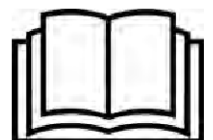

Bobcat®

Operation & Maintenance Manual Plate Compactor

(PC30) S/N 769500101 & Above
(PC60) S/N 608500101 & Above
(PC62) S/N 608600101 & Above

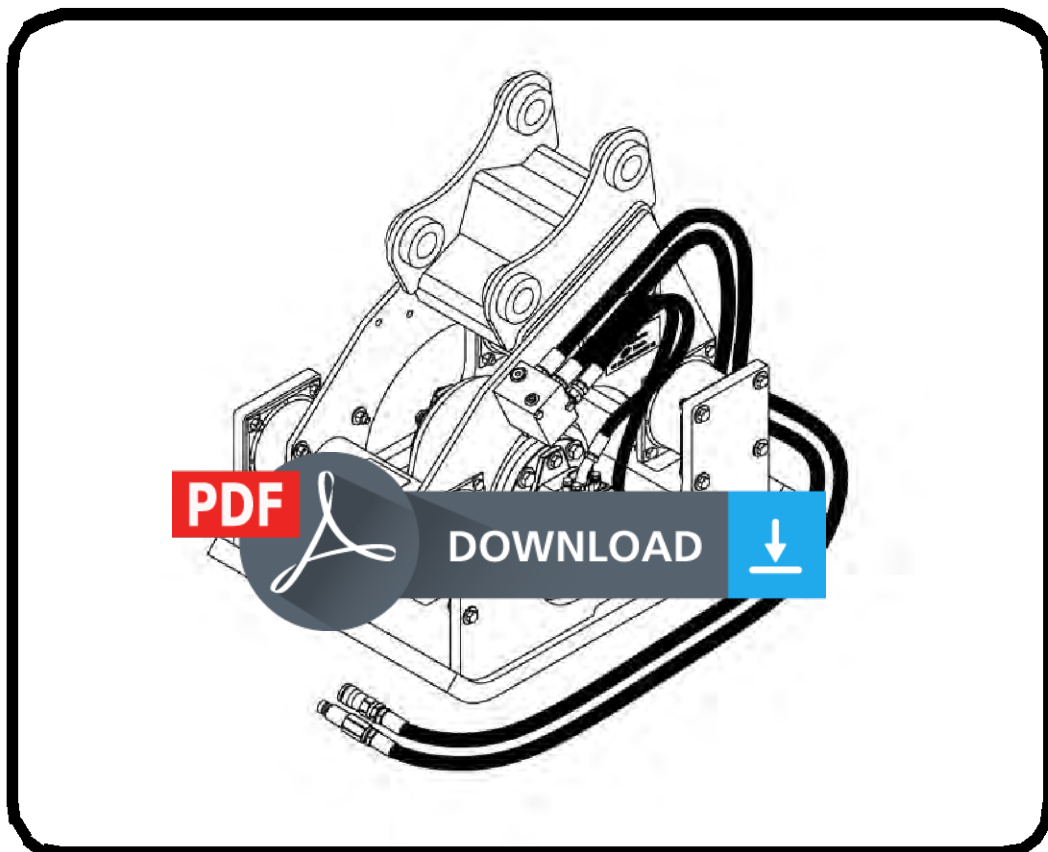

CONTENTS

| | |
|-------------------------------------|----|
| FOREWORD | 3 |
| SAFETY AND TRAINING RESOURCES | 11 |
| OPERATING INSTRUCTIONS | 21 |
| PREVENTIVE MAINTENANCE | 63 |
| MACHINE SIGN TRANSLATIONS | 71 |
| SPECIFICATIONS | 75 |
| WARRANTY | 81 |
| ALPHABETICAL INDEX | 85 |

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat attachment.

| | |
|--|---|
| BOBCAT COMPANY IS ISO 9001 CERTIFIED | 5 |
| SERIAL NUMBER LOCATION | 7 |
| Attachment Serial Number | 7 |
| DELIVERY REPORT | 7 |
| ATTACHMENT IDENTIFICATION | 8 |



Thank you very much
for your reading.
Please click here
to get more information.