



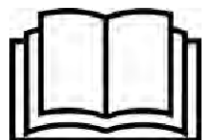

Bobcat®

Operation & Maintenance Manual Surface Planer

(Surface Planer) S/N 231100101 & Above

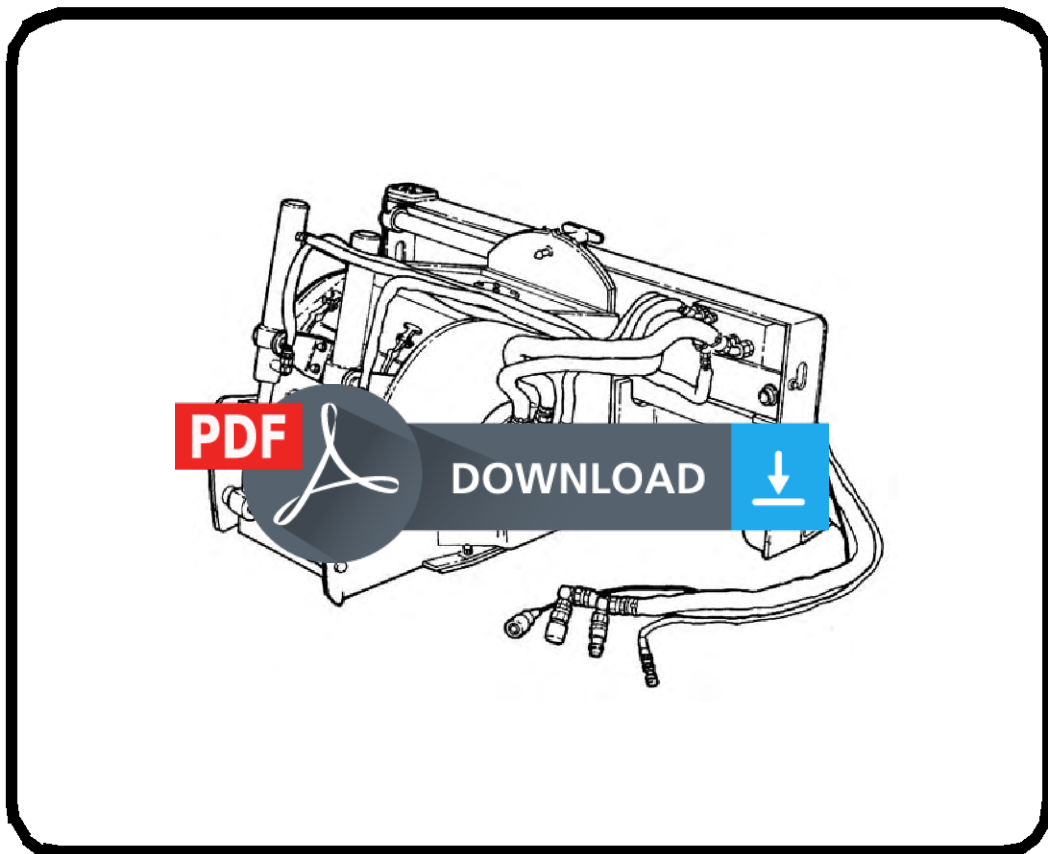

CONTENTS

FOREWORD	3
SAFETY & TRAINING RESOURCES	11
OPERATING INSTRUCTIONS	19
PREVENTIVE MAINTENANCE	47
SPECIFICATIONS	59
WARRANTY	63
ALPHABETICAL INDEX	67

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat surface planer in the spaces below. Always use these numbers when referring to your Bobcat surface planer.

Surface Planer Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat surface planer. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT SURFACE PLANER. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Attachment Serial Number	7
DELIVERY REPORT	7
ATTACHMENT IDENTIFICATION	8
FEATURES AND ACCESORIES	9
Standard Items	9
Options And Accessories	9



Thank you very much
for your reading.
Please click here
to get more information.