

John Deere Agriculture

**6100D, 6110D, 6115D, 6125D, 6130D & 6140D
Tractor Repair Technical Service Manual
(November 2011)**

REPAIR MANUAL

6100D, 6110D, 6115D, 6125D, 6130D & 6140D



TM605019, December 2011



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Serial Number Locations

Section 20 - ENGINE REPAIR

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL AND AIR

- Group 05 - Fuel System
- Group 10 - Speed Control Linkage
- Group 15 - Air Intake System

Section 40 - ELECTRICAL REPAIR

- Group 05 - Battery, Starter and Alternator
- Group 10 - Connectors
- Group 15 - Wiring Harness Routing
- Group 20 - Electrical System Components
- Group 25 - Auxiliary Lighting Components
- Group 30 - Fuses And Relays
- Group 35 - Lighting

Section 50 - POWER TRAIN

- Group 00 - Towing
- Group 05 - Component Removal
- Group 10 - PTO
- Group 15 - Clutch
- Group 25 - Separation

Section 60 - STEERING AND BRAKE REPAIR

- Group 05 - Steering Repair
- Group 10 - Front Axle—2WD
- Group 15 - Front Axle—MFWD
- Group 20 - Brake Repair

Section 70 - HYDRAULIC REPAIR

- Group 05 - Hydraulic Pump and Oil Cooler
- Group 10 - Rockshaft
- Group 15 - Lubrication System
- Group 20 - Selective Control Valve (SCV)
- Group 25 - Mid-Mount Selective Control Valve (SCV)
- Group 30 - Hydraulic Trailer Brake Valve

Section 80 - MISCELLANEOUS REPAIR

- Group 05 - Hood and Fenders
- Group 10 - 3-Point Hitch
- Group 15 - Wheels
- Group 20 - Front Support
- Group 25 - Trailer Mounting and Swinging Drawbar

Section 90 - OPEN OPERATOR STATION REPAIR

- Group 05 - Seat and Support
- Group 10 - ROPS

Group 15 - Operator Platform

Group 20 - Cowl Repair

Section 95 - CAB—OPERATOR STATION REPAIR

Group 00 - Removal and Installation of Components

Group 05 - Selective Control Valve Cable Adjustment

Group 10 - Air Conditioning System

Group 15 - Heating System

Group 20 - Seat

Section 99 - SPECIAL TOOLS

Group 05 - DEALER-FABRICATED TOOLS

Service Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.