

# 120 Excavator Repair

## REPAIR TECHNICAL MANUAL

120

TM1660 21FEB05 (ENGLISH)

For complete service information also see:

120 Excavator Diagnostic	TM1659
Alternators and Starting Motors	CTM77
PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA, Tier 3/Stage IIA Tier 3/Stage III, (Base Engine)	CTM104
JDG10274 Ultrasonic Undercarriage Measurement Gauge	CTM10001



John Deere Construction and Forestry

## Table of contents

### **FOREWORD**

### **TECHNICAL INFORMATION FEEDBACK FORM**

#### **Section 00 - GENERAL INFORMATION**

- Group 0001 - Safety
- Group 0002 - General Specifications
- Group 0003 - Torque Values
- Group 04 - Fuels and Lubricants

#### **Section 01 - TRACKS**

- Group 0130 - Track System

#### **Section 02 - AXLES AND SUSPENSION SYSTEMS**

- Group 0250 - Axle Shaft, Bearings, and Reduction Gears
- Group 0260 - Hydraulic System

#### **Section 04 - ENGINE**

- Group 0400 - Removal and Installation

#### **Section 05 - ENGINE AUXILIARY SYSTEMS**

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems

#### **Section 07 - DAMPENER DRIVE (FLEX COUPLING)**

- Group 0752 - Elements

#### **Section 16 - ELECTRICAL SYSTEM**

- Group 1671 - Batteries, Support, and Cables
- Group 1672 - Alternator, Regulator, and Charging System Wiring
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators

#### **Section 17 - FRAME OR SUPPORTING STRUCTURE**

- Group 1740 - Frame Installation
- Group 1749 - Chassis Weights

#### **Section 18 - OPERATOR'S STATION**

- Group 1800 - Removal and Installation
- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating

#### **Section 33 - EXCAVATOR**

- Group 3302 - Buckets
- Group 3340 - Frames
- Group 3360 - Hydraulic System

#### **Section 43 - SWING OR PIVOTING SYSTEM**

- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System

#### **Section 99 - DEALER FABRICATED TOOLS**

- Group 9900 - Dealer Fabricated Tools



## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much  
for your reading.  
Please click here  
to get more information.