
## Concrete Pump

Used With Remote Attachment Control

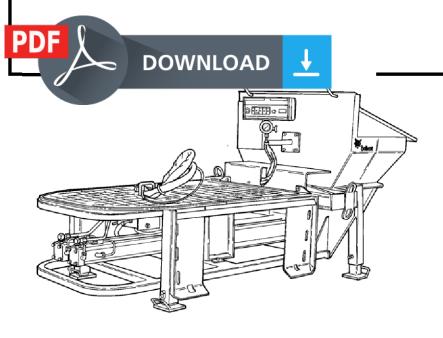

S/N 233100101 & Above

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



6901059 (6-05) Revised (5-12) Printed in U.S.A. Bobcat Company 2005

## **CONTENTS**

PHONE:	
ADDRESS:	·
YOUR BOBCAT® DEALER:	
NOTES	
NOTES	
Bobcat Concrete Pump Serial Number	
Write the correct information for YOUR Concrete I use these numbers when referring to your Bobcat	
REFERENCE INFORMATION	
GELONI TOATIONS	
SPECIFICATIONS	
PREVENTIVE MAINTENANCE	
OPERATING INSTRUCTIONS	Ol-1
SAFETY	IX
FOREWORD	III

**FOREWORD** 

**SAFETY** 

OPERATING INSTRUCTIONS

PREVENTIVE MAINTENANCE

**SPECIFICATIONS** 

Belgium



## **FOREWORD**

This Operation and Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Concrete Pump. READ AND UNDERSTAND THIS OPERATION AND MAINTENANCE MANUAL BEFORE OPERATING OUR CONCRETE PUMP. If you have any questions, see your Bobcat Loader dealer.

ATTACHMENT DELIVERY REPORT	VI
BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED	. V
PARTS IDENTIFICATION AND MACHINE SIGNS (DECALS)	VII
SERIAL NUMBER LOCATIONS	VI

This attachment is ONLY approved for use on Bobcat Skid-Steer Loaders equipped with the Bobcat Interlock Control System (BICS). On loaders equipped with the forward pivot seat bar, the loader must also be equipped with a Remote Attachment Control Harness Kit.



Thank you very much for your reading.

Please click here to get more information.