

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

I 40TL

Loader



Part number 48070328

2nd edition English

December 2016

Replaces part number 47861207



Contents

1 GENERAL INFORMATION

Note to the owner.....	1-1
Manual scope and required training level	1-3
Ecology and the environment	1-5
International symbols.....	1-6
Torque - Minimum Tightening Torques for Normal Assembly	1-7
Torque - Standard torque data for hydraulics	1-10
Product identification	1-12
Machine orientation.....	1-13
Product overview	1-14

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules.....	2-2
Precautionary Statements.....	2-7
Safety signs	2-9
Safety features	2-14

3 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Machine preparation.....	3-1
Installing the loader.....	3-2
Connecting the hydraulics at the tractor.....	3-6
Installing the quick-attach plate.....	3-7
Installing the quick-attach bucket.....	3-8
Installing the bucket level indicator	3-10

PARKING THE UNIT

Removing the quick-attach bucket	3-12
Removing the quick-attach plate	3-13
Removing the loader	3-14

4 WORKING OPERATIONS

GENERAL INFORMATION

Operating the loader.....	4-1
Front remote control valve.....	4-10
Front remote control valve - lock out	4-11

5 MAINTENANCE

GENERAL INFORMATION

Basic instructions.....	5-1
Daily inspection.....	5-2
Hydraulics	5-4

Recommended Lubricants	5-5
------------------------------	-----

MAINTENANCE CHART

Maintenance planning	5-6
----------------------------	-----

Every 8 hours or daily

Front loader and bucket - Lubricate	5-6
---	-----

DAILY

Tractor hydraulic oil reservoir - Check	5-6
---	-----

After the first 10 hours of operation

Hardware - Check	5-6
------------------------	-----

50 hours

Hardware - Check	5-7
------------------------	-----

6 TROUBLESHOOTING

SYMPTOM(S)

Front loader and bucket - Troubleshooting	6-1
---	-----

7 SPECIFICATIONS

Loader specifications	7-1
-----------------------------	-----

Weight Limitations	7-3
--------------------------	-----

Liquid ballast	7-4
----------------------	-----

Tire pressure	7-6
---------------------	-----

8 ACCESSORIES

Attachments	8-1
-------------------	-----

9 FORMS AND DECLARATIONS

Delivery Report- Owner Copy - Owner Copy	9-1
--	-----

Delivery report - Dealer copy - Dealer Copy	9-2
---	-----



Thank you very much
for your reading.
Please click here
to get more information.