

OPERATOR'S MANUAL

Boomer™ 20

Boomer™ 25

Compact Tractor

NOT FOR REPRODUCTION



Part number 47708986

2nd edition English

June 2014

Replaces part number 84423061



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Tractor intended use	1-2
Product identification	1-4
Machine orientation	1-5
General specification - Biodiesel fuels	1-6

2 SAFETY INFORMATION

Precautionary statements	2-1
Safety rules	2-2
Do not operate tag	2-11
Ecology and the environment	2-12
Safety signs	2-13
Instructional signs	2-22
International symbols	2-29
Proposition 65	2-30

3 CONTROLS AND INSTRUMENTS

OPERATOR'S SEAT

Seat belt	3-1
Seat controls	3-1
Roll Over Protective Structure (ROPS)	3-2

FORWARD CONTROLS

Instrument panel	3-4
Brake pedal	3-6
Park brake	3-7
Hand throttle	3-8
Power Take-Off (PTO) switch	3-8
Key switch	3-8
Differential lock pedal	3-9
Hydrostatic transmission (HST) control pedal	3-10
Multifunctional light switch	3-10

LEFT-HAND SIDE CONTROLS

Transmission range selector lever	3-11
Front wheel drive selector lever	3-11

RIGHT-HAND SIDE CONTROLS

Hydraulic power lift (HPL)	3-12
Hydraulic power lift (HPL) drop rate control valve	3-12
Rear remote hydraulic valve	3-13
Mid mount two spool hydraulic valve (optional)	3-14
Power take off (PTO) selection lever	3-16

EXTERIOR CONTROLS

Hood latch	3-17
------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Engine break-in procedure	4-1
Power take off (PTO) operation	4-2
Three-point hitch	4-4
Attaching three-point hitch equipment	4-5
Drawbar Hitch	4-8
Hydraulic lift rocker	4-8

STARTING THE UNIT

Key switch	4-9
Cold starting aids	4-9
Starting the engine	4-10
Starting the tractor with jumper cables	4-12

STOPPING THE UNIT

Stopping the engine	4-13
Emergency stopping	4-14
Brake controls	4-15

MOVING THE UNIT

Steering operation	4-16
Hydrostatic transmission (HST) operation	4-17
Transmission operation at low ambient temperatures	4-20

PARKING THE UNIT

Brakes and controls - Park	4-21
----------------------------------	------

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

External lighting - Identification	5-1
Hazard warning light operation	5-2
Turn signal operation	5-3
Headlight/work light operation	5-4
Brake light operation	5-6
Rear work light (optional)	5-7
Driving the vehicle	5-8

SHIPPING TRANSPORT

Carrying the tractor on a transporter	5-9
---	-----

RECOVERY TRANSPORT

Towing	5-9
--------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

Tractor ballasting	6-1
Tractor ballasting weights	6-2
Liquid ballast	6-4

7 MAINTENANCE

GENERAL INFORMATION

General information	7-1
Safety rules diesel fuel	7-3
Biodiesel fuel - approved blend ratio	7-3
Refueling the tractor	7-4
Organic Acid Technology (OAT) coolant	7-5
Consumables	7-6

MAINTENANCE CHART

Maintenance Chart	7-7
-------------------------	-----

Every 10 hours or daily

Engine oil level	7-8
Engine cooling system	7-10

After the first 50 hours of operation

Engine oil and filter	7-11
Fuel filter	7-12
Hydraulic oil filter	7-13
Hydrostatic (HST) oil filter	7-13
Roll Over Protective Structure (ROPS)	7-14
Wheels bolt/nut	7-16

Every 50 hours

Grease fittings	7-17
Transmission fluid level	7-18
Brake pedal free play	7-18
Hydrostatic Transmission (HST) neutral adjustment	7-18
Fan belt	7-18
Tires and wheels	7-19
Front axle differential fluid level	7-21
Air cleaner	7-22

Every 100 hours

Fuel filter	7-24
-------------------	------



Thank you very much
for your reading.
Please click here
to get more information.