




Bobcat®

Service Manual

S/N 520611001 & Above
S/N 522411001 & Above



DOWNLOAD

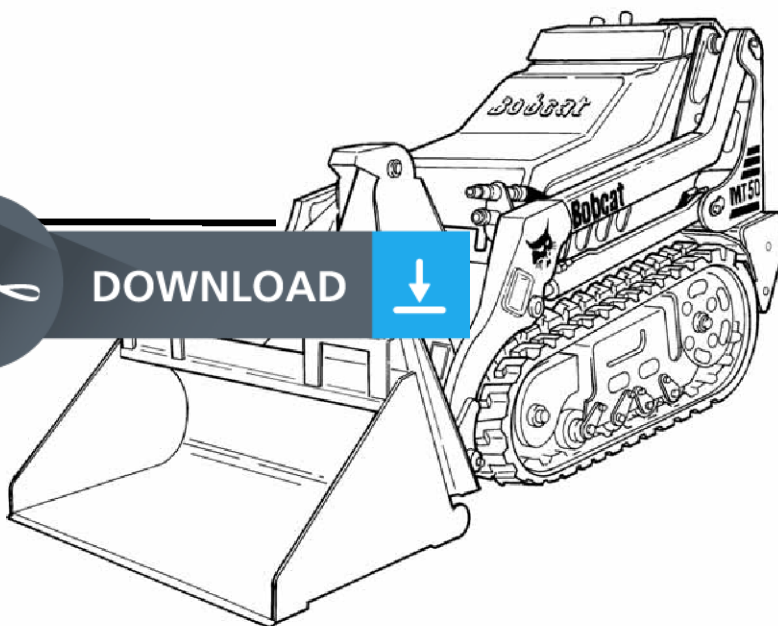

Dealer Copy -- Not for Resale

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

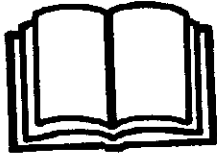

B-10731a

- Never service the Bobcat Mini Loader without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


WRONG



B-16106

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

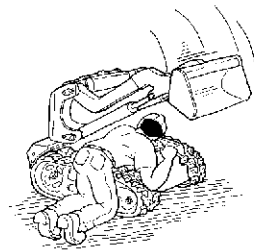

B-16105

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


WRONG

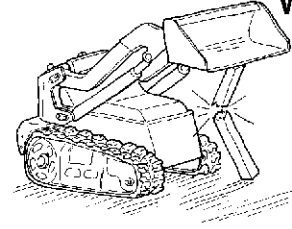

B-16104

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.


WRONG

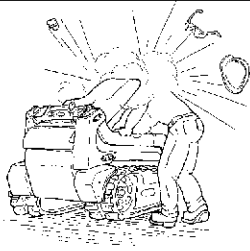

B-16103

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG

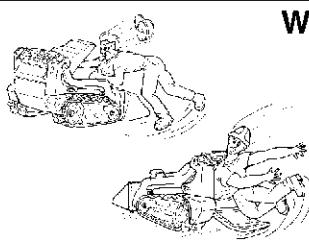

B-16111
B-16102

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW22-0805

Dealer Copy -- Not for Resale



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	60-01	LEFT AND RIGHT TRAVEL ADJUSTMENT	30-01
AIR CLEANER SERVICE	10-01	LOADER SPECIFICATIONS (MT50).....	SPEC-01
ALTERNATOR	50-01	LOADER TORQUE.....	SPEC-01
BATTERY.....	50-01	LIFT LOCK VALVE	20-01
BOB-TACH.....	10-01, 40-01	LIFTING AND BLOCKING THE LOADER.....	10-01
BLOWER ASSEMBLY	50-01	LIFT ARM	40-01
CONTROL PANEL PLATE.....	40-01	LIFT ARM SUPPORT DEVICE.....	10-01
CONVERSIONS	SPEC-01	LUBRICATION OF THE BOBCAT LOADER	10-01
COUNTERBALANCE VALVE	20-01	MAIN RELIEF VALVE	20-01
COUNTERWEIGHT	40-01	MUFFLER.....	60-01
CYLINDER (LIFT).....	20-01	PARKING BRAKE.....	30-01
CYLINDER (TILT)	20-01	PORT RELIEF VALVE	20-01
DRIVE COMPONENTS.....	30-01	RADIATOR	60-01
DRIVE MOTOR.....	20-01	REAR DOOR.....	40-01
DUAL INLET MODE SELECT VALVE	20-01	RECONDITIONING THE ENGINE	60-01
ELECTRICAL SYSTEM INFORMATION	50-01	REVERSE STOP PANEL	40-01
ENGINE	60-01	REVERSE SPEED LIMIT VALVE	20-01
ENGINE COMPONENTS AND TESTING	60-01	SERVICE SCHEDULE	10-01
ENGINE COOLING SYSTEM.....	10-01	SIDE ENGINE MOUNTS	60-01
ENGINE COVER	40-01	SINGLE INLET MODE SELECT VALVE	20-01
ENGINE INFORMATION AND TESTING	60-01	SPARK ARRESTOR MUFFLER.....	10-01
ENGINE LUBRICATION SYSTEM.....	10-01	SPEED CONTROL VALVE.....	20-01
ENGINE SPECIFICATIONS.....	SPEC-01	STARTER	50-01
ENGINE SPEED CONTROL	60-01	TILT LOCK VALVE.....	20-01
FLYWHEEL AND HOUSING.....	60-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
FRONT ENGINE MOUNT.....	60-01	TOWING THE LOADER.....	10-01
FUEL SYSTEM.....	10-01	TRANSPORTING THE BOBCAT LOADER.....	10-01
FUEL TANK.....	40-01		
HAND BAR	40-01		
HYDRAULIC CONNECTION SPECS.....	SPEC-01		
HYDRAULIC CONTROL VALVE (DRIVE)	20-01		
HYDRAULIC CONTROL VALVE (WORK GROUP)	20-01		
HYDRAULIC FLUID RESERVOIR.....	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC FILTER	20-01		
HYDRAULIC OIL COOLER	20-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION.....	20-01		
INSTRUMENT PANEL.....	50-01		



Thank you very much
for your reading.
Please click here
to get more information.