


Bobcat®

Service Manual

S/N 528711001 & Above
S/N 528811001 & Above
S/N 538711001 & Above
S/N 538811001 & Above

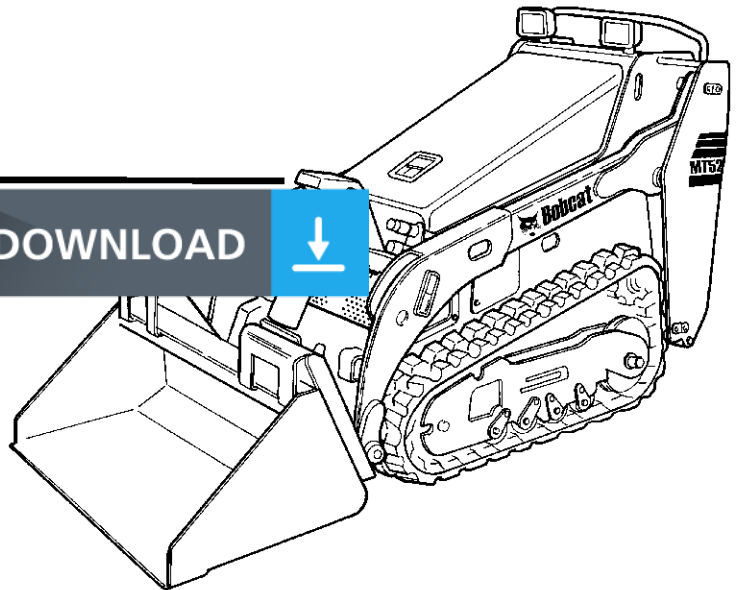

Dealer Copy -- Not for Resale

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT



B-10731a

- ⚠ Never service the Bobcat Mini Track Loader without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


WRONG



B-23041

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

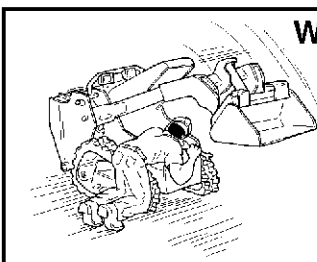

B-23035

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


WRONG

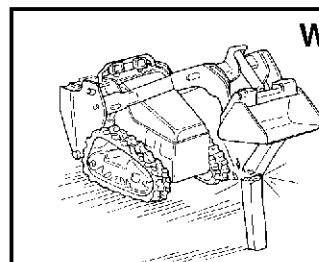

B-23036

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

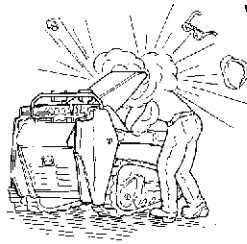

B-23039

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG



B-23040
B-23034

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW29-0805



Bobcat®

ALPHABETICAL INDEX

<p>AIR CLEANER 70-01</p> <p>AIR CLEANER SERVICE 10-01</p> <p>ALTERNATOR 60-01</p> <p>BATTERY 60-01</p> <p>BOB-TACH..... 10-01, 50-01</p> <p>BOTTOM ACCESS PANEL 50-01</p> <p>CONTROLS 10-01</p> <p>CONVERSIONS SPEC-01</p> <p>CYLINDER (LIFT) 20-01</p> <p>CYLINDER (TILT) 20-01</p> <p>DRIVE BELT 30-01</p> <p>DRIVE COMPONENTS 40-01</p> <p>DRIVE MOTOR..... 30-01</p> <p>ELECTRICAL ATTACHMENT CONTROL REF. 60-01</p> <p>ELECTRICAL SYSTEM 10-01</p> <p>ELECTRICAL SYSTEM INFORMATION 60-01</p> <p>ENGINE (S/N 528711001-528712699, S/N 528811001-528811149, S/N 538711001-528712499) 70-01</p> <p>ENGINE (S/N 528712700 & ABOVE, S/N 528811150 & ABOVE, S/N 538712500 & ABOVE) 70-01</p> <p>ENGINE COMPONENTS AND TESTING 70-01</p> <p>ENGINE COOLING SYSTEM..... 10-01</p> <p>ENGINE INFORMATION AND TESTING 70-01</p> <p>ENGINE LUBRICATION SYSTEM..... 10-01</p> <p>ENGINE SPECIFICATIONS.....SPEC-01</p> <p>ENGINE SPEED CONTROL 70-01</p> <p>FLYWHEEL..... 70-01</p> <p>FUEL SYSTEM..... 10-01</p> <p>FUEL TANK..... 50-01</p> <p>GRAB BAR 50-01</p> <p>HOOD 50-01</p> <p>HYDRAULIC CONNECTION SPECS.....SPEC-01</p> <p>HYDRAULIC CONTROL VALVE 20-01</p> <p>HYDRAULIC FILTER 20-01</p> <p>HYDRAULIC FLUID RESERVOIR..... 20-01</p> <p>HYDRAULIC FLUID SPECIFICATIONSSPEC-01</p> <p>HYDRAULIC OIL COOLER 20-01</p> <p>HYD. GEAR PUMP MOUNTING BRACKET 70-01</p> <p>HYDRAULIC PUMP..... 20-01</p> <p>HYDRAULIC/HYDROSTATIC SYSTEM 10-01</p> <p>HYDRAULIC SYSTEM INFORMATION..... 20-01</p> <p>HYDROSTATIC CONTROLS (S/N 528711001-528712699, S/N 528811001-528811149, S/N 538711001-528712499) 30-01</p>	<p>HYDROSTATIC CONTROLS (S/N 528712700 & ABOVE, S/N 528811150 & ABOVE, S/N 538712500 & ABOVE) 30-01</p> <p>HYDROSTATIC PUMP 30-01</p> <p>HYDROSTATIC SYSTEM INFORMATION..... 30-01</p> <p>INSTRUMENT PANEL..... 50-01</p> <p>LOADER SPECIFICATIONS SPEC-01</p> <p>LIFT ARM 50-01</p> <p>LIFT ARM SUPPORT DEVICE..... 10-01</p> <p>LIFTING AND BLOCKING THE LOADER..... 10-01</p> <p>LUBRICATION OF THE BOBCAT LOADER 10-01</p> <p>MAIN RELIEF VALVE 20-01</p> <p>MUFFLER..... 70-01</p> <p>NEUTRAL START SENSOR (S/N 528711001-528712429, S/N 528811001-528811121, S/N 538711001-528712295) 60-01</p> <p>NEUTRAL START SENSOR (S/N 528712430 & ABOVE, S/N 528811122 & ABOVE, S/N 538712296 & ABOVE) 60-01</p> <p>PARKING BRAKE..... 40-01</p> <p>PORT RELIEF VALVES..... 20-01</p> <p>RADIATOR 70-01</p> <p>RECONDITIONING THE ENGINE 70-01</p> <p>REVERSE STOP PANEL 50-01</p> <p>RIDE-ON PLATFORM 50-01</p> <p>SERVICE SCHEDULE 10-01</p> <p>SPARK ARRESTOR MUFFLER..... 10-01</p> <p>STARTER 60-01</p> <p>TAILGATE..... 50-01</p> <p>TORQUE SPECIFICATIONS FOR BOLTS SPEC-01</p> <p>TOWING THE LOADER..... 10-01</p> <p>TRANSPORTING THE BOBCAT LOADER..... 10-01</p>
--	--

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.