

# Toolcat™ 5600




# Bobcat®

## Service Manual

S/N 520511001 & Above



DOWNLOAD

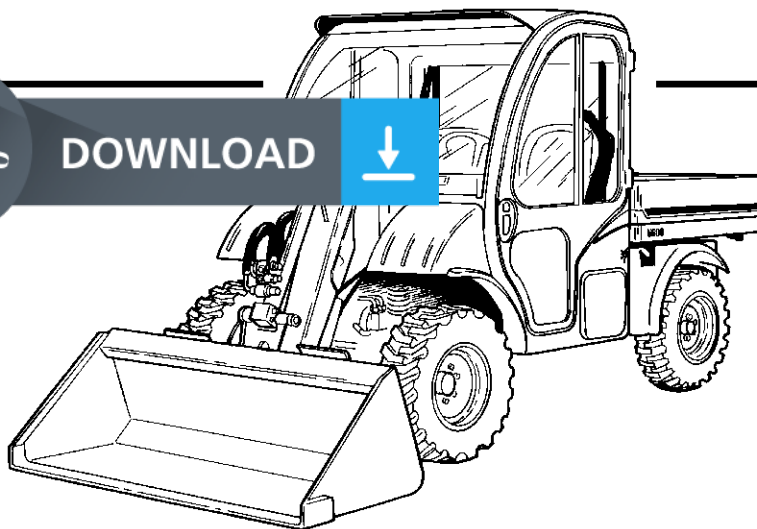

Equipped With Toolcat Interlock  
Control System (TICS)



# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT



B-10731a

⚠ Never service the machine without instructions.


### CORRECT



B-21495

⚠ Cleaning and maintenance are required daily.


### WRONG

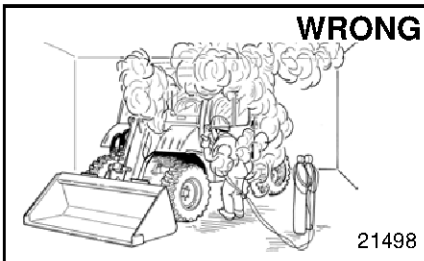

21498

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

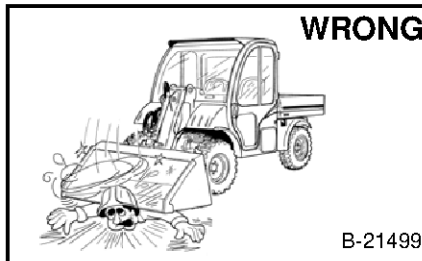

B-21499

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arm or cargo box to drop. Do not go under lift arm or cargo box when raised unless supported by an approved lift arm or cargo box support device. Replace it if damaged.

### WRONG

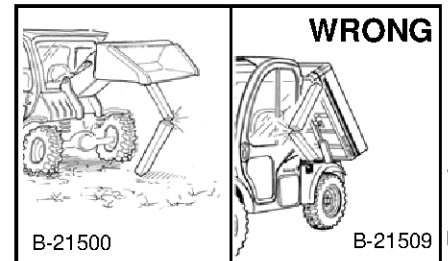


B-21500

B-21509

- ⚠ Never work on the machine with lift arm or cargo box up unless supported by an approved support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

### WRONG

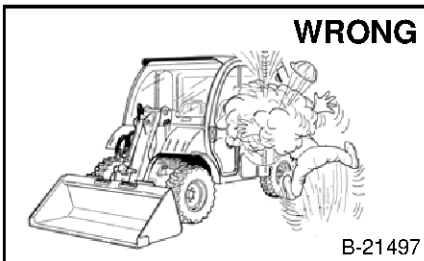

B-21497

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.


### WRONG



B-21496

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep side access doors closed except for service.

### WRONG

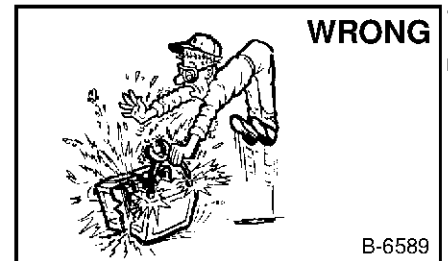

B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

Dealer Copy -- Not for Resale

MSW25-0805



**Bobcat®**

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	GENERAL AIR CONDITIONING SERVICE	
AIR CLEANER SERVICE .....	10-01	GUIDELINES.....	80-01
AIR CONDITIONING SERVICE.....	80-01		
AIR CONDITIONING SYSTEM FLOW .....	80-01	HEATER/AC FAN .....	80-01
ALTERNATOR .....	60-01	HEATER VALVE .....	80-01
ARM REST SENSOR .....	60-01	HITCH.....	50-01
AUXILIARY HYDRAULIC VALVE .....	20-01	HYDRAULIC FLUID RESERVOIR .....	20-01
AXLE .....	40-01	HYDRAULIC PUMP .....	20-01
AXLE/DIFFERENTIAL (FRONT & REAR) .....	10-01	HYDRAULIC/HYDROSTATIC FILTER .....	20-01
AXLE HUB WITH AXLE SHAFT .....	40-01	HYDRAULIC/HYDROSTATIC	
AXLE HUB WITHOUT AXLE SHAFT.....	40-01	FLUID SPECIFICATIONS .....	SPEC-01
AXLE SHAFT .....	40-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
		HYDRAULIC SYSTEM INFORMATION .....	20-01
BATTERY.....	60-01	HYDROSTATIC MOTOR .....	30-01
BOB-TACH .....	10-01, 50-01	HYDROSTATIC PUMP .....	30-01
BRAKE.....	40-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CALIBRATION .....	60-01	INSTRUMENT PANEL.....	60-01
CARGO BOX .....	50-01		
CARGO BOX SUPPORT DEVICE.....	10-01	LEAF SPRING.....	50-01
CENTER CONSOLE.....	50-01	LIFT ARM .....	50-01
CHARGE PRESSURE.....	30-01	LIFT ARM BY-PASS CONTROL VALVE.....	20-01
COMPONENTS .....	80-01	LIFT ARM SUPPORT DEVICE .....	10-01
COMPRESSOR .....	80-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CODENSER.....	80-01	LIGHTS .....	60-01
CONTROL LEVER (JOYSTICK).....	20-01	LUBRICATION.....	10-01
CONVERSIONS .....	SPEC-01		
COOLING FAN .....	70-01	MAIN RELIEF VALVE .....	20-01
CYLINDER (CARGO BOX).....	20-01	MUFFLER.....	70-01
CYLINDER (LIFT).....	20-01		
CYLINDER (TILT) .....	20-01	OIL COOLER.....	30-01
		OPERATOR CAB .....	10-01, 50-01
DIAGNOSTICS .....	60-01	OPERATOR SEAT .....	50-01
DISPLAY CONTROLLER.....	60-01		
DRIVE BELT .....	30-01	PARKING BRAKE.....	40-01
DRIVE CONTROLLER .....	60-01	PASSENGER SEAT .....	50-01
		PILOT VALVE .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	PORT BLOCK.....	30-01
ENGINE .....	70-01	PORT RELIEF .....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01	POWER STEERING PUMP .....	20-01
ENGINE COOLING SYSTEM.....	10-01		
ENGINE LUBRICATION SYSTEM.....	10-01	RPM SENSOR .....	70-01
ENGINE SPECIFICATIONS .....	SPEC-01	RADIATOR .....	70-01
ENGINE SPEED CONTROL .....	70-01	RECEIVER/DRIER .....	80-01
EVAPORATOR/HEATER UNIT .....	80-01	RECONDITIONING THE ENGINE .....	70-01
EXPANSION VALVE .....	80-01	REGULAR MAINTENANCE .....	80-01
		REMOTE START .....	10-01
FENDER (FRONT LEFT).....	50-01	REMOTE HYDRAULICS DIVERTER VALVE .....	20-01
FENDER (FRONT RIGHT) .....	50-01		
FENDER (REAR LEFT).....	50-01		
FENDER (REAR RIGHT).....	50-01		
FLOOR CONSOLE .....	50-01		
FLYWHEEL AND HOUSING .....	70-01		
FRONT AUXILIARY HYD. COUPLER BLOCK.....	20-01		
FUEL SYSTEM.....	10-01		
FUEL TANK.....	50-01		

Continued On Next Page

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.