




Bobcat®

Operation & Maintenance Manual

Finish Mower

3FM60 - S/N A1FR00101 & Above
3FM72 - S/N A1FS00101 & Above

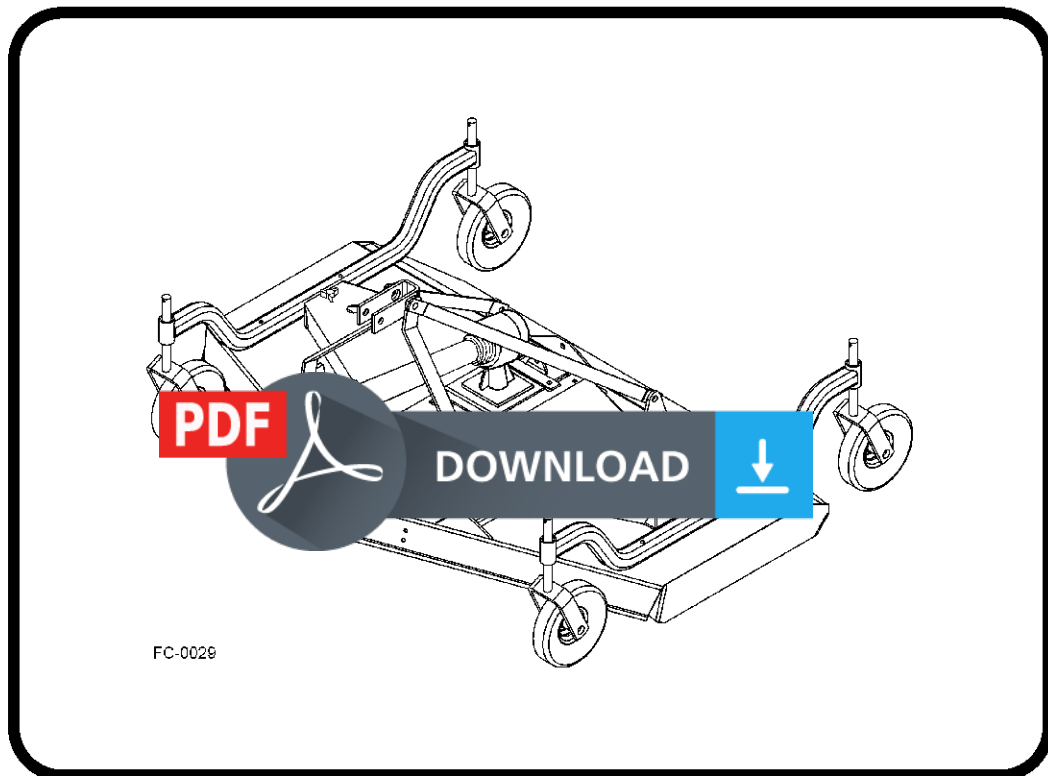

***Not approved for use on the Bob-Tach Three-Point Hitch Adapter or Three-Point Hitch U-Frame Couplers.**






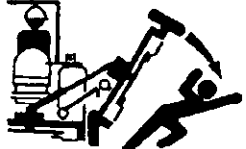
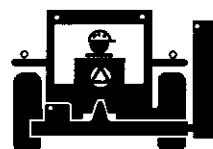

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



To the Owner/Operator/Dealer

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

BEFORE YOU START!! Read the safety messages on the implement and shown in your manual. Observe the rules of safety and common sense!

 <h1 style="margin: 0;">DANGER</h1>			
<p>FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.</p>			
<p>1.</p> 	<p>2. NO RIDERS. NO CHILDREN OPERATORS.</p> 	<p>3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, ROPS & OPS</p> 	<p>4. BLOCK UP SECURELY BEFORE WORKING UNDER.</p> 
<p>1. Study and understand Operator's Manuals, Safety Decals, and Instructional Decals for tractor and implement to prevent misuse, abuse, and accidents. Practice before operating in a confined area or near passersby. ● Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children</p> <p>2. Allow no children on or near folding mower or tractor. Allow no riders on tractor or implement. Falling off may cause serious injury or death from being run over by tractor or mower or contact with rotating blades.</p> <p>3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seat belt securely fastened to prevent injury and possible death from falling off or tractor overturn. ● Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, & Ear Plugs are recommended.</p> <p>4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain area is clear before lowering or folding</p> <p>5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding mowers. Put Booms securely in Transport Rest. ● Folding and Boom Mowers have raised center of gravity. Slow down when turning and on hillsides.</p> <p>6. Make certain that SMV sign, warning lights, and reflectors are clearly visible. Follow local traffic codes.</p> <p>7. Never operate with Cutting Head or Folding Section raised if passersby, bystanders, or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Guards or mower structure.</p> <p>8. Before dismounting, secure implement in transport position or lower to ground. ● Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent crushing by entanglement in rotating parts which could cause injury or death. ● Never mount or dismount a moving vehicle. Crushing from rollover may cause serious injury or death.</p>			
<p>5. TRANSPORT SAFELY, LOCK UP.</p> 	<p>6. USE SMV, LIGHTS, & REFLECTORS.</p> 	<p>7. DO NOT OPERATE WITH CUTTER OR WING RAISED.</p> 	<p>8. DO NOT MOUNT OR DISMOUNT WHILE MOVING</p> 

WARRANTY INFORMATION:

Read and understand the complete Warranty Statement found in this Manual. The use of "will-fit" parts will void your warranty and can cause catastrophic failure with possible injury or death.

Table of Contents

SAFETY SECTION	1-1
General Safety Instructions and Practices	1-2
Decal Location	1-11
Decal Description	1-13
Federal Laws and Regulations	1-19
INTRODUCTION SECTION	2-1
Attention Owner/Operator	2-4
ASSEMBLY SECTION	3-1
DEALER SET-UP INSTRUCTIONS	3-2
A-FRAME ATTACHMENT	3-2
CASTER WHEEL ATTACHMENTS	3-3
DRIVELINE ATTACHMENT - To Gearbox	3-4
FRONT ROLLER (Optional)	3-4
OPERATION SECTION	4-1
Standard Equipment and Specifications	4-3
OPERATOR REQUIREMENTS	4-4
TRACTOR REQUIREMENTS	4-5
ROPS and SEAT BELT	4-5
Tractor Safety Devices	4-5
Tractor Horsepower	4-5
Tractor 3-Point Hitch	4-6
Front End Weight	4-6
Power Take Off (PTO)	4-6
GETTING ON AND OFF THE TRACTOR	4-7
Boarding the Tractor	4-7
Dismounting the Tractor	4-8
STARTING THE TRACTOR	4-8
CONNECTING THE MOWER TO THE TRACTOR	4-9
Connecting the Mower	4-9
SETTING THE MOWER	4-10
Setting Mowing Height-Lift Type	4-10
DRIVELINE ATTACHMENT	4-11
Driveline Length Modification	4-12
PRE-OPERATION INSPECTION AND SERVICE	4-13
Tractor Pre-Operation Inspection/Service	4-14
Mower Pre-Operation Inspection/Service	4-15
Cutting Component Inspection	4-17
DRIVING THE TRACTOR AND IMPLEMENT	4-18
Starting the Tractor	4-19
Brake and Differential Lock Setting	4-19
Raising the Mower	4-20
Driving the Tractor and Mower	4-21
Crossing Ditches and Steep Inclines	4-22

OPERATING THE TRACTOR AND IMPLEMENT	4-23
Foreign Debris Hazards	4-24
Bystanders/Passersby Precautions	4-24
Engaging the Power Take Off (PTO)	4-25
PTO RPM and Ground Speed	4-26
Operating the Mower	4-26
Shutting Down the Implement	4-29
DISCONNECTING THE MOWER FROM THE TRACTOR	4-30
MOWER STORAGE	4-32
TRANSPORTING THE TRACTOR AND IMPLEMENT	4-32
Transporting on Public Roadways	4-34
Hauling the Tractor and Implement	4-36
TROUBLE SHOOTING GUIDE	4-37

MAINTENANCE SECTION 5-1

Lubrication	5-2
GEARBOX	5-3
GAUGE WHEEL ASSEMBLIES	5-3
DRIVELINE LUBRICATION	5-4
BLADE SPINDLE LUBRICATION	5-4
BLADE SERVICING	5-5
BLADE SHARPENING	5-6
BLADE REMOVAL	5-6
BLADE INSTALLATION	5-6
BELT ADJUSTMENT PROCEDURE Figure Mnt-R-0194.	5-7
BELT REMOVAL/INSTALLATION Figure Mnt-R-0194	5-7
STORAGE	5-8
PROPER TORQUE FOR FASTENERS	5-8
BLADE SPINDLE INSTRUCTIONS - Figure Mnt-R-0195	5-9

SAFETY SECTION



Thank you very much
for your reading.
Please click here
to get more information.