





# Bobcat®

---

## Operation & Maintenance Manual Hydra-Tilt™

---

(Hydra-Tilt) S/N 857800101 & Above

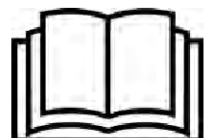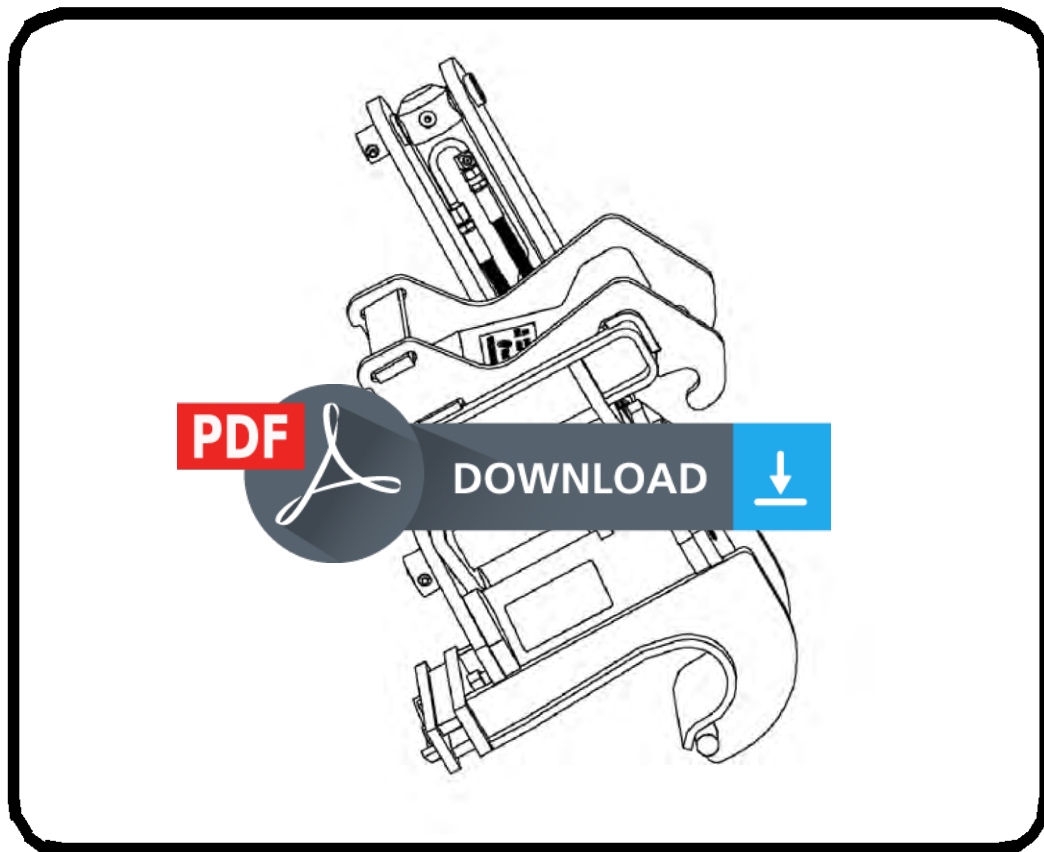



# CONTENTS

FOREWORD .....	3
SAFETY AND TRAINING RESOURCES .....	11
OPERATING INSTRUCTIONS .....	19
PREVENTIVE MAINTENANCE .....	55
MACHINE SIGN TRANSLATIONS .....	73
SPECIFICATIONS .....	77
WARRANTY .....	87
ALPHABETICAL INDEX .....	91

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number \_\_\_\_\_

NOTES:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Benelux SA  
Drève Richelle 167  
B-1410 Waterloo  
BELGIUM



**Bobcat®**

# FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat attachment.

BOBCAT COMPANY IS ISO 9001 CERTIFIED .....	5
SERIAL NUMBER LOCATION .....	7
Attachment Serial Number .....	7
DELIVERY REPORT .....	7
ATTACHMENT IDENTIFICATION .....	8
FEATURES AND ACCESSORIES .....	9
Falling Object Guard Structure (FOGS) For Excavators .....	9
Special Applications Kit For Excavators .....	9



Thank you very much  
for your reading.  
Please click here  
to get more information.