



Bobcat®

EN



Operation & Maintenance Manual Man Platform

(Man Platform 1x1M 220KG, QT) S/N B38G00101 & Above

(Man Platform, Rot. 2.2M 300KG, QT) S/N B3BR00101 & Above

(Man Platform, Rot. Exp. 1x4M 300KG, QT) S/N B3BP00101 & Above

(Man Platform, Rot. Exp. 1x4M 800KG, QT) S/N B35R00101 & Above

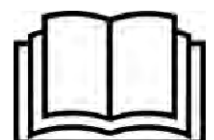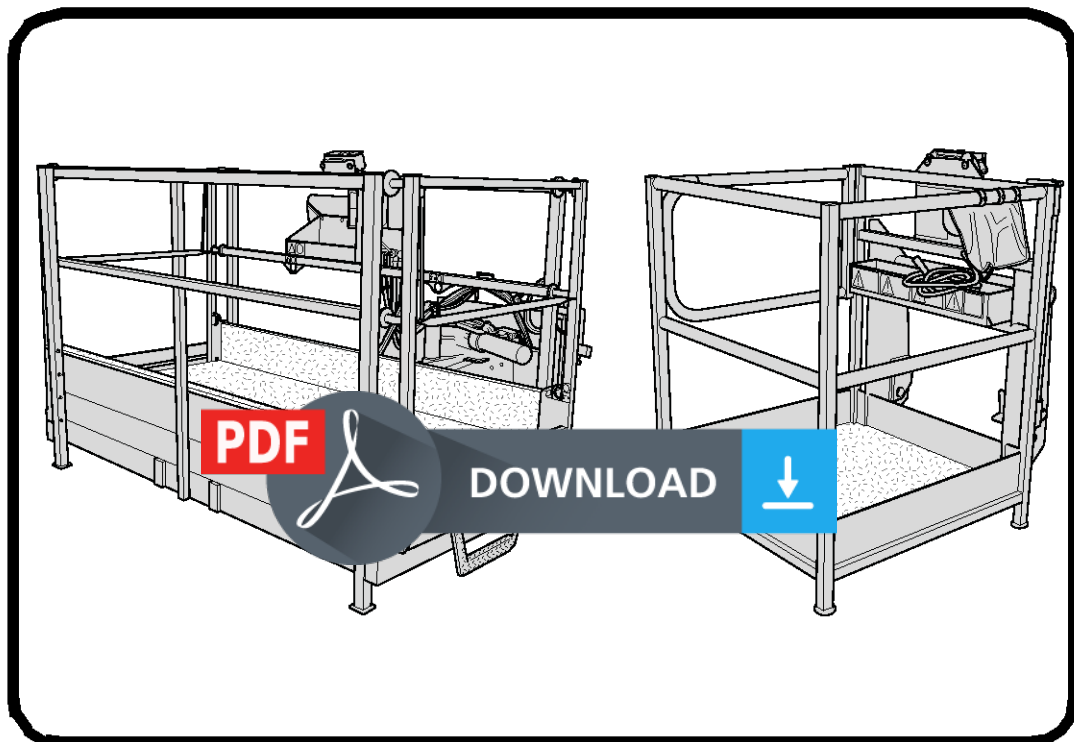

OPERATOR SAFETY WARNINGS

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

CORRECT

P-90216

! Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

! Never operate without instructions. See machine signs (decals), and Operation & Maintenance Manual.

CORRECT

NA5465

! Always fasten seat belt snugly.
! Always keep your feet and arms inside the cab.

CORRECT

EM10415

! Never use telescopic handler without operator cab with ROPS and FOPS approval.

CORRECT

EM6514

! Never use the machine as a working platform or an elevator unless it is equipped with a Bobcat - approved man platform.

WRONG

EM6515

! Do not use machine in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.

WRONG

EM6516

! Check for overhead or underground power lines before operating.
! Keep boom, attachment, and load a minimum of 5 m (16 ft) away from electrical power lines beyond 50kV.

WRONG

EM6517

! Always carry buckets or attachments as low as possible.
! Do not travel or turn with boom up.
! Load, unload, and turn on flat level ground.

WRONG

EM6518

! Never exceed Rated Load Capacity.
! Read and understand the Load Capacity Charts.

WRONG

EM6519

! Never exit the machine with engine running or with boom raised.
! To park, put transmission in neutral, engage parking brake, and put attachment flat on the ground.

WRONG

EM6520

! Never modify equipment.
! Use only attachments approved by Bobcat Company for this model telescopic handler.

SAFETY EQUIPMENT

The Bobcat® telescopic handler must be equipped with safety items necessary for each job. Ask your Bobcat dealer for information on the availability and safe use of attachments and accessories.

1. **SEAT BELT:** Check belt fasteners and check for damaged webbing or buckle.
2. **OPERATOR CAB (ROPS and FOPS):** It must be on the telescopic handler with all fasteners tight. Never operate without right window.
3. **OPERATOR & MAINTENANCE MANUAL:** Machine Operation & Maintenance manual must be in the cab. Man platform Operation & Maintenance manual must be in the man platform.
4. **OPERATOR'S HANDBOOK:** Must be in the cab
5. **SAFETY SIGNS (DECALS):** Replace if damaged.
6. **SAFETY TREADS:** Replace if damaged.
7. **GRAB HANDLES:** Replace if damaged.
8. **BOOM STOP:** Replace if damaged.
9. **PARKING BRAKE:** Check for function.
10. **WINDOWS AND MIRRORS:** Clean and check for broken glass or mirrors. Replace if damaged.



Bobcat®

CONTENTS

FOREWORD 5

SAFETY AND TRAINING RESOURCES 17

OPERATING INSTRUCTIONS 33

PREVENTIVE MAINTENANCE 87

SYSTEM SETUP AND ANALYSIS 101

SPECIFICATIONS 107

WARRANTY 145

ALPHABETICAL INDEX 149

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS: _____

PHONE: _____



Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Bobcat EMEA s.r.o
U Kodetky 1978
26312 Dobris
CZECH REPUBLIC



Thank you very much
for your reading.
Please click here
to get more information.