




# Bobcat®

---

## Operation & Maintenance Manual Mini Boring Drive

---

S/N 006000101 & Above

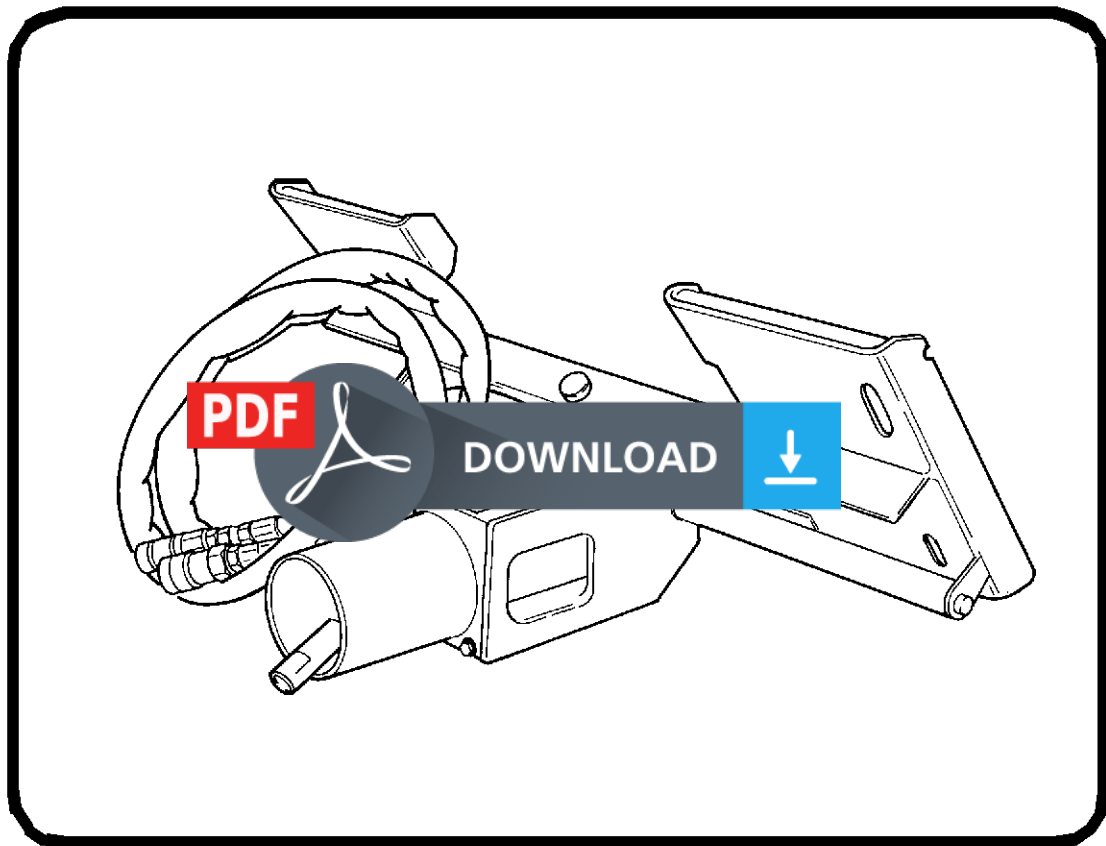



# CONTENTS

CONTENTS .....	1
FOREWORD .....	3
SAFETY AND TRAINING RESOURCES .....	9
OPERATING INSTRUCTIONS .....	15
PREVENTIVE MAINTENANCE .....	39
SPECIFICATIONS .....	53
WARRANTY .....	59
ALPHABETICAL INDEX .....	63

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat mini boring drive in the spaces below. Always use these numbers when referring to your Bobcat mini boring drive.

Mini Boring Drive Serial Number \_\_\_\_\_  
\_\_\_\_\_

NOTES:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128

Bobcat Company Europe  
Drève Richelle 167  
B-1410 WATERLOO  
Belgium



**Bobcat®**

## FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat mini boring drive. **READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT MINI BORING DRIVE.** If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your mini boring drive.

BOBCAT COMPANY IS ISO 9001 CERTIFIED .....	5
ATTACHMENT DELIVERY REPORT .....	7
BOBCAT MINI BORING DRIVE IDENTIFICATION .....	8



Thank you very much  
for your reading.  
Please click here  
to get more information.