
TN55, TN65, TN70, TN75 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	3
SECTION 21 - TRANSMISSIONS	3
SECTION 23 - DRIVE LINES	5
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	6
SECTION 27 - REAR MECHANICAL TRANSMISSION	6
SECTION 31 - MECHANICAL POWER TAKE-OFF	7
SECTION 33 - BRAKING SYSTEM	8
SECTION 35 - HYDRAULIC SYSTEM	8
SECTION 41 - STEERING	10
SECTION 44 - AXLES AND WHEELS	11
SECTION 55 - ELECTRICAL SYSTEM	11
SECTION 90 - PLATFORM, CAB, BODYWORK	15



The following pages are available for download from each section and chapter of the TN55, TN65, TN70, TN75 Repair manual. Complete Repair part # 87034092.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book. The sections listed above are the sections utilized for the TN55, TN65, TN70, TN75 Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87034093

Chapter 1 - General Instructions

CONTENTS

Section	Description	Page
10 000	General Instructions	1

SECTION 10 - ENGINE

BOOK 1 - 87034093

Chapter 1 - Engine

CONTENTS

Section	Description	Page
10 000	General specifications	2
	Data	5
	Torque settings	22
	Tools	23
	Cross-sectional views	25
	Lubrication and cooling system diagrams	27
	Troubleshooting	29
10 001 10	Engine, Removal-Installation	33
10 001 30	Compression test	35
10 001 54	Engine, Removal-Assembly	36
10 414 10	Coolant Pump and Alternator Drive Belt - Tension adjustment	72
10 101 53	Valve guides, Replacement	73
10 101 60	Injector holder casing, Replacement	76
10 102 70	Front engine oil seal, Removal-Installation	78
10 106 12	Valve clearance adjustment	80
10 126 10	Fuel tank, Removal-Installation	82
10 218 30	Engine injectors, Removal-Installation	84
10 246 14	Bosch injection pump, Removal-Installation, timing and air bleed check	86
10 254 44	Exhaust pipe, Removal-Installation	92
10 402 11	Coolant pump, Removal-Installation, with radiator removed	93
10 402 28	Coolant pump, Overhaul	94
10 402 30	Thermostat, Removal-Installation	95
10 406 10	Radiator, Removal-Installation	97

SECTION 18 - CLUTCH

BOOK 1 - 87034093

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
18 000	General specifications	1
	Torque settings	2
	Tools	2
	Cross-sectional views	3
	Troubleshooting	5
18 110 10	Clutch - Removal-Installation	6
18 110 30	11"/11" Dual disk clutch - Test bench overhaul	11
18 110 30	11" Single disk clutch (Version with Power-Shuttle) - Test bench overhaul	15
18 100 40	Clutch adjustments	19

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87034094

Chapter 1 - Mechanical Transmission (8 x 8), (16 + 16) Synchro-Command, and 8 x 8 Non-Synchronized Transmissions

CONTENTS

Section	Description	Page
21 000	Main data	1
	Torque settings	2
	Special Tools	4
	Cross-sectional views	8
	Description and operation	14
	Troubleshooting	14
21 118 10	Rear Transmission/Gearbox, Removal-Installation	
21 118 12	16
21 118 85	Rear Transmission/Gearbox, Disassembly-Assembly	23
	Rear Transmission/Gearbox, driving and driven shafts clearance adjustments	31
21 130 10	Gearbox Control Lever, Removal-Installation	33
21 130 11	Range Gear Control Lever, Removal-Installation	34

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87034094

Chapter 2 - Power Shuttle Transmission (8 + 8 and 16 + 16 versions)

CONTENTS

Section	Description	Page
21 000	Main data	2
	Torque values	4
	Special tools	5
	Cross-sectional views	10
	Description and operation	15
21 118 85	Transmission-Gearbox, Disassembly-Assembly	16
21 134 46	Power shuttle control valve, Disassembly-Assembly	18
21 134 70	A + B Clutch valve solenoids, Removal-Installation	21
21 134 70	Dump valve solenoid, Removal-Installation	22
21 154 34		
21 154 60	Clutch casing, Disassembly-Assembly	23
	Description of systems (ECM and CDU)	28
	Automatic self-diagnosis (ECM)	29
	ECM First start up	30
	Diagnosis during operation	31
	Calibration and diagnostic unit (CDU)	32
	Power shuttle fault code priority	33
	Fault codes indication	36
	Calibration and diagnostics unit use	37
	HH menu access	38
	H1 - Clutches A and B calibration error codes	40
	H2 - Clutches A and B calibration values display	45
	H3 - System configuration	46
	H4 - Power shuttle hardware and software revision levels	48
	H5 - Control switch diagnosis	49
	H6 - Clutch A fill time	54
	H7 - Clutch B fill time	56
	H8 - Erasure of data stored in NVM	58
	H9 - Voltmeter functions	59
	HA - Clutch pedal potentiometer and status switch	63
	Clutch pedal potentiometer replacement	65

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87034094

Chapter 2 - Power Shuttle Transmission (8 + 8 and 16 + 16 versions) (Continued)

CONTENTS

Section	Description	Page
	HC - Transmission oil temperature sender	66
	HD - Hi/Lo Synchronizer operation (not used in standard)	67
	HE - Gear change adjustments	69
	HF - Stored error codes	70
	Troubleshooting fault codes	72
	Power Shuttle (8 x 8 and 16 x 16) electronic control unit input/output wiring diagram . .	276

SECTION 23 - DRIVE LINES

BOOK 3 - 87034095

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
23 000	Main data	1
	Torque settings	2
	Cross-sectional views	3
	Description, operation and hydraulic diagrams	7
	Troubleshooting	7
23 101 26	Transmission shafts and guard, Disassembly - Assembly	8
23 101 40	Drive gear housing assembly, Removal - Installation	9
23 202 50	Drive gear housing assembly, Removal - Installation	9
23 101 42	Drive gear housing assembly removed, Disassembly - Assembly	11
23 202 52	Drive gear housing assembly removed, Disassembly - Assembly	13



Thank you very much
for your reading.
Please click here
to get more information.