



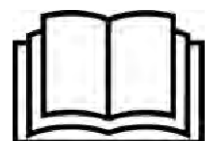

Bobcat®

Operation & Maintenance Manual VP12 Vibratory Plow

(PLOW VIB VP12) S/N 988600101 & Above

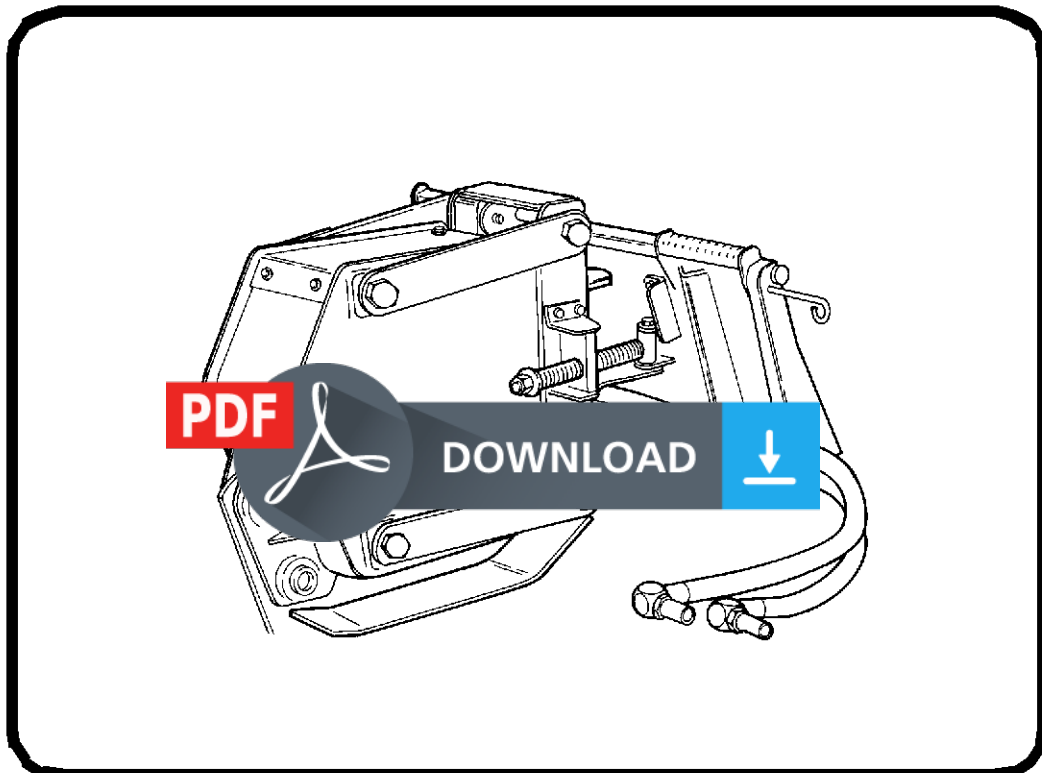

CONTENTS

FOREWORD	3
SAFETY AND TRAINING RESOURCES	9
OPERATING INSTRUCTIONS	17
PREVENTIVE MAINTENANCE	39
SPECIFICATIONS	47
WARRANTY	51
ALPHABETICAL INDEX	55

REFERENCE INFORMATION

Write the correct information for YOUR attachment in the spaces below. Always use these numbers when referring to your attachment.

Attachment Serial Number

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat attachment.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Serial Number Location	7
DELIVERY REPORT	7
IDENTIFICATION AND MACHINE SIGNS (DECALS)	8



Thank you very much
for your reading.
Please click here
to get more information.